

- Manuals.plus /
- › Riddost /
- › Riddost Safe Box 2.5 Cubic Instruction Manual

Riddost 2.5 Cubic

Riddost Safe Box 2.5 Cubic Instruction Manual

Model: 2.5 Cubic | Brand: Riddost

1. INTRODUCTION

Thank you for choosing the Riddost Safe Box 2.5 Cubic. This instruction manual provides essential information for the proper setup, operation, and maintenance of your new safe. Please read this manual thoroughly before using the product to ensure optimal security and functionality. Keep this manual for future reference.



Figure 1: Riddost Safe Box 2.5 Cubic with included fireproof document bag.

2. PRODUCT FEATURES

- **Durable Construction:** Made from alloy steel and metal for enhanced security.
- **Fireproof & Waterproof:** Designed to protect contents from fire and water damage.
- **Smart Alarm System:** Activates a warning beep after three incorrect entries or significant vibration.
- **Dual Locking Mechanism:** Features an electronic keypad and an emergency key for access.
- **Removable Shelf:** Allows for flexible storage space organization.
- **Mounting Options:** Can be floor-mounted or wall-mounted for added security.



Figure 2: Electronic password panel with dual unlocking methods and low battery indicator.

MULTIPLE PROTECTION

Multiple structure and multiple protection, safe without worry



Figure 3: Illustration of the safe's multi-layered protection against fire, rust, acid, and impact.

3. SETUP

3.1 Unpacking and Initial Inspection

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Ensure all accessories, including the instruction manual, emergency keys, and mounting hardware, are present.

3.2 Battery Installation

The electronic keypad requires batteries to operate. Open the safe using the emergency key (refer to Section 4.1). Locate the battery compartment on the inside of the door. Insert the required batteries (typically AA, not included) according to the polarity markings. Close the battery compartment cover.

Your browser does not support the video tag.

Video 1: Demonstrates battery installation and initial setup of the safe's electronic lock. This video shows how to access the battery compartment and insert batteries, which is crucial for the electronic keypad's functionality.

3.3 Mounting the Safe

For enhanced security, it is recommended to mount the safe to a floor or wall. Use the provided mounting hardware. Pre-drilled holes are located on the back and bottom of the safe. Choose a secure location and follow these steps:

1. Mark the desired drilling points on the wall or floor using the safe's pre-drilled holes as a template.
2. Drill pilot holes at the marked locations.
3. Align the safe with the drilled holes and secure it using the provided bolts and anchors.
4. Ensure the safe is firmly attached and cannot be easily removed.



Figure 4: Wall mounting instructions for the safe.

4. OPERATING INSTRUCTIONS

4.1 Opening the Safe with Emergency Key

In case of forgotten password or dead batteries, the safe can be opened using the emergency key. Remove the cover plate on the electronic panel to reveal the emergency keyhole. Insert the emergency key and turn it while simultaneously turning the knob to open the door.

ALL STEEL IS SAFE AND RELIABLE

Two kinds of lock, to avoid the emergency when the power is out



EMERGENCY UNLOCK WAY



emergency keystone + knob
for when the battery suddenly runs out or
forgets the password

GENERAL UNLOCK WAY



passwordstep+ knob
Universal unlocking method, more private

Figure 5: Emergency key and electronic password unlocking methods.

4.2 Setting/Changing the Master Code

The master code allows you to open the safe and reset personal codes. To set or change the master code:

1. With the safe door open, press the '0' button twice on the keypad.
2. Press the red reset button located on the inside of the door (refer to Figure 6). You will hear a double beep.
3. Enter your new master code (4-8 digits) on the keypad.
4. Press the '#' button to confirm. You will hear another double beep.



Figure 6: Location of the reset button.

4.3 Setting/Changing a Personal Code

A personal code can be set for daily use. To set or change a personal code:

1. With the safe door open, press the red reset button once. You will hear a double beep.
2. Enter your new personal code (4-8 digits) on the keypad.
3. Press the '#' button to confirm. You will hear another double beep.

4.4 Locking the Safe

To lock the safe, simply close the door and turn the knob clockwise until it is securely locked. The electronic system will automatically engage.

Your browser does not support the video tag.

Video 2: Provides a detailed demonstration of how to open the safe using the emergency key and how to set and reset both master and personal codes. It also shows the process of locking the safe.

5. MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator lights up to avoid being locked out. Always use new, high-quality batteries.
- **Key Storage:** Store emergency keys in a secure location away from the safe and away from common hiding spots.

6. TROUBLESHOOTING

- **Safe does not open with code:**
 - Ensure batteries are not depleted. Replace if necessary.
 - Verify the code entered is correct. Try both master and personal codes.
 - If the code is forgotten, use the emergency key to open the safe and reset the code.
- **Door is hard to open/close:**
 - Check for any obstructions around the door frame or hinges.
 - Ensure the safe is on a level surface.
 - Apply a small amount of lubricant to the hinges if they are stiff.

- **Alarm sounds unexpectedly:**
 - The alarm activates after three incorrect code entries or significant vibration.
 - Enter the correct code to silence the alarm.
 - Ensure the safe is placed in a stable location to prevent accidental vibration.

7. SPECIFICATIONS

Feature	Detail
Item Weight	35 pounds
Product Dimensions	11.8"D x 12.2"W x 14.57"H
Size	2.5 Cubic Feet
Material	Alloy Steel, Metal
Mounting Type	Floor Mount, Wall Mount
Special Feature	Alarm System, Fireproof
Water Resistance Level	Waterproof

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Riddost website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Riddost. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B5CL84L9>

More documents and user manuals: <https://manuals.plus/>