

[Manuals.plus](#) /

› [MYHGRC](#) /

› MYHGRC Universal Remote Control RC-G009 User Manual

MYHGRC RC-G009

MYHGRC Universal Remote Control RC-G009 User Manual

Model: RC-G009

INTRODUCTION

Thank you for purchasing the MYHGRC Universal Remote Control. This remote is designed to manage thousands of audio/video devices, including TVs, Blu-ray/DVD players, streaming media players, soundbars, cable receivers, and more. To use this remote, you will need to program it for your specific devices. This manual provides detailed instructions for two programming methods: Direct Code Entry and Automatic Code Search.





Front view of the MYHGRC Universal Remote Control RC-G009, showcasing its button layout.

SETUP AND PROGRAMMING

Battery Installation

The MYHGRC Universal Remote Control requires two AAA batteries (not included). Follow these steps to install them:

1. Remove the battery cover located on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the battery compartment.
3. Replace the battery cover until it clicks securely into place.



luce ad induzione



2 batterie AAA

Back view of the remote control, highlighting the battery compartment and the infrared emitter at the top.



Visual guide for installing batteries: 1. Remove cover. 2. Observe polarity. 3. Insert batteries. 4. Replace cover.

Programming Your Remote Control

There are two methods to program your universal remote control:

- **Direct Code Entry:** This is the recommended method for its simplicity and speed.
- **Automatic Code Search:** This method scans through all codes stored in the remote to find a compatible code for your device.

Method 1: Direct Code Entry (Recommended)

This method involves entering a 4-digit code directly from the included code list for your specific device brand.

1. Locate the code list provided with your remote. Find the section for the device type you wish to control (e.g., TV, CBL, DVD, AUX). Identify your device's brand and list all corresponding remote codes.
2. Press and hold the "SETUP" button on the remote until the red indicator light illuminates. Release the "SETUP" button. The red light will remain on. (Note: The red light is a small indicator at the top of the remote or the power button itself).

3. Press and release the device button (e.g., TV, CBL, DVD, AUX) on the remote corresponding to the type of device you want to control. The red light will flash once and then remain on. (Note: Any device button can be programmed to control any device. For example, you can use the CBL button to control a satellite receiver, digital converter, streaming media player, or any device category in the code list).
4. Use the number keys on the remote to enter the first 4-digit code you found in the code list for your device. The red light will turn off after the fourth digit is entered.
5. Point the remote at the device. Test the buttons on the remote to see if the device responds as expected. If the buttons do not operate the device, return to step 2 and try the next code you found for that device.
6. Repeat steps 1-5 for each device you wish to control.

Programming Notes:

- Some codes may only operate certain functions of your device. There might be another code in the list that controls more functions. Test other codes for full functionality.
- If you cannot find a working code or if your device brand is not listed, use the Automatic Code Search method described next.
- For combination devices (e.g., TV/DVD combo), you may need to enter a separate code for each component.
- It is recommended to write down the codes used for future reference.

Method 2: Automatic Code Search

The Automatic Code Search process allows the remote to search through its stored codes to find one for your device. Read all steps before starting.

1. Manually turn on the device you wish to control. (Note: This method cannot be used for devices without an on/off capability. Use Direct Code Entry in such cases).
2. Press and hold the "SETUP" button on the remote until the red indicator light illuminates. Release the "SETUP" button. The red light will remain on. (Note: The red light is a small indicator at the top of the remote or the power button itself).
3. Press and release the device button (e.g., TV, CBL, DVD, AUX) on the remote corresponding to the type of device you want to control. The red light will flash once and then remain on.
4. Point the remote at the device, then press and release the "Power" button on the remote. The remote will send 10 different codes to your device. The red light will flash once for each code and remain on after all 10 codes are sent.
 - Is the device off? If yes, proceed to step 5.
 - If no, repeat step 4 to test the next 10 codes.
5. Manually turn the device back on.
6. Point the remote at the device, then press and release the "VOL +" button. The remote will resend the first code from the batch of 10 codes tested in step 4. The red light will flash once and remain on.
 - Is the device off? If yes, you have found a code for your device. Press and release the same device button you pressed in step 3. This will save the code to the remote. Proceed to step 7.
 - If no, continue to press and release the "VOL +" button until the device turns off, testing the remaining 9 codes from the batch. Ensure you wait approximately 3 seconds after each "VOL +" press to allow the device to respond. Once the device turns off, you have found a code. Press and release the same device button you pressed in step 3. This will save the code to the remote. Proceed to step 7.
 - Note: The "VOL -" button can be used to go back through each batch of 10 codes. The red light will flash twice after testing the first or last code in each batch of 10.
7. Use the remote to turn the device back on. Test the buttons on the remote to see if the device responds as expected. If the buttons do not operate the device, return to step 2 and repeat this process to search for a better

8. Repeat this process for each device you wish to control.

Some combination devices (e.g., TV/VCR, TV/DVD, DVD/VCR) require setting up two different device buttons to control both parts of the combined unit. For example, if you have a TV/DVD combo, you may need to set a code under the TV button to control the TV functions and a separate code under the DVD button to control the DVD functions.

Familiarize yourself with the layout and functions of the buttons on your MYHGRC Universal Remote Control:



Detailed diagram showing the numbered buttons and their corresponding functions on the remote control.

No.	Button	Function
-----	--------	----------

No.	Button	Function
1	Power	Turns devices on and off.
2	Input	Selects video inputs.
3	TV, CBL, DVD, AUX	Selects the device to control.
4	Playback Controls	Record, Play, Stop, Rewind, Fast Forward, Pause.
5	Open/Close	Opens/closes disc trays for DVD/Blu-ray players, or accesses function lists for cable/satellite receivers.
6	Setup	Used for remote programming.
7	ABCD Buttons	Accesses additional functions for DVRs, cable, and satellite receivers.
8	Home/Guide	Provides easy access to home screens on streaming devices or guide on cable/satellite receivers.
9	Menu	Displays the on-screen menu.
10	OK	Selects menu items for the controlled device.
11	Exit	Exits on-screen menus.
12	Info	Displays on-screen program or content information.
13	Volume Up/Down	Adjusts the volume level.
14	Mute	Mutes the sound.
15	Channel Up/Down	Changes the channel.
16	Previous Channel	Returns to the previously selected channel.
17	Number Keys (0-9)	Enters numbers for direct channel selection.
18	Dot (•)	Used to select digital channels, e.g., 4.1.
19	Access (Return/Back)	Returns to previous screen or function.
20	Enter	Confirms selections; some devices require 'Enter' after channel number.

PRODUCT SPECIFICATIONS

- **Brand:** MYHGRC
- **Model Number:** RC-G009
- **Connectivity Technology:** Infrared
- **Compatible Devices:** DVD/Blu-ray Player, Television, VCR, Cable Box, Satellite Receiver, Streaming Media Player
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** 50 Meters (approx. 164 feet)



Dimensions of the remote control: approximately 17.5 cm (6.88 in) length, 2.2 cm (0.86 in) thickness, and 4.5 cm (1.77 in) width.

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Device not responding after programming:** The entered code may be incorrect or only partially compatible. Try other codes from the code list for your device brand using the Direct Code Entry method. If multiple codes are available, test them all.
- **Limited functionality after programming:** Some codes may only control basic functions. Try other codes for your device using either programming method to find one that offers more comprehensive control.
- **Automatic Code Search not working for a device:** The Automatic Code Search method requires the device to have an on/off function. If your device lacks this, use the Direct Code Entry method.
- **Red indicator light not illuminating during setup:** Ensure the "SETUP" button is pressed and held long enough until

the light appears. If it still doesn't light up, check batteries.

MAINTENANCE

To ensure the longevity and optimal performance of your universal remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the indicator light fails to illuminate properly. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops and Impacts:** Protect the remote from physical damage by avoiding drops and impacts.

SUPPORT AND WARRANTY

For further assistance or if you encounter issues not covered in this manual, please refer to the manufacturer's official support channels. Information regarding product warranty, if applicable, can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

