

**Biolomix TB23M**

# Biolomix 500W Portable Personal Blender Mixer TB23M User Manual

Model: TB23M

## INTRODUCTION

Thank you for purchasing the Biolomix 500W Portable Personal Blender Mixer TB23M. This versatile appliance combines the functions of a personal blender, food chopper, and grinder, offering convenience for various food preparation tasks. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Keep hands and utensils out of the container while blending or chopping to prevent personal injury and damage to the appliance.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Ensure all components are correctly assembled and securely locked before operating the appliance. The motor unit features a double safety lock mechanism; it will not operate unless properly installed.
- Do not operate the appliance with damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Avoid contact with moving parts. Blades are sharp; handle with care.
- Do not process hot liquids in the blender bottle or chopper bowl as pressure buildup may cause injury.
- The appliance is equipped with overheat protection. If the motor stops due to overheating, allow it to cool down for at least 30 minutes before resuming operation.

## PRODUCT COMPONENTS

The Biolomix TB23M is a 3-in-1 electric food processor. It includes the following main components:

- **Motor Unit:** The main power unit (500W) with dual drive system.
- **Blender Bottle (600ml):** For personal blending, juicing, and smoothies. Includes a travel lid.
- **Chopper Bowl (800ml):** Stainless steel bowl for chopping and pureeing.
- **Chopper Blade Assembly:** 4-level stainless steel blades for the chopper bowl.
- **Grinder Cup (100ml):** For grinding coffee beans, spices, and nuts.
- **Grinder Blade Assembly:** Specific blade for the grinder cup.



Image: Key features of the Biolomix TB23M, showing the 304 stainless steel blade, 600ml travel bottle, and the 2-point safety lock mechanism.

## SETUP INSTRUCTIONS

Before first use, wash all detachable parts (blender bottle, chopper bowl, grinder cup, lids, and blade assemblies) in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth.

## General Assembly Principle:

The motor unit is interchangeable between the blender bottle, chopper bowl, and grinder cup. Always ensure the motor unit is securely locked onto the chosen container before operation.

# Edelstahl 4 Wellenklingen Hochleistung



Image: The Biolomix TB23M motor unit with its dual drive system, demonstrating how it attaches to the blender bottle for juicing and the chopper bowl for mincing meat.

## Assembling the Blender:

1. Place the blender blade assembly onto the open end of the 600ml blender bottle.
2. Add your desired ingredients into the bottle. Do not overfill beyond the MAX line.
3. Screw the motor unit onto the blender blade assembly, ensuring it is tightly secured.
4. Invert the assembled bottle and motor unit, then plug the appliance into a power outlet.

## Assembling the Chopper:

1. Place the chopper blade assembly onto the central pin inside the 800ml stainless steel chopper bowl.
2. Add your ingredients into the chopper bowl.

3. Place the chopper lid onto the bowl, aligning it correctly.
4. Place the motor unit onto the chopper lid. Turn the motor unit clockwise to lock it securely in place. You will feel it click into position.
5. Plug the appliance into a power outlet.

## Assembling the Grinder:

1. Place the grinder blade assembly into the 100ml grinder cup.
2. Add your ingredients (e.g., coffee beans, spices) into the grinder cup.
3. Screw the motor unit onto the grinder cup, ensuring it is tightly secured.
4. Invert the assembled cup and motor unit, then plug the appliance into a power outlet.

## OPERATING INSTRUCTIONS

---

The Biolomix TB23M features a powerful 500W motor and two-speed settings (I-II) for efficient processing.

### Using the Personal Blender:

1. Ensure the blender is assembled as described in the Setup section.
2. Press and hold the power button on the motor unit to start blending. Release to stop.
3. Blend in short pulses for best results and to avoid over-processing.
4. Once blending is complete, unplug the appliance.
5. Unscrew the motor unit and blade assembly from the bottle. Attach the travel lid to the bottle if taking your drink on the go.

### Using the Food Chopper:

1. Ensure the chopper is assembled as described in the Setup section.
2. Select speed I for softer ingredients or coarse chopping, and speed II for harder ingredients or finer chopping.
3. Press and hold the selected speed button to start chopping. Release to stop.
4. Chop in short pulses (6-10 seconds) to achieve desired consistency and prevent overheating.
5. Once chopping is complete, unplug the appliance.
6. Carefully remove the motor unit, then the lid, and finally the blade assembly before emptying the bowl.



#### 304 rostfreie Klinge

Hohe Härte und  
hohe Festigkeit



#### 600 ml Reiseflasche

Einfach überall  
hin mitnehmen



#### 2-Punkt-Sicherheitsschloss

Drehen Sie den Behälter für eine  
sichere Mischung an Ort und Stelle



Image: The high-performance 4-level stainless steel blades of the Biolomix TB23M, demonstrating its efficiency in chopping ingredients like garlic, chili, and meat.

### Using the Grinder:

1. Ensure the grinder is assembled as described in the Setup section.
2. Press and hold the power button on the motor unit to start grinding. Release to stop.
3. Grind in short pulses until the desired fineness is achieved.
4. Once grinding is complete, unplug the appliance.
5. Unscrew the motor unit from the grinder cup before emptying the contents.



Image: The Biolomix TB23M grinder cup demonstrating its capability to grind various dry ingredients such as coffee beans, red beans, green beans, and spices.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your Biolomix appliance.

### Cleaning the Motor Unit:

- Always unplug the motor unit before cleaning.
- Wipe the motor unit with a soft, damp cloth. Do not immerse it in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

### Cleaning Detachable Parts:

- The blender bottle, chopper bowl, grinder cup, lids, and blade assemblies are dishwasher safe (top rack only) or can be washed by hand.
- When hand washing, use warm soapy water and a non-abrasive sponge.
- Exercise extreme caution when cleaning the blades, as they are very sharp. Use a brush to remove food residue if necessary.

- Rinse all parts thoroughly and dry immediately to prevent water spots and ensure hygiene.

## Storage:

Store the appliance and its accessories in a clean, dry place, out of reach of children.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Safety lock not engaged; Overheat protection activated.	Ensure power cord is securely plugged in. Check that the motor unit is correctly assembled and locked onto the container (turn clockwise until it clicks). If the motor unit is hot, allow it to cool for 30 minutes.
Ingredients are not blending/chopping properly.	Too much liquid/not enough liquid; Overfilled container; Ingredients are too large.	Adjust liquid content. Do not exceed the MAX fill line. Cut ingredients into smaller pieces. Use pulse function to dislodge ingredients.
Motor smells or makes unusual noise.	Overloading; Prolonged operation.	Reduce the amount of ingredients. Operate in short pulses. Allow the motor to cool down. If the problem persists, discontinue use and contact customer support.
Leakage from container.	Lid/blade assembly not properly secured; Damaged seal.	Ensure all parts are tightly assembled and sealed. Check rubber gaskets for damage. Do not overfill.

## TECHNICAL SPECIFICATIONS

- **Model:** TB23M
- **Power:** 500 Watts
- **Voltage:** 220 Volts
- **Number of Speeds:** 2
- **Material:** Stainless Steel (blades, chopper bowl), Plastic (blender bottle, grinder cup)
- **Blender Bottle Capacity:** 600 ml
- **Chopper Bowl Capacity:** 800 ml
- **Grinder Cup Capacity:** 100 ml
- **Product Dimensions (L x W x H):** 28 x 27 x 19 cm
- **Item Weight:** 1.81 Kilograms
- **Special Feature:** Portable
- **Recommended Uses:** Grinding, Juicing, Mixing, Pureeing, Crushing

## WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation or contact your retailer for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

## **CUSTOMER SUPPORT**

---

If you have any questions, concerns, or require assistance with your Biolomix TB23M, please contact the retailer from whom you purchased the product. For further information, you may also visit the official Biolomix website.