

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NEEWER](#) /

› [NEEWER X12 Aluminum Teleprompter Instruction Manual](#)

NEEWER X12

NEEWER X12 Aluminum Teleprompter Instruction Manual

MODEL: X12 | BRAND: NEEWER

Introduction

The NEEWER X12 Aluminum Teleprompter is designed to assist users in reading scripts verbatim while maintaining direct eye contact with the camera. This device ensures a more natural and engaging look on camera, making it ideal for vlogging, live broadcasts, interviews, presentations, and more. Its innovative design and smart control features enhance the quality of your video productions.

Package Contents

- 1 x NEEWER Teleprompter
- 1 x RT-110 Remote Control
- 1 x Phone Holder
- 1 x Carrying Case

Note: The NEEWER Teleprompter App is available for download in the App Store and Google Play.

Setup and Assembly

Follow these steps to correctly assemble and set up your NEEWER X12 Teleprompter:

1. **Install the teleprompter on a tripod or light stand:** Secure the teleprompter base to your preferred support.
2. **Loosen the screw and then remove the adapter:** Prepare the mounting plate for your camera.
3. **Raise the glass and position it at a 45° angle:** Ensure the beam splitter glass is correctly angled for optimal reflection.
4. **Zip the hood:** Do not pull the zipper down to the bottom, or it will fall off.

5. **Attach the hood to the glass:** Be sure the hood is securely attached on all four sides to prevent light leakage.
6. **Loosen the screw to pull out the bracket and adjust its position:** Then tighten the screw to secure the bracket.
7. **Fix the adapter with the knob:** Secure the camera mounting adapter.
8. **Mount the camera and fix it with the knob:** Attach your DSLR or cinema camera to the teleprompter.
9. **Zip the hood to complete installation:** Ensure the camera lens is fully enclosed by the hood to block out ambient light.

INSTALLATION STEPS



- 1 Install the teleprompter on a tripod or light stand



- 2 Loosen the screw and then remove the adapter



- 3 Raise the glass and position it at the 45° angle



- 4 Zip the hood
Do not pull the zipper down to the bottom, or it will fall off



- 5 Attach the hood to the glass.
Be sure the hood is securely attached on four sides



- 6 Loosen the screw to pull out the bracket and adjust its position. Then tighten the screw



- 7 Fix the adapter with the knob



- 8 Mount the camera and fix it with the knob



- 9 Zip the hood to complete installation

A visual guide detailing the nine steps for assembling the teleprompter, from mounting on a tripod to attaching the hood and camera.

High-Definition Display

The teleprompter features a high-quality beam splitter glass with 75% light transmittance, ensuring clear reflection of text. The adjustable hood further enhances clarity by minimizing external light interference. Reflected text can be read up to 10 feet (3 meters) away.

HIGH-DEFINITION DISPLAY

With a special processed coating and beam splitter glass, the teleprompter ensures your text is sharp and clear



This image illustrates the teleprompter's high-definition display, showing a tablet's text reflected clearly onto the beam splitter glass. Key dimensions for device compatibility are also visible.

App and Remote Control


The NEEWER teleprompter supports smart control via the included RT-110 remote and the dedicated NEEWER Teleprompter App. The app is compatible with iOS 11.0 or later and Android 6.0 or later.

- **Remote Functions:** With a simple press, you can pause, speed up or down, and turn pages with ease.
- **Connection Note:** The remote control must be linked within the NEEWER Teleprompter App, not directly via your smartphone or tablet's Bluetooth settings.



EASY TO OPERATE

Easily control the scrolling speed, play, pause, and turn pages with the remote

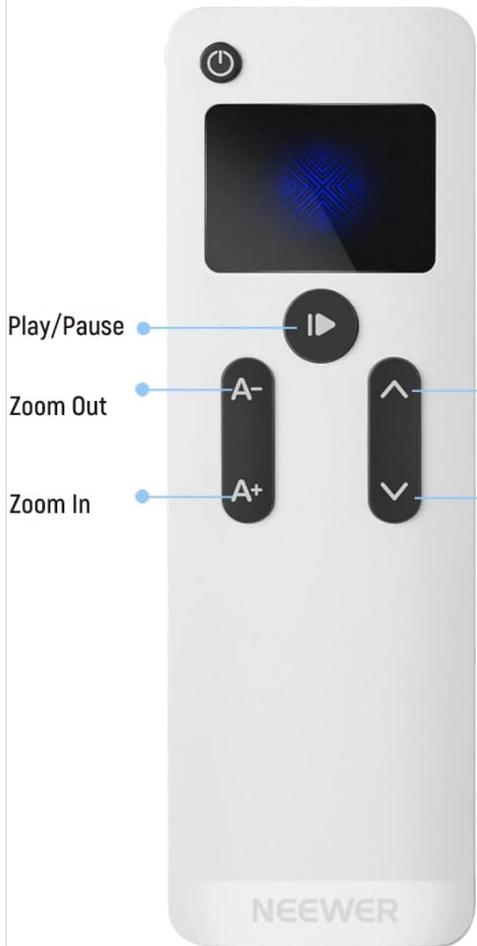

Note:

The remote control needs to be linked IN THE APP instead of linking it directly via bluetooth of your smartphone or tablet.

Play/Pause

Zoom Out

Zoom In

Fast Forward (Playing)
Page Up (Paused)

Slow Down (Playing)
Page Down (Paused)



Play/Pause



Change
Font Size



Adjust
Scroll Speed




Page
Up/Down

The RT-110 remote control is shown with its various buttons, including Play/Pause, Zoom In/Out, Slow Down/Fast Forward, and Page Up/Down, for easy control of the teleprompter app.



UPGRADED APP SUPPORTS MORE FUNCTIONS

Adjustable playback speed, text size, background color, document alignment, etc.

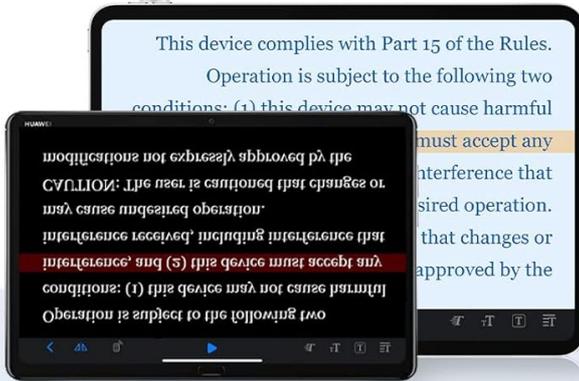

iOS



Android



Teleprompter

This image displays the NEEWER Teleprompter App on a tablet, demonstrating its upgraded functions and smart control via the RT-110 remote. QR codes are provided for easy download on iOS and Android devices.

App Download Links

- [iOS App Store](#)
- [Android Google Play](#)

Official Product Videos

Your browser does not support the video tag.

This video provides a concise overview of the NEEWER X12 Aluminum Teleprompter, demonstrating its key features and the RT-110 remote control in action.

Your browser does not support the video tag.

An official product video showcasing the NEEWER Aluminum Teleprompter, highlighting its design and functionality for various video production needs.

Compatibility

The teleprompter is designed for wide compatibility with various devices:

- **Tablets and Smartphones:** Fits all models up to 9.84" x 8.68" (25cm x 22cm), compatible with iPad, iPad Air, iPad Pro 11", Samsung, and Huawei devices.
- **Incompatibility:** Not compatible with iPad Pro 12".
- **Camera Lenses:** Not compatible with wide-angle lenses. The focal length of the camera lens needs to be more than 28mm.
- **Accessory Mounts:** Features dual cold shoe mounts and 1/4" female threads for attaching microphones, video lights, and other small photography accessories.

COMPATIBILITY

Compatible with any phone or tablet up to
12" x 8.7" / 30.5cm x 22cm



✓ Samsung / Huawei



✓ iPad / iPad Air / iPad Pro 11"



✗ iPad Pro 12.9"


This image illustrates the broad compatibility of the teleprompter with various smartphones and tablets up to 9.84" x 8.68", including iPad, iPad Air, and iPad Pro 11". It also clearly states that iPad Pro 12" is not compatible.

WIDE COMPATIBILITY

Dual cold shoe mounts and 1/4" female threads allow you to mount microphones, video lights, and other small photography accessories



• NOTE: Microphone and ring light are not included.

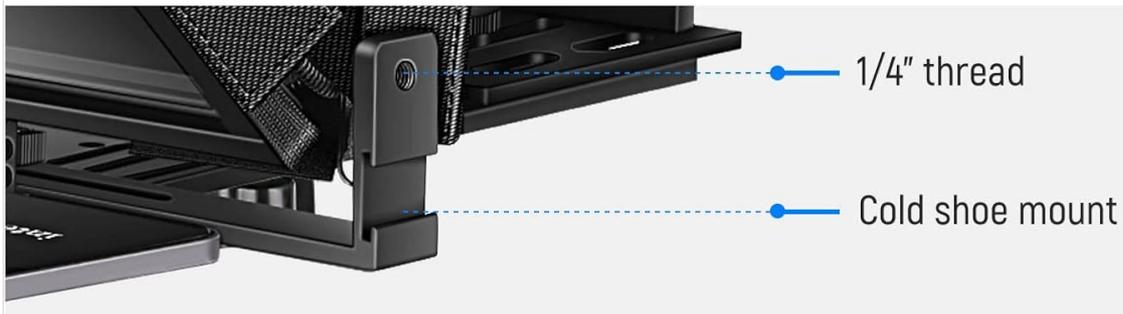

The teleprompter's wide compatibility is demonstrated by highlighting the dual cold shoe mounts and 1/4 inch female threads, allowing for attachment of microphones, video lights, and other accessories.

Specifications

Feature	Detail
Product Dimensions	12.64 x 12.64 x 2.76 inches
Item Weight	6.53 pounds
Model Number	X12
Connectivity Technology	Bluetooth
Hardware Interface	Bluetooth
Compatible Shoe Mount Type	Cold Shoe
UPC	191073072701

Maintenance

To ensure the longevity and optimal performance of your NEEWER X12 Teleprompter, follow these maintenance guidelines:

- **Cleaning the Beam Splitter Glass:** Use the provided cleaning cloth or a soft, lint-free microfiber cloth with a specialized glass cleaning solution. Gently wipe the glass to remove dust, fingerprints, and smudges. Avoid abrasive materials or harsh chemicals that could damage the coating.
- **General Cleaning:** Wipe down the aluminum frame and fabric hood with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Storage:** When not in use, disassemble the teleprompter and store it in the provided carrying case. This protects the glass and components from dust and physical damage.
- **Handling:** Always handle the teleprompter with care, especially the beam splitter glass, to prevent scratches or cracks.



The included carrying case is shown, emphasizing its portability and protective design for safe storage and transport of the teleprompter.

Troubleshooting

If you encounter issues with your teleprompter, consider the following:

- **Remote Control Not Connecting:** Ensure the RT-110 remote is linked within the NEEWER Teleprompter App, not directly through your device's Bluetooth settings. Check if the remote's batteries need replacement.
- **Text Not Clear/Ghosting:** Verify that the fabric hood is securely attached and completely blocking external light. Ensure the beam splitter glass is clean and free of smudges. Adjust the tablet's brightness for better visibility.
- **Camera Lens Vignetting:** Confirm that your camera lens has a focal length greater than 28mm. Wide-angle lenses are not compatible and may cause vignetting. Adjust the camera's position on the mounting plate to optimize the field of view.
- **Tablet/Smartphone Not Fitting:** Check the dimensions of your device against the maximum supported size (9.84" x 8.68" / 25cm x 22cm). Ensure any protective cases are removed if they prevent proper seating.

Warranty and Support

For warranty information and technical support, please refer to the documentation included with your product or visit the official NEEWER website. Keep your purchase receipt for any warranty claims.