

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HEYSONG](#) /

› [Heysong SONIC BLAST Bluetooth Speaker User Manual](#)

HEYSONG SONIC BLAST

Heysong SONIC BLAST Bluetooth Speaker User Manual

Model: SONIC BLAST | Brand: HEYSONG

1. INTRODUCTION

Thank you for choosing the Heysong SONIC BLAST Bluetooth Speaker. This portable wireless speaker is designed to deliver high-fidelity 360° surround sound with powerful bass and a vibrant RGB light show. It features Bluetooth 5.0 connectivity, is waterproof, and supports multiple playback options including TF card and USB. Please read this manual carefully before use to ensure proper operation and to maximize your listening experience.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from medical devices.
- Do not attempt to disassemble, repair, or modify the speaker yourself. This will void the warranty.
- Ensure the charging port cover is securely closed when the speaker is exposed to water to maintain its waterproof rating.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the product and its battery responsibly according to local regulations.

3. PACKAGE CONTENTS

- Heysong SONIC BLAST Bluetooth Speaker
- USB Charging Cable
- AUX Audio Cable
- User Manual
- Lanyard

4. PRODUCT OVERVIEW



Figure 4.1: Heysong SONIC BLAST Bluetooth Speaker (Mint Green)

The Heysong SONIC BLAST speaker features a cylindrical design with a durable mesh fabric exterior. The top panel includes control buttons, and the side features the brand logo. The speaker is designed to be portable and robust, suitable for various environments, including those with water exposure.

4.1 Button Functions

Button/Port	Function
Power Button	Press and hold to power on/off. Short press to play/pause.
Volume Up (+)	Short press to increase volume. Long press for next track.
Volume Down (-)	Short press to decrease volume. Long press for previous track.
Mode Button (M)	Short press to switch between Bluetooth, AUX, TF Card, and USB modes.
Light Button	Short press to cycle through light modes or turn lights off.
Charging Port (USB-C)	Connect USB charging cable to charge the speaker.
AUX-in Port	Connect external audio devices via 3.5mm audio cable.
TF Card Slot	Insert a TF (Micro SD) card for direct music playback.
USB Port	Insert a USB flash drive for direct music playback.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status and turn off when fully charged.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the indicator light turns on.
- **To Power Off:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the indicator light turns off.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

Bluetooth 5.0

Easy and stable connection



Figure 6.1: Bluetooth 5.0 Connectivity

The speaker utilizes advanced Bluetooth 5.0 for a fast and stable connection.

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED.
2. Enable Bluetooth on your device (smartphone, tablet, computer).
3. Search for "SONIC BLAST" in the list of available Bluetooth devices.

4. Select "SONIC BLAST" to connect. Once connected, the LED will stop flashing and remain solid blue, and you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

6.2 AUX Mode

Connect one end of the 3.5mm AUX audio cable to the speaker's AUX-in port and the other end to the audio output of your device. The speaker will automatically switch to AUX mode, or you can press the Mode button to select AUX mode.

6.3 TF Card / USB Playback

Insert a TF (Micro SD) card or a USB flash drive into the respective slot. The speaker will automatically detect the storage device and begin playing audio files. Press the Mode button to switch between different input sources if needed.

6.4 Light Modes

The speaker features an RGB light show that synchronizes with the music. Short press the Light button to cycle through different light modes or to turn the lights off. The lights can create a party atmosphere and enhance your listening experience.

6.5 True Wireless Stereo (TWS) Pairing

True Wireless Stereo

Sync up for stunning sound



Figure 6.2: True Wireless Stereo Pairing

You can pair two Heysong SONIC BLAST speakers together to create a powerful stereo sound experience.

1. Ensure both SONIC BLAST speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. You will hear a prompt indicating it's searching for another speaker.

3. The two speakers will automatically connect to each other. Once successfully paired, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 6.1. Audio will play through both speakers in stereo.

7. CHARGING

The Heysong SONIC BLAST speaker is equipped with a built-in 4000mAh rechargeable lithium battery, providing up to 15 hours of playback time (at 50% volume). When the battery is low, you will hear an audible alert. Connect the speaker to a USB power source using the provided USB cable to charge. The charging indicator will illuminate during charging and turn off when the battery is full.

8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. For stubborn dirt, a slightly damp cloth can be used, but ensure the charging port cover is sealed. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for a long period, charge the battery to about 50% every few months to prolong its lifespan.
- **Water Resistance:** While waterproof, avoid prolonged submersion. Always ensure the charging port cover is tightly sealed before exposing the speaker to water.

9. TROUBLESHOOTING

Problem	Possible Cause / Solution
Speaker does not power on.	Battery is depleted. Charge the speaker fully.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none"> ◦ Speaker is not in pairing mode. Ensure the blue LED is flashing. ◦ Bluetooth is not enabled on your device. ◦ Speaker is too far from the device. Keep within 10 meters. ◦ Speaker is already connected to another device. Disconnect and try again. ◦ Try restarting both the speaker and your device.
No sound or low volume.	<ul style="list-style-type: none"> ◦ Volume on speaker or device is too low. Increase volume. ◦ Speaker is not properly connected (Bluetooth, AUX, TF, USB). Re-establish connection. ◦ Audio file format not supported (for TF/USB).
Sound distortion at high volume.	Reduce the volume on the speaker or the connected device. Ensure audio source quality is good.

Problem	Possible Cause / Solution
TWS pairing fails.	<ul style="list-style-type: none"> ◦ Ensure both speakers are SONIC BLAST models. ◦ Ensure neither speaker is connected to a Bluetooth device before TWS pairing. ◦ Place speakers close to each other during pairing. ◦ Try resetting both speakers and repeat the TWS pairing process.

10. SPECIFICATIONS

Feature	Detail
Brand	HEYSONG
Model Name	HEYSONG SONIC BLAST
ASIN	B0B5D99FVP
Connectivity Technology	Bluetooth, Auxiliary Input, USB Playback, TF Card
Bluetooth Version	5.0
Speaker Type	Waterproof
Special Features	Portable, Wireless, RGB Light Show, 360° Surround Sound, Dual Bass Driver
Maximum Speaker Output Power	30 Watts
Battery Life	15 hours
Battery Capacity	4000 mAh (Lithium-ion)
Product Dimensions (L x W x H)	22 x 11 x 10.5 cm (8.66 x 4.33 x 4.13 inches)
Item Weight	620 Grams (1.37 lbs)
Color	Mint Green
Control Type	Integrated Buttons
Surround Sound Channel Configuration	2.0
Recommended Uses	For television, Portable use, Outdoor/Indoor activities
Compatible Devices	Laptop, Television, Smartphones, Tablets

11. WARRANTY AND SUPPORT

The Heysong SONIC BLAST Bluetooth Speaker comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact HEYSONG customer

service through the retailer where you purchased the product or visit the official HEYSONG website for contact information. Please have your purchase receipt and product model number ready when contacting support.



© 2024 HEYSONG. All rights reserved.
This manual is subject to change without notice.