



Manuals.plus /

› Aniplex /

› Lycoris Recoil 3 (Limited Edition) DVD User Manual

Aniplex B0B5DF8Y87

Lycoris Recoil 3 (Limited Edition) DVD User Manual

Model: B0B5DF8Y87

INTRODUCTION

This manual provides instructions for the proper use and care of your Lycoris Recoil 3 (Limited Edition) DVD. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product. The Lycoris Recoil 3 (Limited Edition) DVD contains episodes from the anime series Lycoris Recoil, specifically Volume 3, which includes episodes 6 and 7. This edition features special bonus items as detailed in the product description.

PACKAGE CONTENTS

- Lycoris Recoil 3 (Limited Edition) DVD Disc
- Character design drawn by Immiguru 3-way case & digital jacket
- Production Materials Collection (First Volume)
- Ricorico Coffee Secret Business Notebook (20 P)
- Special Event Ticket Priority Sale Application Ticket (Application period may be expired)
- Additional bonus items as specified on the product packaging.

TV Animation
LYCORIS RECOIL

Volume:

3

Episode 06-07

○○○○●○○○○○



Image: Front cover of the Lycoris Recoil 3 Limited Edition DVD case, showing the main characters. This image represents the physical product you have purchased.

SETUP

1. **Unpack the DVD:** Carefully remove the DVD disc and any accompanying materials from the packaging.
2. **Inspect the Disc:** Before insertion, check the disc surface for any visible scratches, smudges, or dust. If necessary, gently clean the disc as described in the Maintenance section.
3. **Prepare Your Player:** Ensure your DVD player, Blu-ray player, or computer's optical drive is powered on

and ready to accept a disc.

4. **Insert the Disc:** Open the disc tray or slot on your player. Hold the DVD by its edges to avoid touching the playback surface and insert it label-side up into the player. Close the disc tray or allow the player to draw the disc in.
5. **Automatic Playback:** Most players will automatically detect the DVD and begin playback or display the main menu. If not, refer to your player's manual for instructions on how to start playback.

OPERATING INSTRUCTIONS

Once the DVD is loaded, use your player's remote control or interface to navigate the disc's menu and control playback.

- **Main Menu:** The DVD will typically display a main menu allowing you to select episodes, language options, subtitles, and bonus features.
- **Play/Pause:** Press the **PLAY** button to start playback and the **PAUSE** button to temporarily stop it.
- **Stop:** Press the **STOP** button to end playback and return to the main menu or stop the disc entirely.
- **Skip/Chapter Select:** Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to jump between chapters or episodes.
- **Fast Forward/Rewind:** Use the **FFWD** or **REW** buttons to quickly scan through the content.
- **Audio/Subtitle:** Access these options from the main menu or by pressing the **AUDIO** or **SUBTITLE** buttons on your remote during playback. The primary audio language is Japanese.

MAINTENANCE

Proper care will extend the life of your DVD and ensure consistent playback quality.

- **Handling:** Always hold the DVD by its outer edges or by the center hole. Avoid touching the shiny playback surface.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Lay discs flat or store them vertically to prevent warping.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe the playback surface with a soft, lint-free cloth (e.g., a microfiber cloth). Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Avoid Scratches:** Keep the disc away from sharp objects and rough surfaces.

TROUBLESHOOTING

If you encounter issues with your DVD, try the following solutions:

- **Disc Not Playing/Loading:**
 - Ensure the disc is inserted correctly (label side up).
 - Clean the disc surface for smudges or dust.
 - Try playing the disc in another DVD player or computer to rule out player issues.
 - Check if your player supports DVD format.
- **Skipping or Freezing Playback:**
 - Clean the disc thoroughly. Minor scratches or dust can cause skipping.
 - Ensure the disc is not warped.
 - Check your player's lens for cleanliness. Refer to your player's manual for cleaning instructions.

- **No Audio/Video:**

- Verify that your player is correctly connected to your TV or audio system.
- Check the audio/video settings on your player and TV.
- Ensure the correct audio track is selected on the DVD menu.

If problems persist after trying these steps, contact the retailer or manufacturer for further assistance.

SPECIFICATIONS

Feature	Detail
Product Title	Lycoris Recoil 3 (Limited Edition) [DVD]
ASIN (Model Number)	B0B5DF8Y87
Media Format	DVD, Color, Widescreen
Aspect Ratio	1.78:1
Run Time	48 minutes
Number of Discs	1
Language	Japanese
Release Date	November 23, 2022
Studio	Aniplex
Package Dimensions	7.64 x 5.59 x 0.75 inches
Package Weight	9.52 ounces

WARRANTY AND SUPPORT

Information regarding specific warranty terms for this product is not available in the provided data. Please refer to the packaging or contact the retailer where you purchased the DVD for warranty details.

For technical support or inquiries related to the content of the DVD, please contact the distributor, Aniplex, or the retailer.

ADDITIONAL INFORMATION

No official product videos were found in the provided data for this item. For trailers or promotional content, please refer to official Aniplex channels or the Lycoris Recoil anime website.