

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Full Canopy Bed with Trundle - Instruction Manual

Bellemave B0B5DPRRPY

Bellemave Full Canopy Bed with Trundle

MODEL: B0B5DPRRPY - INSTRUCTION MANUAL

1. Safety Information

Please read and understand all instructions before assembly and use of this product. Keep this manual for future reference.

- **Weight Capacity:** Do not exceed the weight capacity of **350 lbs** for the upper bed and **175 lbs** for the trundle bed. Exceeding these limits may cause instability and injury.
- **Assembly:** Always follow assembly instructions carefully. Ensure all parts are securely fastened before use. Improper assembly can lead to product failure and injury.
- **Tools:** Use only the recommended tools. Avoid power tools during assembly as they may overtighten fasteners and damage the wood.
- **Children:** Keep small parts away from children during assembly to prevent choking hazards.
- **Placement:** Place the bed on a flat, stable surface.
- **Maintenance:** Regularly check all connections and tighten as necessary.

2. Product Overview

The Bellemave Full Canopy Bed with Trundle offers a modern design with the added functionality of an extra pull-out bed. It features a sturdy wood platform frame and canopy rails for customization. This bed is designed for comfort and practicality in various bedroom settings.



Image 2.1: Assembled Bellemave Full Canopy Bed with Trundle in a bedroom setting.

3. Specifications

Feature	Detail
Product Type	Canopy Bed with Trundle
Size	Full
Overall Product Dimensions	79.5"L x 56.5"W x 71.2"H
Material	Plywood, MDF, Pinewood
Color Options	White, Gray, Light Brown
Upper Bed Weight Capacity	350 lbs
Trundle Bed Weight Capacity	175 lbs

Feature	Detail
Recommended Upper Mattress Thickness	8 inches
Recommended Trundle Mattress Thickness	6 inches
Assembly Required	Yes
Finish Type	Painted



Image 3.1: Detailed dimensions of the bed frame and trundle unit.

4. Package Contents

Your Bellemave Full Canopy Bed with Trundle is shipped in one package. Please verify that all components are present and undamaged before beginning assembly. Refer to the detailed parts list provided in the separate assembly guide included with your product.

- Bed Frame Components (Headboard, Footboard, Side Rails, Canopy Posts, Slats)
- Trundle Bed Components (Frame, Slats, Wheels)
- Hardware Pack (Screws, Bolts, Washers, Allen Wrench)
- Assembly Instructions Manual

5. Setup and Assembly Instructions

Assembly of the Bellemave Full Canopy Bed with Trundle requires two adults. All necessary tools, including a screwdriver, are included. **Do not use power tools** as they can damage the wood and hardware.

General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a soft, clean surface to prevent scratches. Compare all parts with the parts list in the separate assembly guide.
2. **Assemble Headboard and Footboard:** Attach the headboard and footboard panels to their respective posts using the provided hardware.
3. **Connect Side Rails:** Attach the side rails to the headboard and footboard assemblies. Ensure all connections are secure.
4. **Install Bed Slats:** Place and secure the bed slats onto the side rails. Ensure even spacing and firm attachment for mattress support.
5. **Assemble Trundle Unit:** Follow the specific instructions in the assembly guide to build the trundle frame and install its slats and wheels.
6. **Attach Canopy Posts:** Securely attach the four canopy posts to the corners of the main bed frame.
7. **Install Canopy Rails:** Connect the top canopy rails between the canopy posts to complete the canopy structure.
8. **Final Check:** Once assembled, double-check all screws and bolts to ensure they are tight. Do not overtighten.



Image 5.1: Bed frame with trundle unit partially extended, showing the structure.



Image 5.2: Front view of the assembled canopy bed frame, without mattresses.

SIZE: INCH

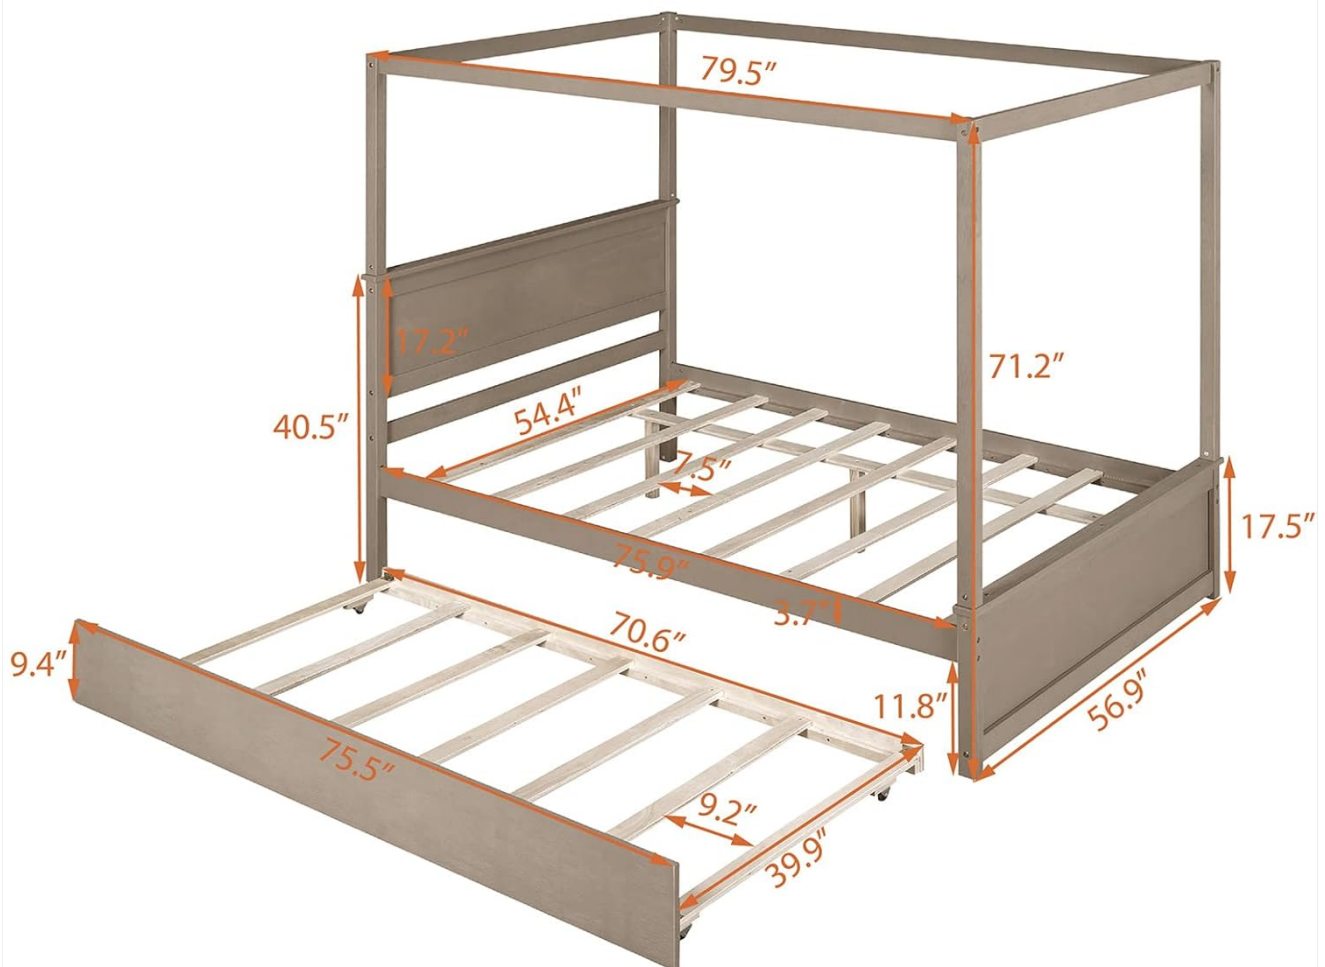


Image 5.3: Close-up view of a bed frame corner, illustrating joint construction.

6. Usage Instructions

Using the Trundle Bed:

The trundle bed is designed to slide smoothly under the main bed frame. To use, gently pull the trundle unit out from under the main bed. To store, push it back in until it is fully concealed. Ensure the trundle wheels are clean and free of debris for optimal movement.

Mattress Placement:

Place a full-size mattress on the main bed frame. For the trundle bed, use a mattress with a maximum thickness of 6 inches to ensure it can slide underneath the main bed without obstruction.

Canopy Customization:

The top canopy rails allow for customization with decorative curtains or fabric. Ensure any added materials are securely fastened and do not pose a safety hazard.

7. Maintenance

Cleaning:

Wipe the bed frame with a dry cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners, as these can damage the painted finish.

Regular Checks:

Periodically inspect all bolts, screws, and connections to ensure they remain tight. Retighten any loose hardware to maintain the bed's stability and safety. Do not overtighten.

8. Troubleshooting

Bed feels wobbly or unstable:

- Ensure all bolts and screws are securely tightened.
- Verify that the bed is placed on a level surface.
- Check that all parts are assembled according to the instructions.

Trundle bed does not slide smoothly:

- Check the trundle wheels for any obstructions or debris.
- Ensure the floor surface is clean and clear.
- Verify that the trundle mattress is not too thick (maximum 6 inches recommended).

Missing or damaged parts:

If you find any parts missing or damaged upon opening the package, please contact Bellemave customer support immediately for assistance. Do not attempt to assemble the bed with missing or damaged components.

9. Warranty and Support

Warranty Information:

This Bellemave product comes with a **One Year Warranty** against manufacture defects. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support:

For any questions, concerns, or warranty claims, please contact Bellemave customer support. Refer to your purchase documentation for specific contact details or visit the official Bellemave website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B5DPRRPY>

More documents and user manuals: <https://manuals.plus/>