

Roxel Roxel RC-3

Roxel RC-3 Universal Remote Control User Manual

For Roxel RCD-320, RCD-280, RCD-400, RCD-750 Micro Hifi Systems

1. INTRODUCTION

This user manual provides detailed instructions for the operation and maintenance of your Roxel RC-3 Universal Remote Control. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience. This remote is designed for seamless compatibility with Roxel RCD-320, RCD-280, RCD-400, and RCD-750 all-in-one CD player micro Hifi compact stereo systems.

2. PRODUCT OVERVIEW

The Roxel RC-3 is a universal infrared remote control designed to provide convenient access to all functions of your compatible Roxel micro Hifi system. It requires no programming or complex setup; simply insert the batteries, and it is ready for use.





Figure 2.1: Front view of the Roxel RC-3 Universal Remote Control. This image displays the front of the Roxel RC-3 Universal Remote Control, featuring its ergonomic black design and clearly labeled buttons for various functions such as power, volume, track control, source selection, and numerical input.

3. SETUP

3.1 Battery Installation

The Roxel RC-3 remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two new AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect installation can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.

Note: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the remote control will not be used for an extended period.

4. OPERATING INSTRUCTIONS

The Roxel RC-3 remote control operates using infrared signals. Ensure there is a clear line of sight between the remote control and the infrared receiver on your Roxel micro Hifi system for optimal performance.

4.1 Button Functions

- **Power ()**: Turns the Hifi system on or off.
- **AUTO / Stop (■)**: Initiates auto-tuning for radio or stops playback.
- **Eject (⏏)**: Opens or closes the CD tray.
- **ALBUM+/-**: Navigates between albums or folders.
- **VOL+/-**: Adjusts the volume level.
- **OK / Play/Pause (▶ | |)**: Confirms selections in menus or plays/pauses audio playback.
- **Skip Back ()**: Skips to the beginning of the current track or the previous track.
- **Skip Forward ()**: Skips to the next track.
- **TUNE+/-**: Adjusts radio frequency manually.
- **EQ**: Cycles through equalizer presets.
- **Mute ()**: Mutes or unmutes the audio output.
- **UNPAIR**: Initiates the unpairing process for Bluetooth devices.
- **Source Buttons (CD, LINE IN, USB, DAB, FM, BT)**: Selects the desired audio input source.
- **Number Buttons (0-9)**: Used for direct track selection, radio station input, or menu navigation.
- **PRESET**: Accesses stored radio station presets.
- **PROG**: Enters programming mode for CD tracks or radio presets.
- **CLOCK**: Displays or sets the system clock.
- **MENU**: Accesses the system's main menu.
- **SLEEP**: Sets the sleep timer.
- **INFO**: Displays track, station, or system information.
- **INTRO**: Plays the first few seconds of each track.
- **REPEAT**: Repeats the current track or album.
- **SHUFFLE**: Plays tracks in a random order.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents, as these

may damage the finish or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's range decreases or if it stops responding. Always replace both batteries at the same time with new AAA batteries.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

If you encounter issues with your Roxel RC-3 remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control has limited range or intermittent response.	Weak batteries; Obstruction between remote and Hifi system; Remote sensor on Hifi system is blocked.	Replace batteries. Ensure a clear line of sight. Remove any objects blocking the Hifi system's IR sensor.
Specific functions are not working.	Incorrect source selected on Hifi system; Remote control malfunction.	Ensure the correct input source (CD, USB, FM, etc.) is selected on your Hifi system. If the issue persists, contact customer support.

7. SPECIFICATIONS

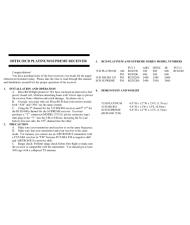
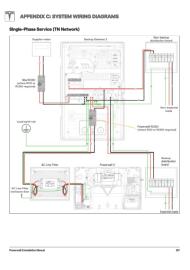
- **Model Name:** RC-3
- **Item Model Number:** Roxel RC-3
- **Brand:** Roxel
- **Color:** Black
- **Connectivity Technology:** Infrared
- **Special Feature:** Universal
- **Maximum Number of Supported Devices:** 1
- **Number of Buttons:** 34
- **Maximum Range:** 10 Meters
- **Batteries Required:** 2 AAA (not included)
- **Item Weight:** 79 Grams
- **Manufacturer:** Roxel

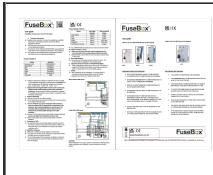
8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Roxel RC-3 Universal Remote Control, please refer to the documentation provided with your Roxel micro Hifi system or contact Roxel customer service.

directly. Details for customer support can typically be found on the manufacturer's official website or product packaging.

Related Documents - Roxel RC-3

	<p>Hitec/RCD Platinum/Supreme Receiver Manual - Installation, Operation, and Specifications</p> <p>This manual provides detailed information on the Hitec/RCD Platinum and Supreme series RC receivers, including installation instructions, operational precautions, model number listings, and physical dimensions. It guides users on proper setup and usage for optimal performance in radio-controlled applications.</p>
	<p>PARKSIDE PSSFS 3 A2 Socket Tester: Operation and Safety Manual</p> <p>User manual for the PARKSIDE PSSFS 3 A2 Socket Tester, detailing its functions for checking electrical socket wiring and performing RCD tests, along with essential safety guidelines and technical specifications.</p>
	<p>Tesla Powerwall 3 Single-Phase Service (TN Network) Wiring Diagram</p> <p>Detailed wiring diagram for Tesla Powerwall 3 single-phase service in a TN network, illustrating connections between the supplier meter, Backup Gateway 2, AC Line Filter, Powerwall 3, and distribution boards for essential and non-essential loads.</p>
	<p>Sony RCD-W10 Service Manual</p> <p>Detailed service manual for the Sony RCD-W10 Compact Disc Recorder, covering specifications, troubleshooting, disassembly, electrical adjustments, and parts.</p>
	<p>Sony RCD-W10 Service Manual</p> <p>Official service manual for the Sony RCD-W10 Compact Disc Recorder, detailing specifications, disassembly, safety, test modes, electrical adjustments, diagrams, and parts lists for technicians.</p>



[FuseBox F3 Series Consumer Unit User Guide & Installation](#)

Official user guide for FuseBox F3 Series consumer units. Provides essential installation, technical, safety, and troubleshooting information for electricians and users.