

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [LG](#) /
- > [LG ANMR22 Magic Remote Control User Manual](#)

LG MR22GN.AEU

LG ANMR22 Magic Remote Control User Manual

Model: MR22GN.AEU

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your LG ANMR22 Magic Remote Control. This remote is designed to enhance your television viewing experience with advanced features such as voice control, a motion-sensing pointer, and quick access buttons for popular streaming services. Please read this manual thoroughly before using the remote control.



Figure 1: LG ANMR22 Magic Remote Control. This image displays the black remote control with its various buttons, including the power button, number pad, volume and channel controls, a central navigation wheel, voice command button, and dedicated buttons for Netflix, Prime Video, Disney+, and Rakuten TV.

2. SETUP

2.1. Installing Batteries

1. Open the battery cover on the back of the remote control.
2. Insert two new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the battery compartment.
3. Close the battery cover securely.

2.2. Pairing with Your LG TV

The LG ANMR22 Magic Remote Control typically pairs automatically with compatible LG TVs. If automatic pairing does not occur, or if you need to re-pair the remote, follow these steps:

1. Turn on your LG TV.
2. Point the Magic Remote towards your TV.
3. Press the **Wheel (OK)** button. The remote should register with the TV. A message confirming successful pairing may appear on the screen.
4. If pairing fails, remove the batteries, wait a few seconds, reinsert them, and try again. For persistent issues, refer to the troubleshooting section or your TV's user manual.

Note: This remote is compatible with LG TV models from 2021 and 2022, including specific OLED, QNED MiniLED, NANOCELL, UHD, and HD series. Refer to the specifications section for a detailed list of compatible models.

3. OPERATION

3.1. Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Enter channel numbers or other numerical inputs.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Home Button:** Accesses the TV's Home screen or Smart TV menu.
- **Back Button:** Returns to the previous screen or menu.
- **Settings Button:** Opens the TV's settings menu.

3.2. Magic Remote Features

- **Pointer:** Move the remote to control an on-screen pointer, similar to a computer mouse.
- **Wheel (OK) Button:** Press to select items. Rotate the wheel to scroll through menus or web pages.

3.3. Voice Control

The remote features an integrated microphone for voice commands, compatible with Google Assistant and Alexa.

1. Press and hold the **Microphone Button**.
2. Speak your command clearly into the microphone at the top of the remote.
3. Release the button when you are finished speaking.

3.4. Quick Access Buttons

Dedicated buttons provide instant access to popular streaming services:

- **NETFLIX**
- **Prime Video**
- **Disney+**
- **Rakuten TV**
- **Alexa** (Dedicated button for Alexa voice assistant)

3.5. Programmable Buttons

The remote includes 8 programmable channel buttons (1-9) that can be customized for direct access to different applications, inputs, or channels. Refer to your TV's settings menu for instructions on programming these buttons.

4. MAINTENANCE

4.1. Battery Replacement

Replace batteries when the remote's performance degrades or if the TV does not respond to commands. Always use new AA alkaline batteries and ensure correct polarity. Do not mix old and new batteries, or

different types of batteries.

4.2. Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

Problem	Solution
Remote not responding.	<ul style="list-style-type: none">• Check battery orientation and charge. Replace batteries if necessary.• Ensure there are no obstructions between the remote and the TV's IR receiver.• Re-pair the remote with the TV (see Section 2.2).
Pointer not appearing on screen.	<ul style="list-style-type: none">• Ensure the remote is paired correctly.• Shake the remote gently to activate the pointer.• If multiple Magic Remotes are used, only one can have full pointer functionality at a time.
Voice control not working.	<ul style="list-style-type: none">• Ensure the remote is paired and the microphone button is pressed and held while speaking.• Check TV's network connection for internet-based voice services.• Verify TV settings for voice recognition and assistant activation.
Quick access buttons not launching apps.	<ul style="list-style-type: none">• Ensure the TV has an active internet connection.• Verify that the respective applications are installed and updated on your LG Smart TV.

6. SPECIFICATIONS

- **Brand:** LG
- **Model Number:** MR22GN.AEU (ANMR22)
- **Color:** Black
- **Connectivity Technology:** Infrared, Bluetooth (for Magic Remote and Voice features)
- **Special Features:** Voice Search (Google Assistant, Alexa), Motion-sensing Pointer, Scroll Wheel, Quick Access Buttons
- **Compatible Devices:** LG Televisions (2021 and 2022 models including OLED Z2/1, G2/G1, C2/C1, B2/1, A2/1; QNED MiniLED 996Q/P, 966Q/P, 916Q/P, 90Q/P, 87Q, 86Q, 82Q, 81Q; NANOCELL NANO9_6P, NANO8_6Q/P, NANO786Q/P, NANO766Q/P; UHD Series UQ and UP; HD Series LQ/LM, TQ)
- **Battery Type:** AA Alkaline (Rechargeable battery option mentioned in source, but typically uses disposable AA)
- **Number of Buttons:** 36
- **Maximum Range:** 10 Meters

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation provided with your LG TV or contact your retailer. LG provides customer support for its products. For technical assistance or service inquiries, please visit the official LG website or contact their customer service department in your region. You can find more information and support resources on the official LG website www.lg.com