

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunbeam](#) /

› [Sunbeam Power Steam Handheld Steamer User Manual](#)

Sunbeam 32610046

Sunbeam Power Steam Handheld Steamer

Model: 32610046

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this product.
- Use steamer only for its intended use.
- To protect against risk of electric shock, do not immerse the steamer in water or other liquids.
- Always turn off and unplug the steamer from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the cord away from heated surfaces. Do not allow the cord to touch hot surfaces.
- Always ensure the water tank is securely attached before operating.
- Use distilled or demineralized water to prevent mineral buildup and extend the life of your steamer.

PRODUCT OVERVIEW

The Sunbeam Power Steam Handheld Steamer is designed for efficient wrinkle removal from various fabrics. It features a powerful 1200W heating element and a detachable water tank for convenience.



The Sunbeam Power Steam Handheld Steamer, shown with its included bristle brush attachment.



The LED Temperature Ready Light illuminates when the steamer has reached optimal operating temperature.

Components:

- **Steamer Head:** Features steam vents and a stainless-steel non-stick faceplate.
- **Handle:** Ergonomically designed for comfortable grip.
- **Steam Trigger:** Activates steam release.
- **Locking Steam Trigger:** For continuous steam operation.
- **Water Tank:** Detachable 250ml capacity for easy filling.
- **LED Temperature Ready Light:** Indicates when the steamer is heated and ready for use.
- **Power Cord:** 8-foot 360° swivel cord for flexible movement.
- **Bristle Brush Attachment:** Helps penetrate fibers for effective steaming.

SETUP

Before first use, ensure all packaging materials are removed. It is recommended to run a full tank of water through the steamer to clean any manufacturing residue.

Filling the Water Tank:

1. Ensure the steamer is unplugged from the electrical outlet.
2. Remove the detachable water tank by pressing the release button and pulling it forward.
3. Open the water tank cap and fill the tank with distilled or demineralized water up to the 'MAX' line. Do not overfill.
4. Close the water tank cap securely.
5. Reinsert the water tank firmly into the steamer until it clicks into place.



EASY TO REMOVE & FILL WATER TANK

The detachable 250ml water tank is designed for easy removal and filling.

Attaching Accessories:

The bristle brush attachment can be easily snapped onto the steamer head when needed for deeper fabric penetration.



BRUSH ATTACHMENT HEAD INCLUDED

The bristle brush attachment is included to assist with steaming various fabric types.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your Sunbeam handheld steamer.

Powering On and Heating:

1. After filling the water tank, plug the steamer into a standard electrical outlet.
2. The steamer will begin to heat up. The LED temperature ready light will illuminate when the steamer is ready for use, typically within 30 seconds.



The steamer heats up rapidly, ready for use in approximately 30 seconds.

Steaming Garments:

1. Hang the garment on a hanger.
2. Hold the steamer upright, ensuring the steam vents are facing away from you.
3. Press the steam trigger to release steam. For continuous steam, slide the locking steam trigger into the locked position.
4. Move the steamer slowly over the fabric, allowing the steam to relax the fibers and remove wrinkles.
5. For stubborn wrinkles, use the bristle brush attachment to gently brush the fabric while steaming.



The steamer provides an extra burst of steam for effective wrinkle removal.



Engage the locking steam trigger for continuous steam output during longer steaming sessions.

Steaming Upholstery and Curtains:

The steamer can also be used on upholstery and curtains. Hold the steamer a few inches away from the fabric and move it in a sweeping motion. Test on an inconspicuous area first.



BRUSH ATTACHMENT HEAD INCLUDED

The bristle brush attachment is versatile for use on various fabrics, including upholstery.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steamer.

Cleaning:

- Always unplug the steamer and allow it to cool completely before cleaning.
- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the steam vents regularly to prevent mineral buildup. Use a cotton swab or small brush if necessary.

Descaling (Mineral Buildup Removal):

Over time, mineral deposits from water can build up inside the steamer, affecting performance. Descale your steamer regularly, especially if you notice reduced steam output or spitting.

1. Mix a solution of 50% white vinegar and 50% distilled water.

2. Fill the water tank with this solution.
3. Plug in the steamer and allow it to heat up.
4. Run the steamer until the tank is empty, directing the steam into a sink or basin.
5. Repeat the process with fresh distilled water to rinse out any remaining vinegar.
6. Perform descaling every 1-2 months depending on usage and water hardness.

Storage:

When not in use, ensure the water tank is empty and the steamer is cool and dry. Store the steamer in a cool, dry place, away from direct sunlight and moisture. The stand-up stable design allows for easy storage.

TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Mineral buildup. Steamer not heated.	Fill water tank. Perform descaling. Wait for LED ready light to illuminate.
Water spitting from steam vents.	Overfilled water tank. Mineral buildup. Steamer not fully heated.	Do not overfill. Perform descaling. Wait for LED ready light.
Steamer not turning on.	Not plugged in. Power outlet issue.	Ensure steamer is securely plugged into a working outlet. Try a different outlet.
Leaking from water tank.	Water tank not properly seated. Tank cap not closed.	Ensure water tank is securely clicked into place. Close tank cap tightly.

SPECIFICATIONS

Technical details for the Sunbeam Power Steam Handheld Steamer.

- **Brand:** Sunbeam
- **Model Number:** 32610046
- **Color:** White/Blue
- **Wattage:** 1200 watts
- **Voltage:** 120 Volts
- **Heat Time:** Approximately 30 seconds
- **Water Tank Capacity:** 250 Milliliters
- **Item Weight:** 1.26 pounds
- **Product Dimensions:** 4.6 x 3.55 x 9.79 inches
- **UPC:** 694501117475



The compact dimensions of the steamer for easy handling and storage.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the full user manual provided with your product or visit the official Sunbeam website.

You can also visit the Sunbeam brand store for more information and product registration: [Sunbeam Store on Amazon](#)