

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wiszodet](#) /

› **Wiszodet Kids Smart Game Watch S16 Instruction Manual**

Wiszodet S16

Wiszodet Kids Smart Game Watch S16 Instruction Manual

Model: S16

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Wiszodet Kids Smart Game Watch S16. Please read this manual thoroughly to ensure proper use and to maximize the watch's features.



Image: Front view of the Wiszodet Kids Smart Game Watch S16 in blue, showing the digital time and date.

WHAT'S IN THE BOX

Upon opening the package, verify that all the following items are included:

- Wiszodet Kids Smart Watch (S16)
- Screen Glass Protector
- USB Charging Cable

PRODUCT OVERVIEW

Familiarize yourself with the physical components of your smart watch.



Image: Diagram illustrating the watch's features including the camera, soft band, flashlight (torch), home button, USB charging port, and aluminum casing.

- **Camera:** Located at the top of the watch face for photos and videos.
- **Soft Band:** Comfortable and adjustable strap.
- **Torch (Flashlight):** Integrated light for illumination.
- **Home Button:** Used to return to the main screen or activate certain functions.
- **USB Socket:** For charging the watch and transferring data.
- **Aluminum Shell:** Durable outer casing.
- **Touch Screen:** 1.54-inch display for interactive control.

SETUP

1. Charging the Watch

Before first use, fully charge the watch.

1. Connect the provided USB charging cable to the USB socket on the watch.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The watch screen will indicate charging status. Allow approximately 2-3 hours for a full charge.

2. Powering On/Off

- **To Power On:** Press and hold the Home button until the screen lights up.
- **To Power Off:** Press and hold the Home button, then follow the on-screen prompts to confirm power off.

3. Initial Settings (Time and Date)

Upon first power-on or after a factory reset, you may need to set the correct time and date.

1. From the main screen, swipe to find and tap the "Settings" icon.
2. Navigate to "Time & Date" or a similar option.
3. Adjust the hour, minute, year, month, and day as needed.
4. Select 12-hour or 24-hour format.
5. Confirm your settings.

OPERATING INSTRUCTIONS

The Wiszodet S16 Smart Watch offers a variety of functions accessible via its touch screen.



Image: The watch interface showing various application icons, including Camera, Games, Music, and more.

1. Camera and Video Recording

Capture photos and record videos directly from your watch.

1. From the main menu, tap the "Camera" icon to open the camera application.
2. Tap the screen to take a photo.
3. To switch to video recording, look for a video camera icon within the camera app and tap it.
4. Tap again to start recording, and tap once more to stop.
5. Photos and videos are saved to the watch's internal storage.



Image: The watch demonstrating its selfie camera function, with options for video recording and playback.

2. Games

The watch includes 24 built-in puzzle games designed to engage and entertain.

1. Tap the "Game" icon from the main menu.
2. Select from the list of available games.
3. Follow the on-screen instructions to play.



Image: A visual representation of the 24 puzzle games available on the watch, such as 'Fruit Weighing' and 'Time Teaching'.

3. Music Player

Listen to music files stored on the watch.

1. Tap the "Music" icon.
2. Browse and select the desired audio file.
3. Use the on-screen controls for playback (play, pause, skip).



Image: The watch displaying its MP3 player interface, with a child listening to music in the background.

4. Pedometer

Track daily steps and estimated calories burned.

1. Tap the "Pedometer" icon.
2. The watch will automatically begin tracking steps when worn.
3. View your daily step count and calorie estimates on the screen.



Image: The watch highlighting its fitness tracking features, including pedometer, stopwatch, and timer, with children

engaged in physical activity.

5. Alarm Clock

Set alarms for reminders or daily routines.

1. Tap the "Alarm" icon.
2. Tap "+" or "Add Alarm" to set a new alarm.
3. Adjust the time and select repeat days if desired.
4. Save the alarm.



Image: The watch displaying the alarm clock feature, with a child sleeping, suggesting its use for morning routines.

6. Flashlight

Activate the built-in flashlight for quick illumination.

1. Tap the "Torch" or "Flashlight" icon.
2. Tap again to turn it off.



Image: The watch's flashlight feature in use, providing light for a child reading under a blanket.

7. Voice Recorder

Record short audio messages or notes.

1. Tap the "Voice Recorder" icon.
2. Tap the record button to start recording.
3. Tap again to stop and save the recording.



Image: The watch displaying the voice recorder function, with children singing, indicating its use for capturing audio.

8. Calculator

Perform basic arithmetic calculations.

1. Tap the "Calculator" icon.
2. Use the on-screen keypad to input numbers and operations.

9. Other Features

- **Theme:** Customize the watch face and interface theme.
- **Screensaver:** Select different screensaver options.
- **Stopwatch:** Measure time intervals.
- **Timer:** Set countdown timers.
- **Calendar:** View the current date and navigate through months.
- **Volume Adjustment:** Control the watch's audio output level.
- **Backlight Time:** Adjust how long the screen stays lit.



Image: A collage showcasing various watch functions including alarm, recorder, music, calculator, flashlight, and calendar, with children demonstrating their use.

MAINTENANCE

Proper care will extend the life of your Wiszodet S16 Smart Watch.

- Cleaning:** Wipe the watch screen and band with a soft, dry cloth. Avoid harsh chemicals or abrasive materials.
- Water Resistance:** The watch is designed for daily use and splash resistance, but it is not suitable for swimming or showering. Avoid submerging the watch in water.
- Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- Screen Protector:** Apply the included screen glass protector to prevent scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Low battery.	Charge the watch for at least 30 minutes.

Problem	Possible Cause	Solution
Screen is unresponsive.	Temporary software glitch.	Restart the watch by holding the Home button.
Cannot save photos/videos.	Insufficient storage space.	Delete old files or transfer them to a computer.
Time/Date is incorrect.	Settings need adjustment.	Go to Settings > Time & Date to adjust.

SPECIFICATIONS

Feature	Detail
Model Name	S16
Brand	Wiszodet
Screen Size	1.54 Inches
Display Type	Touchscreen
Battery Type	1 Lithium Polymer (included)
Connectivity	USB
GPS	No GPS
Camera Resolution	HD (not full HD)
Product Dimensions	9.4 x 2.4 x 0.71 inches
Item Weight	0.353 ounces (10 Grams)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Wiszodet website. Keep your proof of purchase for any warranty claims.