

[Manuals.plus](#) /

› [SHARE SUNSHINE](#) /

› SHARE SUNSHINE Wireless Vertical Ergonomic Optical Mouse User Manual

SHARE SUNSHINE Vertical Mouse

SHARE SUNSHINE Wireless Vertical Ergonomic Optical Mouse User Manual

Model: Vertical Mouse

1. INTRODUCTION

Thank you for choosing the SHARE SUNSHINE Wireless Vertical Ergonomic Optical Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your new mouse. This ergonomic mouse is designed to promote a natural hand and wrist posture, potentially reducing strain during extended use.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Wireless Vertical Ergonomic Optical Mouse
- 1 x 2.4G USB Receiver (located in the bottom compartment of the mouse)
- 1 x Instruction Manual

Note: 2 AAA batteries are not included and must be purchased separately.

3. SETUP GUIDE

3.1 Installing Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2 Connecting the USB Receiver

1. Remove the 2.4G USB receiver from its storage slot on the bottom of the mouse.
2. Plug the USB receiver into an available USB port on your computer (PC, laptop, Mac).
3. The computer should automatically detect and install the necessary drivers. This may take a few moments.
4. Once installed, the mouse is ready for use.


SCIENTIFIC ERGONOMIC VERTICAL MOUSE

Supports palm and relieve wrist strain pain



Squeezes nerves in hand causing pain and discomfort

STANDARD MOUSE

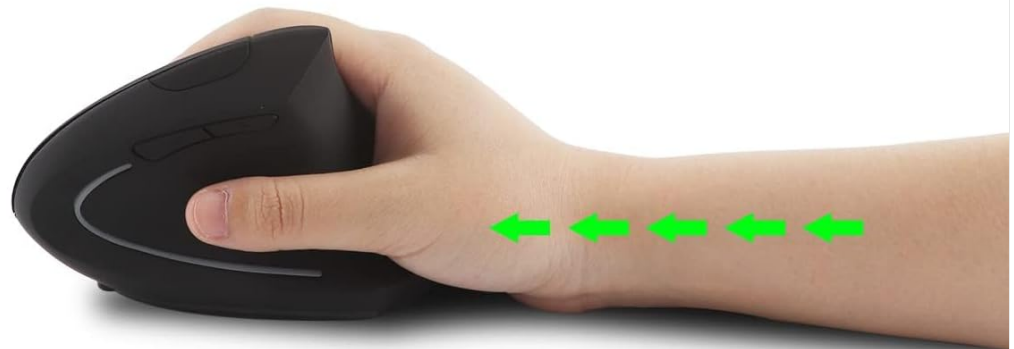

ERGONOMIC MOUSE

Keeps carpal tunnel syndrome from hurting, relax your hand and wrist

Provides healthy neutral position/Enhances comfort

Image: The SHARE SUNSHINE Wireless Vertical Ergonomic Optical Mouse shown alongside its USB receiver, illustrating the wireless connection components.

4. OPERATING INSTRUCTIONS

4.1 Mouse Buttons and Functions

VERTICAL WIRELESS MOUSE



POWER SAVING

800/1200/1600 DPI

ERGONOMIC DESIGN

Image: A diagram highlighting the various buttons on the SHARE SUNSHINE Vertical Mouse, including the Left Button, Right Button, Scroll Wheel, DPI Switch Button, Previous Page Button, and Next Page Button.

- **Left Button:** Standard click function.
- **Right Button:** Standard right-click function.
- **Scroll Wheel:** Scroll up or down through documents and web pages.
- **DPI Switch Button:** Located near the top, this button allows you to cycle through DPI settings.
- **Previous Page Button (Side):** Navigates back in web browsers or file explorers.
- **Next Page Button (Side):** Navigates forward in web browsers or file explorers.

4.2 Adjusting DPI Sensitivity

The mouse features adjustable DPI (Dots Per Inch) settings to control cursor speed and precision. Press the DPI Switch Button to cycle between the following sensitivities:

- **800 DPI:** Lower sensitivity for precise tasks.
- **1200 DPI:** Medium sensitivity for general use.
- **1600 DPI:** Higher sensitivity for faster cursor movement.

4.3 Energy-Saving Mode

To conserve battery life, the mouse will automatically enter a power-saving mode after 8 minutes of inactivity. To wake the mouse, simply press any button (left or right click).

The mouse will also power off completely when your computer is shut down or the USB receiver is disconnected.



Image: The SHARE SUNSHINE Vertical Mouse depicted in various usage scenarios, including an office, home, and gaming environment, highlighting its versatility.

5. MAINTENANCE

To ensure optimal performance and longevity of your mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when cursor movement becomes erratic or unresponsive. Always use fresh AAA batteries.
- **Storage:** When not in use for extended periods, remove the batteries and store the mouse in a dry, cool place.

6. TROUBLESHOOTING

If you encounter issues with your SHARE SUNSHINE Vertical Mouse, please refer to the following common solutions:

Problem	Solution
Mouse not responding	Ensure batteries are correctly installed and not depleted. Replace if necessary. Verify the USB receiver is securely plugged into a working USB port. Try a different port. Ensure the mouse is within range of the receiver (up to 33 feet). Restart your computer.

Problem	Solution
Erratic cursor movement	Clean the optical sensor on the bottom of the mouse. Ensure you are using the mouse on a suitable surface (non-reflective, opaque). Check for interference from other wireless devices. Replace batteries.
Side buttons not working	Ensure the mouse is properly connected. These buttons are typically for navigation in web browsers/file explorers. Their functionality may vary in other applications.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	4.92 x 3.23 x 0.04 inches
Item Weight	2.82 ounces
Connectivity Technology	Wireless (2.4G USB Receiver)
Movement Detection Technology	Optical
DPI Settings	800 / 1200 / 1600 DPI
Compatibility	Windows 7/8/10/XP, Vista, Mac OS X 10.4 and above



Image: A technical drawing illustrating the dimensions of the SHARE SUNSHINE Vertical Mouse, showing its length, width, and height.

8. WARRANTY AND SUPPORT

8.1 Product Warranty

The SHARE SUNSHINE Wireless Vertical Ergonomic Optical Mouse comes with a 12-month warranty from the date of purchase, covering manufacturing defects. This warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact SHARE SUNSHINE customer service. We aim to provide a 24-hour response time for customer issues.

Please refer to the contact information provided on the product packaging or the official SHARE SUNSHINE website for the most up-to-date support details.

© 2023 SHARE SUNSHINE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B5GQ7NLT>

More documents and user manuals: **<https://manuals.plus/>**