

[Manuals.plus](#) /

> [NIKICAM](#) /

> Digital Camera, NIKICAM 4K 56MP Vlogging Cameras for Photography YouTube with Manualfocus, 16X Digital Zoom(Include 32GB TF Card & 2 Rechargeable Batteries) -Black

NIKICAM 607986584786

NIKICAM 4K 56MP Digital Camera User Manual

MODEL: 607986584786

Introduction

Thank you for choosing the NIKICAM 4K 56MP Digital Camera. This camera is designed for amateurs and beginners, offering vivid 4K video recording and stunning 56MP still images. It features a 3-inch LCD screen, 16X digital zoom, continuous shooting, self-timer, and a built-in microphone and speaker for video recording.

Please read this manual carefully before using your camera to ensure proper operation and to maximize your photography experience.

What's Included in the Box:

- 1 x NIKICAM Digital Camera
- 2 x Rechargeable Li-ion Batteries
- 1 x 32GB SD Card
- 1 x Type C USB Cable
- 1 x Lanyard
- 1 x User Manual (this document)



Figure 1: Packaging Accessories - Digital Camera with 32GB Micro SD Card, Type C cable, Rechargeable Batteries, and Lanyard.

Video 1: NIKICAM CAMERA - Package Contents. This video demonstrates the items included in the camera package.

Setup

1. Installing the Battery and SD Card

Before first use, ensure the batteries are fully charged. Insert the rechargeable Li-ion batteries into the battery compartment at the bottom of the camera. Insert the 32GB SD card into the designated slot. Ensure both are inserted correctly to avoid damage.



Figure 2: Digital Camera with batteries and SD card ready for installation.

Video 2: NIKICAM CAMERA - How to install the battery and SD card. This video provides a step-by-step guide for installing the battery and SD card.

2. Formatting the SD Card

It is recommended to format the SD card with your digital camera before its first use to ensure optimal performance and compatibility. This process will erase all data on the card, so back up any important files if it's not a new card.

Video 3: NIKICAM CAMERA - How to format an SD card. This video demonstrates the process of formatting the SD card directly on the

Operating the Camera

1. Basic Camera Functions

The NIKICAM camera captures vivid 4K videos and 56MP pictures. It features a 3-inch LCD screen for easy viewing and navigation. The camera is designed with manual focus, meaning you will need to adjust the lens to achieve sharp images. The lens is fixed.

Familiarize yourself with the camera's buttons and controls, including the power button, shutter button, zoom controls (T/W), and menu navigation buttons.



Video 4: How to use the camera. This comprehensive video covers various aspects of operating the NIKICAM camera.

2. Using the Built-in Flash

The camera is equipped with a built-in flash to assist in low-light conditions. You can adjust the flash settings (Force Flash, No Flash, Auto Flash) for both video and photo modes. Press the flash button (often indicated by a lightning bolt icon) to cycle through the available flash options.

Built-in Flash



Figure 3: Built-in Flash demonstration, showing the effect of flash in a dark environment.

Video 5: NIKICAM CAMERA - How to turn on the flash. This video guides you through activating and adjusting the camera's flash.

3. Using Digital Zoom

The camera features a 16X digital zoom. Use the 'T' (Telephoto) and 'W' (Wide) buttons to zoom in and out. Digital zoom magnifies the image electronically, which may result in some loss of image quality compared to optical zoom.

16X Digital Zoom

16X magnification for more detail

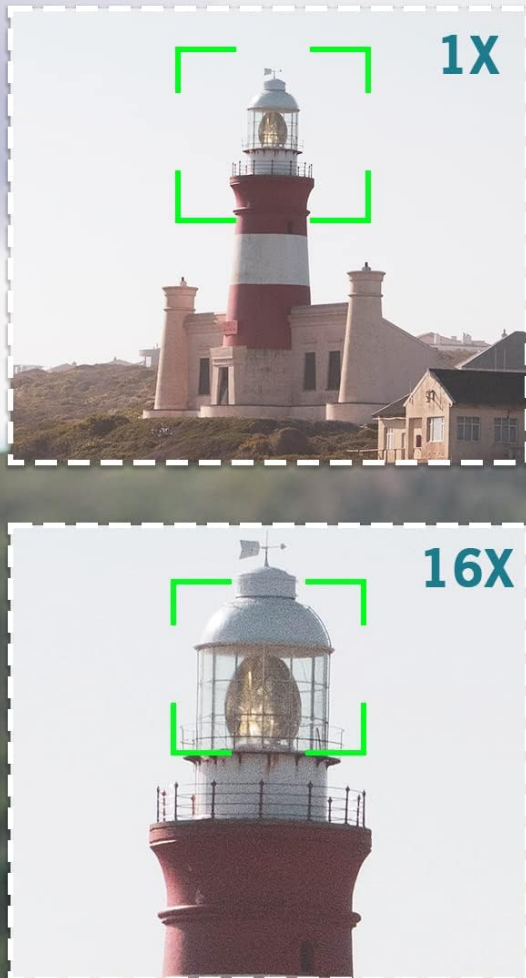


Figure 4: 16X Digital Zoom in action, demonstrating the magnification capability.

4. Changing Shooting Modes

The camera supports various shooting modes, including video, photo, continuous shooting, self-timer, time-lapse, and slow motion. Navigate through the menu to select your desired mode. The camera also offers a pause function during video recording.

Time-Lapse



Slow Motion



Figure 5: Examples of Time-Lapse and Slow Motion capabilities.

Video 6: NIKICAM CAMERA - How to change the shooting mode. This video demonstrates how to switch between different shooting modes on the camera.

5. Connecting to a Computer (Webcam & Data Transfer)

The NIKICAM camera can function as a webcam for live streaming or video calls by connecting it to your PC via the included USB cable. It also supports mass storage mode for transferring photos and videos to your computer. When connected as a webcam, some camera features may not be accessible. Ensure the camera is powered on and select the appropriate USB mode (PC Camera or Mass Storage) from the camera's menu when prompted.

Use as a Webcam

Video call & live stream as you like



Figure 6: Using the camera as a webcam for video calls or live streaming.

Video 7: NIKICAM CAMERA - 3 modes of connection to the computer. This video explains how to connect the camera to a computer for different purposes, including charging, mass storage, and webcam mode.

Maintenance

Proper maintenance will extend the life of your NIKICAM camera.

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries.
- **Battery Care:** Fully charge batteries before use. Do not expose batteries to excessive heat or dispose of them in fire. Recycle used batteries according to local regulations.
- **SD Card Care:** Always power off the camera before inserting or removing the SD card to prevent data corruption.

Troubleshooting

If you encounter issues with your NIKICAM camera, please refer to the following common solutions:

Problem	Possible Cause / Solution
Camera does not turn on.	Ensure batteries are fully charged and inserted correctly. Try using the second rechargeable battery provided. Check if the battery compartment is securely closed.
SD card not recognized or error message.	Ensure the SD card is inserted correctly and fully. Format the SD card using the camera's menu (this will erase all data). Try a different compatible SD card.
Images are blurry.	This camera features manual focus. Adjust the lens to achieve sharp focus. Ensure there is adequate lighting. Hold the camera steady when taking pictures.
Cannot connect to computer as webcam.	Ensure the USB cable is securely connected to both the camera and the computer. Select "PC Camera" mode on the camera's screen when prompted after connecting. Check your computer's device manager for driver issues.

Specifications

Feature	Detail
Brand	NIKICAM
Model Name	4K 56MP
Model Number	607986584786
Effective Still Resolution	56 MP
Video Resolution	4K DCI 2160p, 1080p
Photo Sensor Technology	CMOS
Digital Zoom	16 x
Screen Size	3 Inches
Display Type	LCD
Focus Type	Manual Focus (MF)
Image Stabilization	Digital
Flash Memory Type	Micro SD (32 GB included)
Connectivity Technology	USB
Battery Type	Lithium Ion (2 x 1500mAh included)

Feature	Detail
Battery Average Life	1.5 Hours
Item Weight	0.4 Kilograms
Supported File Format	RAW, JPEG
Shooting Modes	Easy, Manual, Custom, Shutter Priority
Water Resistance Level	Not Water Resistant

Warranty and Support

NIKICAM offers a one-year warranty for this product. If you have any questions, require assistance, or wish to learn more about your camera, please do not hesitate to contact our service staff. We are available to provide quick replies and support.

For support, please visit the official NIKICAM store or contact customer service through your purchase platform.

Online Support: [NIKICAM Official Store](#)

© 2024 NIKICAM. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

