

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE 3-in-1 Waffle Maker, Sandwich Maker, and Panini Press Instruction Manual](#)

## FOHERE AN-780

# FOHERE 3-in-1 Waffle Maker, Sandwich Maker, and Panini Press Instruction Manual

Model: AN-780

## INTRODUCTION

Thank you for choosing the FOHERE 3-in-1 Waffle Maker, Sandwich Maker, and Panini Press. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of delicious meals with ease. Please read this manual thoroughly before operation to ensure safe and efficient use.

## Important Safety Instructions

- Always unplug the appliance from the power outlet when not in use and before cleaning.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- The appliance housing may become hot during operation. Use the cool-touch handle for opening and closing.

## PRODUCT COMPONENTS

The FOHERE 3-in-1 appliance comes with interchangeable plates for various cooking needs.



Image: The FOHERE 3-in-1 Waffle Maker with its main unit and two sets of interchangeable plates (waffle and sandwich).

- Main Unit: Features a stainless steel top cover, indicator lights (red for power, green for ready), and a temperature control knob.
- Cool-Touch Handle: Designed for safe opening and closing during operation.
- Removable Plates:
  - Waffle Plates: For making classic waffles.
  - Sandwich Plates: For sealing and toasting sandwiches.
  - Grill Plates: For grilling meats, vegetables, and paninis.

# 3 in 1 SANDWICH MAKER

Grill plate for  
steak, chicken



Waffle Plate for waffle



Sandwich Plate for  
sandwich, panini, toast



Image: A visual representation of the three distinct plate types: grill plates for steak and chicken, waffle plates for waffles, and sandwich plates for sandwiches, paninis, and toast.

## SETUP AND PLATE INSTALLATION

Before first use, wipe down the appliance exterior with a damp cloth. Wash the removable plates with warm, soapy water, rinse thoroughly, and dry completely. The plates are non-stick and easy to clean.

## Installing/Removing Plates:

1. Ensure the appliance is unplugged and completely cool.
2. To remove a plate, locate the release buttons on the side of the appliance (as shown in the video). Press the button firmly, and the plate will pop out.
3. To install a plate, align the tabs on the back of the plate with the slots in the appliance. Slide the plate in until it clicks securely into place. Ensure both top and bottom plates are correctly installed.

Your browser does not support the video tag.

Video: "FOHERE 3 IN 1 Waffle Maker" - This video demonstrates how to easily switch between the different cooking plates (sandwich, waffle, grill) by pressing the release buttons and sliding the plates in and out. It also shows the heating elements and the temperature control knob.

## OPERATING INSTRUCTIONS

The FOHERE 3-in-1 appliance features a 1200W heating system for fast and efficient cooking, along with a 5-gear temperature control for precise results.

# 1200 WATT POWERFUL

Enjoy a delicious breakfast in 5 minutes



Image: The appliance highlighting its 1200W powerful heating capability, enabling quick preparation of meals, such as waffles in approximately 5 minutes.

## Temperature Control and Indicator Lights:

- The appliance has an independent ON/OFF button and a 5-gear temperature control knob.
- Turn the knob to "0" to turn the appliance off.

- Settings 1-5 control the heating intensity, with 5 being the fastest heating.
- Red Indicator Light: Stays on when the appliance is plugged in and powered, indicating it is receiving electricity.
- Green Indicator Light: Illuminates when the appliance is preheating and turns off when the desired temperature is reached, indicating it is ready for cooking.

## 5 GEAR TEMPERATURE CONTROL



Image: Close-up of the 5-gear temperature control knob, ranging from "0" (off) to "5" (fast heating), allowing users to select the appropriate temperature for different foods.

## Using the Sandwich Maker:

1. Install the sandwich plates.
2. Plug in the appliance and set the temperature (typically 3-5 for sandwiches). The green light will turn off when preheated.
3. Lightly butter the bread (optional, for extra crispiness).
4. Place your sandwich ingredients between two slices of bread and place them on the bottom plate.
5. Close the lid and latch the handle. Cook for 3-5 minutes, or until golden brown and cheese is melted.

# SANDWICH MAKER



## Step 1

Prepare the ingredients:  
fried eggs, ham, bread,  
vegetables, cheese



Preheat the  
Sandwich Maker

## Step 2



Butter the bread and  
place the prepared  
ingredients

## Step 3



## Step 4

Wait 3 to 5 minutes for  
a delicious sandwich



Image: A step-by-step guide illustrating the process of making a sandwich: preparing ingredients, preheating, buttering bread and placing ingredients, and waiting for a delicious sandwich.

Image: Example of perfectly grilled cheese sandwiches made with the appliance.

## Using the Waffle Maker:

1. Install the waffle plates.
2. Plug in the appliance and set the temperature (typically 4-5 for waffles). Allow it to preheat until the green light turns off.
3. Pour waffle batter onto the center of each waffle plate, ensuring not to overfill.
4. Close the lid and latch the handle. Cook for 3-6 minutes, or until waffles are golden brown and crispy.



Image: The waffle maker in action, producing fluffy waffles, with eggs and tomatoes nearby, suggesting breakfast preparation.



Image: A stack of golden brown waffles topped with butter, maple syrup, and fresh strawberries.

## Using the Panini Press / Electric Grill:

1. Install the grill plates.
2. Plug in the appliance and set the temperature (typically 4-5 for grilling). Allow it to preheat until the green light turns off.
3. Place desired food items (e.g., steak, chicken, vegetables, paninis) directly onto the grill plates.
4. Close the lid. Cooking time will vary depending on the food item and desired doneness.

# ELECTRIC GRILL

Perfectly grilling burgers, steaks, veggies, bacon, chicken, etc.



Image: The electric grill function demonstrated with various foods such as sizzling steak, roasted vegetables, sausages, burritos, and fried eggs.

Image: A platter featuring grilled steak, sausages, and an assortment of grilled vegetables including bell peppers, green beans, and tomatoes.

## CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your FOHERE appliance. The non-stick plates are designed for easy cleaning.

### Cleaning:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Remove the cooking plates. These plates are Teflon-coated, high-quality non-stick, water, and oil repellent.
- Wash the plates with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- Rinse thoroughly and dry completely before re-installing or storing.
- The plates are dishwasher safe for added convenience.
- Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.



Image: Demonstrates the ease of cleaning the non-stick plates by hand wiping and their compatibility with dishwashers.

### Storage:

- Ensure the appliance is clean and dry before storing.
- The compact design (11.2"D x 9"W x 4.6"H) allows for vertical or horizontal storage to save space.
- The handle latches shut for secure carrying and storage.
- Store extra plates in a safe place to prevent scratches.

# FOHERE

## Compact Storage

Compact design allows you to stow it away in the upright position, plus there's a power cord storage area at the bottom for easy storage.

## Product Size

11.2 \* 9.01 \*4.64 in

## Plate Size

10.23\*4.96in

## Weight

8.4LB



Image: Illustrates the compact size and design of the FOHERE Panini Press, showing its dimensions (11.2 x 9.01 x 4.64 inches) and how it can be stored upright to save space.

## SPECIFICATIONS

<b>Brand</b>	FOHERE
<b>Model Number</b>	AN-780
<b>Power</b>	1200 Watts
<b>Voltage</b>	120V
<b>Material</b>	Stainless Steel, Non-stick Coating (BPA Free)
<b>Product Dimensions</b>	11.2"D x 9"W x 4.6"H
<b>Item Weight</b>	7.6 Pounds
<b>Included Components</b>	3 Sets Removable Grill Plates (Waffle, Sandwich, Grill)
<b>Special Features</b>	Temperature Control, Cool Touch, Dishwasher Safe Plates, Easy to Clean



## Waffle Maker

Gear: 5

Ingredients: 2 eggs, 240g plain flour, 240ml milk, 30g melted butter

2 tablespoon sugar

5 teaspoons baking powder

1/4 teaspoon salt(options)

Image: A comparison chart highlighting key features of the FOHERE New-generation Waffle Maker, including high-quality stainless steel, independent temperature control, 5-gear temperature setting, 1200W power, and 3 sets of plates.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Temperature knob set to "0".	Ensure the appliance is securely plugged into a working outlet. Check the temperature knob is set to a number (1-5).
Food is not cooking evenly or quickly.	Temperature setting is too low; Insufficient preheating time.	Increase the temperature setting. Allow the appliance to fully preheat until the green indicator light turns off.

Problem	Possible Cause	Solution
Plates are difficult to remove or install.	Plates are not aligned correctly; Release buttons not fully pressed.	Ensure the tabs on the plates are correctly aligned with the slots. Press the release buttons firmly until the plate disengages.
Food sticks to the plates.	Plates not properly seasoned (for first use); Excessive sugar in batter (for waffles); Plates not clean.	Ensure plates are clean. For waffles, reduce sugar content if sticking persists. While non-stick, a light brush of oil or butter can be used if needed.

## WARRANTY INFORMATION

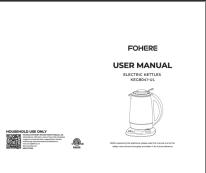
FOHERE provides a limited warranty for this product. Please refer to the product packaging or contact customer support for specific warranty terms and conditions. Keep your purchase receipt as proof of purchase.

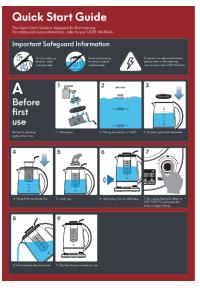
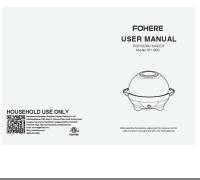
## CUSTOMER SUPPORT

For any questions, concerns, or assistance with your FOHERE 3-in-1 Waffle Maker, please contact our customer support team. You can find contact information on our official website or through your purchase platform. Visit the [FOHERE Store](#) for more products and information.

© 2025 FOHERE. All rights reserved.

## Related Documents - AN-780

	<p><a href="#">FOHERE KEG8041-UL Electric Kettle User Manual</a></p> <p>Comprehensive user manual for the FOHERE KEG8041-UL Electric Kettle, detailing specifications, safety instructions, operation, features like Keep Warm and Custom Temp, maintenance, and troubleshooting.</p>
	<p><a href="#">FOHERE SNJ-159B Yogurt Maker User Manual and Guide</a></p> <p>Comprehensive user manual for the FOHERE SNJ-159B Yogurt Maker. Includes setup instructions, operation guide, basic yogurt recipes, advanced uses for cheese, fermented rice, and natto, troubleshooting tips, maintenance advice, and product specifications.</p>

	<p><a href="#"><b>Fohere Intelligent Tea Master KT600 User Manual: Perfect Tea Brewing Guide</b></a></p> <p>Discover how to achieve perfect tea brews with the Fohere Intelligent Tea Master KT600. This user manual provides comprehensive instructions on operation, safety, care, and troubleshooting for precise temperature-controlled tea making.</p>
	<p><a href="#"><b>FOHERE Tea Master KT-Z1 Quick Start Guide: Brewing Perfect Tea</b></a></p> <p>Learn how to set up and use your FOHERE Tea Master KT-Z1 electric kettle with this quick start guide. Includes safety information, initial cleaning, and brewing instructions for perfect tea.</p>
	<p><a href="#"><b>FOHERE RH-906 Popcorn Maker User Manual - Operation, Care, and Troubleshooting</b></a></p> <p>Comprehensive user manual for the FOHERE RH-906 Popcorn Maker. Includes important safety instructions, operating guidance, care and cleaning tips, and troubleshooting advice for household use.</p>
	<p><a href="#"><b>FOHERE KC211 Coffee Maker User Manual - Hot &amp; Iced Coffee Brewer Instructions</b></a></p> <p>Comprehensive user manual for the FOHERE KC211 Coffee Maker, detailing operation, safety, cleaning, and troubleshooting for both hot and iced coffee brewing. Includes product parameters and indicator light explanations.</p>