

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Little Live Pets](#) /

› [Little Live Pets Surprise Chick Interactive Collectible Toy Instruction Manual](#)

Little Live Pets 26451

Little Live Pets Surprise Chick Instruction Manual

Brand: Little Live Pets | Model: 26451

INTRODUCTION

The Little Live Pets Surprise Chick is an interactive collectible toy designed to simulate the hatching and interaction with a baby chick. This manual provides essential information for setting up, operating, and maintaining your Surprise Chick to ensure an enjoyable experience. Each chick offers unique sounds and movements, and the hatching process can be repeated multiple times.

WHAT'S IN THE Box

- 1 Chick
- 1 Egg
- 1 Instruction Manual
- 3 LR44 Batteries (included)



Image: Front packaging of the Little Live Pets Surprise Chick, illustrating the product contents and features.

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Adult supervision is encouraged for young children. Remove all packaging attachments before giving this product to a child. Flocking may irritate sensitive or broken skin. Discontinue use if irritation occurs. If flocking hair is ingested, flush with clean water. Important: Read all instructions before using this toy. Colors and contents may vary.

SETUP

Battery Installation

Your Surprise Chick comes with 3 LR44 batteries included. If replacement is needed, ensure the toy is switched off. Locate the battery compartment on the underside of the chick. Use a small Phillips head screwdriver to open the compartment, replace the batteries, and securely close the cover.



Image: The bottom of the Surprise Chick, highlighting the battery compartment for easy access.

Preparing for First Hatch

1. Ensure the chick is switched to the 'ON' position.
2. Place the chick's feet into the designated slots within the egg base.
3. Close the two halves of the egg around the chick, ensuring they snap securely into place.
4. Place the assembled egg on a flat surface.



Image: A white Surprise Chick positioned beside its egg, demonstrating how to prepare for hatching.

OPERATING INSTRUCTIONS

Hatching Your Chick

Once the chick is correctly placed inside the egg and switched on, it will begin to tap and chirp from within. After a short period, the egg will crack open, and your Surprise Chick will hop out. This process mimics a real chick hatching.



Image: A pink Surprise Chick actively hatching from its egg, with the egg halves split open.

Interacting with Your Chick

- **Petting:** Gently pet your Lil' Chick on its head. It will chirp and respond to your touch. The more you pet it, the happier it will become and may even sing a sweet tune.
- **Hopping:** After hatching, the chick will hop around on its own.



Image: A child interacting with a pink Surprise Chick by gently petting its head.

Repeat Play

The hatching fun can be repeated. Simply place the chick back into its egg, ensuring its feet are aligned with the slots, and close the egg halves. The chick will then be ready to hatch again.



Image: A white Surprise Chick placed back into its egg, demonstrating the toy's re-hatching feature.

Official Product Video

Your browser does not support the video tag.

Video: An official product video from Moose Toys LLC, demonstrating the Little Live Pets Surprise Chick hatching and interacting.

MAINTENANCE

To clean your Surprise Chick, gently wipe it with a damp cloth. Do not immerse the toy in water. Avoid using harsh chemicals or abrasive cleaners. Ensure the toy is completely dry before storing or further use.

TROUBLESHOOTING

- Chick not hatching or hopping:** Ensure the chick is switched to the 'ON' position. Check that the batteries are correctly installed and have sufficient power. Replace batteries if necessary. Verify that the chick's feet are properly seated in the egg base slots.
- Irregular movements or sounds:** This may indicate low battery power. Replace the LR44 batteries.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.6 x 2.6 x 2.83 inches
Item Weight	2.82 ounces
Item Model Number	26451
Manufacturer Recommended Age	5 - 15 years
Batteries	3 LR44 batteries required (included)
Release Date	December 21, 2022
Manufacturer	MOOSE TOYS LLC

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Little Live Pets Surprise Chick, please refer to the contact information provided on the product packaging or visit the official Little Live Pets website. Keep your proof of purchase for warranty claims.

Official Brand Store: [Little Live Pets Store](#)

© 2024 Little Live Pets. All rights reserved.