

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher-Price](#) /
- › [Fisher-Price Astro Kitty SpaceSaver Jumperoo Instruction Manual](#)

### Fisher-Price HNH95

# Fisher-Price Astro Kitty SpaceSaver Jumperoo Instruction Manual

Model: HNH95

## 1. PRODUCT OVERVIEW

The Fisher-Price Astro Kitty SpaceSaver Jumperoo is an infant activity center designed to engage babies through bouncing, music, lights, and developmental toys. Its space-saving design allows for easy folding and storage.

### Key Features:

- Interactive activity center with music, sounds, and lights.
- Includes a teether, clicker, and light-up "command center" for sensory engagement.
- Sturdy, free-standing frame for safe bouncing without a doorway.
- Four adjustable height positions to accommodate your baby's growth.
- Space-saving design allows for easy folding, storage, and transport.
- Removable and machine-washable soft seat pad for easy cleaning.



Figure 1: Fully assembled Fisher-Price Astro Kitty SpaceSaver Jumperoo.

## 2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before using this product. Failure to follow these instructions could result in serious injury.

### Important Safety Guidelines:

- **Maximum Weight:** Use only for a child weighing up to 25 lb (11.3 kg).
- **Age/Developmental Stage:** Use only for a child who is able to hold their head upright unassisted and who is not able to walk or climb out of the product.

- Always place the Jumperoo on a flat, level surface.
  - Never leave your child unattended in the Jumperoo.
  - Keep children away from the product during assembly and disassembly.
  - Regularly inspect the product for damaged or missing parts. Do not use if any parts are damaged or missing.
- 

### 3. ASSEMBLY INSTRUCTIONS

Assembly requires adult supervision. Ensure all components are present before beginning.

#### Components:

- Main frame (base and support legs)
- Activity tray
- Seat pad and seat ring
- Toy bar with attached toys
- Batteries (3 AA, not included)

#### Step-by-Step Assembly:

1. Unfold the base frame until it locks securely into place.
2. Attach the support legs to the base, ensuring they click into position.
3. Insert the activity tray onto the support legs.
4. Secure the seat pad into the seat ring, then attach the seat ring to the activity tray.
5. Attach the toy bar to the designated slots on the activity tray. Ensure all toys are securely fastened.
6. Install 3 AA batteries into the battery compartment located on the main activity panel.

For a visual guide on assembly and folding, please refer to the video below:

Your browser does not support the video tag.

Video 1: Demonstration of the Fisher-Price SpaceSaver Jumperoo's assembly and folding for compact storage.

---

### 4. OPERATING INSTRUCTIONS

#### Placing Your Child:

Carefully place your child into the seat, ensuring their feet can comfortably touch the base. Adjust the height as needed.

#### Height Adjustment:

The Jumperoo features four height adjustment positions. Locate the adjustment straps beneath the seat. Press the release buttons and slide the straps to the desired height. Ensure both sides are adjusted evenly and securely locked before placing your child in the product.



## 4 height positions to adjust as baby grows

Figure 2: Adjusting the Jumperoo to one of its four height settings.

### Interactive Play:

- **Music & Lights:** The central "command center" activates music, sounds, and lights when pressed or when your child bounces.
- **Volume Control:** Adjust the volume using the switch on the activity panel.
- **Toy Bar:** Encourage your child to reach for, grasp, and play with the spinners, clackers, and teether on the removable toy bar.



## Toys include light up mission control, removable toy bar & more

Figure 3: Detailed view of the Jumperoo's interactive toys and light-up panel.

### 5. MAINTENANCE AND CARE

#### Cleaning:

- **Seat Pad:** The soft seat pad is removable and machine washable. Use cold water on a gentle cycle. Do not bleach. Tumble dry on low heat.
- **Frame & Toys:** Wipe the frame, activity tray, and plastic toys with a damp cloth and mild soap. Rinse thoroughly and air dry. Do not immerse electronic components in water.



Figure 4: The removable seat pad is machine washable for easy cleaning.

### Battery Replacement:

When sounds and lights become faint or stop working, replace the 3 AA batteries. Ensure correct polarity (+/-) when inserting new batteries. Do not mix old and new batteries or different types of batteries.

## 6. STORAGE AND PORTABILITY

The SpaceSaver Jumperoo is designed for convenient storage and portability. To fold the unit:

1. Remove your child from the Jumperoo.
2. Detach the toy bar by pressing the release buttons on its sides.
3. Locate the folding mechanisms on the base frame (usually marked with buttons or levers). Press these and gently fold the frame inward until it collapses flat.

4. Ensure all parts are securely folded and latched for compact storage or transport.



## Platform easily folds for storage or take along

Figure 5: The Jumperoo folds flat for easy storage and travel.

Watch this video for a demonstration of the folding process:

Your browser does not support the video tag.

Video 2: Detailed demonstration of how to fold the Fisher-Price Baby Bouncer for compact storage.

## 7. TROUBLESHOOTING

### No Sound/Lights:

- Check if the batteries are correctly installed with the proper polarity.
- Replace old batteries with new AA alkaline batteries.
- Ensure the volume is not set to the lowest setting or off.

### Jumperoo Not Bouncing Properly:

- Verify that the height adjustment straps are set correctly for your child's height, allowing their feet to touch the base.
- Ensure the Jumperoo is placed on a firm, flat surface.
- Check for any obstructions around the base or springs.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	HNH95
Product Dimensions (Assembled)	31.1 x 28.35 x 31.5 inches
Item Weight	12.08 pounds
Maximum Weight Recommendation	25 Pounds (11.3 kg)
Batteries Required	3 AA batteries (not included)
Material Type	Plastic
Age Range	Infant (able to hold head upright unassisted, not yet walking/climbing out)
Color/Style	Astro Kitty (Space)

## 9. WARRANTY AND SUPPORT

Fisher-Price products are manufactured to high-quality standards and are backed by a limited warranty. For specific warranty details, product registration, or customer support, please visit the official Fisher-Price website or contact their customer service department.

You can find more information and support at the [Fisher-Price Store on Amazon](#).