

ABBIDOT T30

ABBIDOT Dog Training Collar User Manual

Model: T30

INTRODUCTION

Thank you for choosing the ABBIDOT Dog Training Collar. This device is designed to assist in training your dog effectively and humanely, helping to correct unwanted behaviors. It features sound, light, and vibration modes with adjustable intensity levels, a long control range, and a durable, waterproof design. Please read this manual thoroughly before use to ensure proper operation and the safety of your pet.

PRODUCT COMPONENTS

- Remote Transmitter
- Receiver Collar
- Adjustable TPU Strap
- USB Charging Cable
- User Manual

SETUP

1. Charging the Devices

Before first use, fully charge both the remote transmitter and the receiver collar. Connect the USB charging cable to the charging ports on each device and plug the other end into a standard USB power adapter (not included). The indicator lights will show charging status and turn solid when fully charged.

2. Pairing the Remote and Receiver

1. Turn on the remote transmitter.
2. Press and hold the power button on the receiver collar until the indicator light flashes rapidly.
3. Within 10 seconds, press any training mode button on the remote transmitter (e.g., Vibration button).
4. The receiver collar's indicator light will stop flashing and remain solid, indicating successful pairing.
5. If pairing fails, turn off both devices and repeat the steps.

3. Fitting the Collar

Proper fit of the receiver collar is crucial for effective and safe operation. The collar should be snug but not too tight. You should be able to fit two fingers comfortably between the collar strap and your dog's neck. Ensure the contact points on the receiver are touching your dog's skin. The adjustable TPU strap accommodates neck sizes from 16 cm to 62 cm, suitable for dogs weighing 5-55 kg.

DESIGN DE PRÉVENTION DES CONTACTS ACCIDENTELS

ABBI-TES

Support de type bouton avec verrouillage de sécurité





LUMIÈRE DE SUIVI



VIBRATION



À TONALITÉ CLAIRE



STIMULATION STANDARD
(1~15 niveaux)



STIMULATION RENFORCÉE
(16~36 niveaux)



Image: The ABBIDOT remote transmitter and receiver collar, demonstrating the components.

OPERATING INSTRUCTIONS

Remote Transmitter Overview





Image: Front view of the ABBIDOT remote control, showing the display and buttons.

The remote features an LCD display for clear visibility, even outdoors, with a wide 170-degree viewing angle and low power consumption. It allows for easy adjustment of stimulation levels.

LCD HAUTE DÉFINITION

AFFICHAGE CLAIR (Y COMPRIS EN PLEIN AIR)



👁️ Facile à voir de jour comme de nuit

📺 Champ de vision large de 170°

💡 Faible consommation d'énergie

Image: Close-up of the remote's high-definition LCD display, showing icons for sound, vibration, battery, and signal strength.

Training Modes

The ABBIDOT training collar offers three primary training modes:

- **Sound Mode:** Emits an audible tone. Useful for attracting attention or as a warning.
- **Light Mode:** Activates a light on the receiver collar. Can be used for visibility in low light conditions or as a visual cue.
- **Vibration Mode:** Delivers a gentle vibration. Adjustable across 99 levels to suit your dog's temperament and size.

To activate a mode, press the corresponding button on the remote. Use the '+' and '-' buttons or the rotary dial to adjust the intensity level for vibration.

Range and Waterproofing

The collar boasts a control range of up to 1000 meters (approximately 3300 feet) in open areas, allowing for effective training both indoors and outdoors. The receiver collar is IPX7 waterproof, meaning it can withstand immersion in water up to 1 meter for 30 minutes, making it suitable for use in various weather conditions or near water.



Image: A hand holding the ABBIDOT remote, illustrating the 1000m control range and IPX7 waterproof rating, with a dog in the background.

MAINTENANCE

- **Cleaning:** Regularly clean the receiver collar and remote with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To prolong battery life, avoid fully discharging the devices frequently. Charge them when the battery indicator is low. If storing for a long period, charge them every few months.

- **Storage:** Store the collar and remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Collar Strap:** Inspect the TPU strap regularly for signs of wear and tear. Replace if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not responding to remote	Not paired; Low battery; Out of range	Re-pair devices; Charge devices; Move closer to the receiver
No vibration output	Vibration level set to 0; Receiver not properly fitted	Increase vibration level; Adjust collar fit to ensure contact
Remote display is dim or blank	Low battery	Charge the remote transmitter
Shortened range	Obstacles (buildings, trees); Interference	Move to an open area; Avoid areas with strong electromagnetic interference

SPECIFICATIONS

- **Model:** T30
- **Training Modes:** Sound, Light, Vibration (99 levels)
- **Control Range:** Up to 1000 meters (in open areas)
- **Waterproof Rating:** IPX7 (Receiver Collar)
- **Collar Adjustment:** 16 - 62 cm (6.3 - 24.4 inches)
- **Suitable Dog Weight:** 5 - 55 kg (11 - 121 lbs)
- **Battery Type:** Lithium-ion (included)
- **Product Dimensions (Remote):** Approximately 14 x 5 x 0.1 cm
- **Product Weight (Remote):** Approximately 0.03 grams

WARRANTY AND SUPPORT

ABBIDOT products are designed for quality and reliability. For warranty information, technical support, or any questions regarding your product, please refer to the contact information provided on the product packaging or visit the official ABBIDOT website. Please retain your proof of purchase for warranty claims.

For further assistance, you may visit the ABBIDOT brand store on Amazon:[ABBIDOT Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question