

ONN 100069992

ONN 43-Inch FHD 1080p LED Smart TV User Manual

Model: 100069992

[Introduction](#)[Safety Information](#)[What's in the
Box](#)[Setup](#)[Operating](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty &
Support](#)

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ONN 43-Inch FHD 1080p LED Smart TV, Model 100069992. Please read this manual thoroughly before using your television to ensure optimal performance and safety. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- **Power Source:** Connect the TV only to a power outlet of the specified voltage.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth.
- **Wall Mounting:** Use a VESA-compatible wall mount and ensure it is installed by qualified personnel following the mount manufacturer's instructions.
- **Lightning:** Unplug the TV during lightning storms or when unused for long periods.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. WHAT'S IN THE BOX

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact customer support.

- ONN 43-Inch FHD 1080p LED Smart TV
- Remote Control
- Power Cord
- Quick Start Guide (not included in this manual)

Note: *This renewed product does not include a TV stand. A wall mount is provided for installation.*

4. SETUP

4.1 Wall Mounting the TV

This television is designed for wall mounting. A VESA-compatible wall mount is included. Ensure the wall mount is securely fastened to a suitable wall structure capable of supporting the TV's weight.

1. Consult the instructions provided with your wall mount for specific installation steps.
2. Attach the wall mount brackets to the rear VESA mounting holes on the TV using appropriate screws.
3. Carefully lift the TV and secure it to the wall plate according to the wall mount instructions.



Image 1: ONN 43-Inch TV shown with the included wall mount bracket.

4.2 Connecting Peripherals

Connect external devices such as cable boxes, Blu-ray players, or gaming consoles to the TV's HDMI ports. Ensure the TV is unplugged before making any connections.

- **HDMI:** Use HDMI cables to connect devices to the HDMI ports on the back of the TV.
- **Power:** Once all connections are made, plug the power cord into the TV and then into a wall outlet.

4.3 Initial Power On and Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process.

1. Press the **Power** button on the remote control.
2. Follow the on-screen prompts to select your language, country, and connect to your Wi-Fi network.
3. The TV will then guide you through channel scanning (if using an antenna) and smart TV account setup.

5. OPERATING THE TV

5.1 Remote Control Functions

The included remote control features a simplified design with approximately 20 buttons for easy navigation.

- **Power Button:** Turns the TV on or off.
- **Navigation Buttons (Arrow Keys):** Move through menus and options.
- **OK/Enter Button:** Confirms selections.
- **Home Button:** Returns to the Smart TV home screen.
- **Volume Up/Down:** Adjusts the volume level.
- **Channel Up/Down:** Changes channels (for antenna/cable input).
- **Input Button:** Selects input sources (HDMI 1, HDMI 2, etc.).
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix, YouTube.

5.2 Smart TV Features

Your ONN Smart TV provides instant access to a wide range of streaming services and applications.



Image 2: Front view of the ONN 43-Inch TV screen showing various streaming app icons.

- **Accessing Apps:** From the home screen, navigate to and select your desired streaming application (e.g., Netflix, Disney+, HBO Max, Prime Video, YouTube).
- **Internet Connection:** A stable internet connection is required to use smart TV features.
- **Account Login:** You will need to log in to your accounts for each streaming service.

5.3 Picture and Sound Settings

Customize your viewing and listening experience through the TV's settings menu.

- **Picture Modes:** Select from preset picture modes (e.g., Standard, Movie, Vivid) or customize brightness,

contrast, color, and sharpness.

- **Sound Modes:** Choose from various sound modes (e.g., Standard, Music, Movie) or adjust bass and treble settings.

6. MAINTENANCE

Proper care ensures the longevity and optimal performance of your television.

- **Screen Cleaning:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Do not spray liquid directly onto the screen.
- **Cabinet Cleaning:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Keep the ventilation openings clear of dust and debris to prevent overheating.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working	Ensure power cord is securely plugged in; Test outlet with another device
No picture, but sound is present	Incorrect input source selected; Loose HDMI cable	Press the Input button on the remote to select the correct source; Check HDMI cable connections
No sound, but picture is present	Volume muted or too low; External audio system issue	Increase volume or unmute; Check connections to external audio devices
Cannot connect to Wi-Fi	Incorrect password; Router issue; TV too far from router	Verify Wi-Fi password; Restart router; Move TV closer to router or use a Wi-Fi extender
Remote control not working	Dead batteries; Obstruction between remote and TV	Replace batteries; Remove any obstructions; Ensure remote is pointed at the TV's IR sensor

8. SPECIFICATIONS

Feature	Detail
Model Number	100069992
Screen Size	43 Inches (110 cm visible diagonal)
Display Technology	LED
Resolution	1080p Full HD
Aspect Ratio	16:9
Supported Internet Services	Amazon Instant Video, Netflix, YouTube, Disney+, HBO Max, Prime Video
Connectivity Technology	HDMI
Mounting Type	Wall Mount (VESA compatible)

Feature	Detail
Item Weight	Approximately 16 pounds
Package Dimensions	Approximately 45 x 25 x 7 inches

9. WARRANTY & SUPPORT

This ONN TV is sold as an Amazon Renewed product. Amazon Renewed products are professionally inspected and tested to work and look like new. If you are not satisfied with your purchase, renewed products are eligible for replacement or refund under the Amazon Renewed Guarantee.

For specific warranty details, return policies, or technical support, please refer to the Amazon Renewed Guarantee terms and conditions or contact Amazon customer service directly.

For general product inquiries or troubleshooting assistance not covered in this manual, please visit the ONN support website or consult your retailer.

© 2023 ONN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question