

[Manuals.plus](#) /

› [VILLCASE](#) /

› VILLCASE String Trimmer Head Instruction Manual - Model 128

VILLCASE 128

VILLCASE String Trimmer Head Instruction Manual - Model 128

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, installation, and maintenance of your VILLCASE String Trimmer Head, Model 128. Please read this manual thoroughly before operating the product to ensure proper function and longevity.



Figure 1: VILLCASE String Trimmer Head (Top View)

2. SAFETY INFORMATION

Always prioritize safety when working with power tools and accessories. Failure to follow these safety guidelines may result in injury or damage to equipment.

- **Read all instructions:** Before installation or operation, read and understand all instructions provided with both the trimmer head and your string trimmer machine.
- **Wear protective gear:** Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, long pants, and sturdy footwear. Hearing protection is also recommended.
- **Disconnect power:** Ensure the string trimmer's power source is disconnected (e.g., spark plug wire removed, battery removed, or unplugged) before attempting any installation, maintenance, or adjustments to the trimmer head.
- **Inspect before use:** Before each use, inspect the trimmer head and string for any damage, wear, or loose parts. Replace damaged components immediately.
- **Maintain a safe distance:** Keep bystanders, children, and pets at a safe distance (at least 50 feet/15 meters) from the operating area.
- **Use correct replacement parts:** Only use replacement parts and string recommended by the manufacturer.
- **Avoid contact with rotating parts:** Never touch the trimmer head or string while the engine is running or the motor is powered.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x VILLCASE String Trimmer Head (Model 128)
- (Note: Quick Connect Fixtures are integrated into the design.)

4. SETUP AND INSTALLATION

Follow these steps to properly install the VILLCASE String Trimmer Head onto your compatible lawn mower or string trimmer.

1. **Prepare the Trimmer:** Ensure your string trimmer is turned off and disconnected from its power source (e.g., remove battery, unplug, or disconnect spark plug wire).
2. **Remove Old Head (if applicable):** If replacing an existing trimmer head, follow your trimmer's manufacturer instructions to safely remove it. This usually involves holding the shaft to prevent rotation and unscrewing the head.
3. **Identify Mounting Thread:** The VILLCASE Trimmer Head features a threaded center for attachment. Ensure it matches your trimmer's shaft thread.



Figure 2: Trimmer Head Threaded Attachment

4. **Attach New Head:** Align the VILLCASE Trimmer Head with the trimmer shaft's thread. Rotate the head clockwise (or counter-clockwise, depending on your trimmer's design) until it is securely fastened. Do not overtighten.



Figure 3: Detailed Views of Trimmer Head Components

5. **Verify Security:** Gently tug on the installed trimmer head to ensure it is firmly attached and does not wobble.
6. **Re-connect Power:** Once installation is complete and verified, re-connect your trimmer's power source.

5. OPERATING INSTRUCTIONS

The VILLCASE String Trimmer Head is designed for efficient grass and weed trimming. Follow these general operating guidelines:

- **Start Trimmer:** Start your string trimmer according to its manufacturer's instructions.
- **Maintain Proper Stance:** Hold the trimmer firmly with both hands, maintaining balance and control.
- **Trimming Technique:** Use a sweeping motion to cut grass and weeds. Avoid hitting hard objects like rocks, fences, or concrete, as this can damage the trimmer head and string.



BEAUTIFUL

Special design and it is in fine craftsmanship. It is the best replacement for your old, broken one.



Figure 4: Proper Trimmer Operation

- **Line Advancement:** This trimmer head uses a bump-feed mechanism. To advance the cutting line, lightly tap the rotating head on the ground while the trimmer is running at full speed. Do not hold the head against the ground.



Adopt flower shaped nylon rope, it has good sharpness and quietness lawn Mower Accessories: Practical and compact, perfect replacement head for lawn mowers.



Figure 5: Trimmer Head in Action

- **Applications:** The trimmer head is suitable for various lawn and garden trimming tasks, including edging, clearing weeds, and general grass maintenance.

SCOPE OF APPLICATION



Figure 6: Scope of Application

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your trimmer head.

- **Clean After Each Use:** After each use, disconnect the trimmer from its power source and clean any grass, dirt, or debris from the trimmer head. A stiff brush can be used.
- **Inspect Cutting Line:** Regularly check the cutting line for wear, fraying, or breakage. Replace the line as needed. The trimmer head is designed for shaped nylon rope, offering good sharpness.

GOOD SHARPNESS

Adopt flower shaped nylon rope, it has good sharpness and quietness.



ADOPT FLOWER SHAPED NYLON ROPE



FINE CRAFTSMANSHIP

The design of the product is reasonable, the texture is excellent.

Figure 7: Nylon Rope and Craftsmanship Details

- **Inspect Head for Damage:** Periodically inspect the trimmer head casing for cracks, chips, or other damage. Replace the head if significant damage is found.
- **Storage:** Store the trimmer head in a clean, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your VILLCASE String Trimmer Head, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Line not advancing	Line is tangled or fused inside the spool; insufficient RPM during bump; line is too short.	Stop the trimmer, disconnect power, open the head, untangle/re-spool line. Ensure trimmer is at full speed when bumping. Replace line if too short.
Excessive vibration	Trimmer head not securely attached; damaged head; unbalanced line.	Ensure head is tightened correctly. Inspect for damage and replace if necessary. Ensure both lines are of equal length.
Poor cutting performance	Dull or worn line; incorrect trimming technique.	Advance new line or replace old line. Review operating instructions for proper technique.

Problem	Possible Cause	Solution
Head difficult to install	Incorrect thread size; debris in threads.	Verify compatibility with your trimmer model. Clean threads on both trimmer shaft and head.

8. SPECIFICATIONS

Technical details for the VILLCASE String Trimmer Head, Model 128:

Brand: VILLCASE

Model Number: 128

Material: ABS

Product Dimensions: 3.94 x 3.94 x 1.97 inches (10 x 10 x 5 cm)

Size: 10X10CM

Color: Black

Included Components: Quick Connect Fixtures (integrated)

Maximum RPM: 10,000

Compatibility: Suitable for most lawn mowers/string trimmers (verify thread type)

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for the VILLCASE String Trimmer Head is not provided in the product details. For assistance, please refer to the retailer where the product was purchased or visit the [VILLCASE Store on Amazon](#).