

[manuals.plus](#) /› [Hisense](#) /› [Hisense BI64111AB Multifunction Oven User Manual](#)

## Hisense BI64111AB

# Hisense BI64111AB Multifunction Oven User Manual

Model: BI64111AB

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Hisense BI64111AB multifunction oven. Please read these instructions carefully before using the appliance and keep them for future reference.

The Hisense BI64111AB is a 60 cm thermoventilated multifunction oven designed for modern kitchens. It features an XXL 77-liter cavity, allowing for simultaneous cooking of multiple dishes or large items. Key functions include fast preheating, a dedicated 300°C pizza function, and an Air Fry mode for healthier cooking. The Aqua Clean system simplifies oven maintenance.

## 2. SAFETY INFORMATION

### Important Safety Instructions:

- Read all instructions before using the appliance.
- This appliance is intended for household use only.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Ensure proper ventilation during operation.
- Keep children away from the appliance during operation and when cooling down.
- Do not use abrasive cleaners or sharp metal scrapers to clean the oven door glass, as they can scratch the surface, which may result in shattering of the glass.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

## 3. PRODUCT OVERVIEW

The Hisense BI64111AB oven combines functionality with a sleek design, featuring a black finish with a dark stainless steel handle and a glass door.

### 3.1 Oven Components

The oven includes a spacious interior, control panel, oven door, and accessories such as a baking tray and wire rack.



Figure 3.1: Front view of the Hisense BI64111AB oven, showcasing its black finish and control panel.

### 3.2 Control Panel

The control panel consists of mechanical knobs for selecting cooking functions, setting temperature, and managing the timer.



**Figure 3.2:** Close-up of the oven's control panel, showing the function selector, temperature knob, and timer.

### 3.3 Oven Interior and Accessories

The oven features an XXL 77-liter cavity, designed to accommodate large dishes and allow for multi-level cooking. It comes with a baking tray and a wire rack.



**Figure 3.3:** The oven's wire rack and baking tray, designed for versatile cooking.

## 4. SETUP

### 4.1 Installation

The Hisense BI64111AB is a built-in oven. Professional installation by a qualified technician is recommended to ensure correct fitting and electrical connection. Refer to the separate installation guide for detailed instructions, including cabinet dimensions and electrical requirements.

- Ensure the appliance is correctly leveled.
- Verify that the electrical supply matches the specifications on the rating plate.
- Do not obstruct ventilation openings.

### 4.2 First Use

Before using the oven for the first time:

1. Remove all packaging materials and accessories from the oven cavity.

2. Clean the interior of the oven with a damp cloth and mild detergent.
3. Heat the empty oven for approximately 30 minutes at 200°C using the conventional heating function to burn off any manufacturing residues. This may produce a slight odor; ensure the kitchen is well-ventilated.
4. Allow the oven to cool down completely, then wipe the interior again.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 General Operation

To operate the oven:

1. Turn the function selector knob to choose the desired cooking mode.
2. Turn the temperature knob to set the desired temperature.
3. If required, set the cooking time using the timer knob.
4. The oven will begin heating. The indicator light will turn off once the set temperature is reached.

### 5.2 Cooking Functions

The Hisense BI64111AB offers 12 cooking functions, including:

- **XXL Cavity (77 Liters):** The large 77-liter capacity allows for cooking multiple dishes simultaneously on different levels, optimizing cooking time and energy.
- **Fast Preheating:** This function enables the oven to reach a temperature of 200°C in just 6 minutes, significantly reducing waiting times.
- **Pizza Function (300°C):** A dedicated function that can reach temperatures up to 300°C, ideal for achieving perfectly crispy pizzas similar to those from a professional oven.
- **Air Fry Function:** This innovative function allows for healthy frying in the oven, producing crispy results without the need for excessive oil.



**Figure 5.1:** Illustration of the 77-liter XXL cavity, highlighting its spacious design and efficient heat distribution.



**Figure 5.2:** Demonstrating the ease of placing food into the oven cavity for cooking.

## 6. MAINTENANCE AND CLEANING

### 6.1 Aqua Clean Function

The Aqua Clean function utilizes steam to loosen stubborn stains and facilitate oven cleaning. To use Aqua Clean:

1. Pour approximately 0.5 liters of water into the baking tray and place it on the lowest rack level.
2. Select the Aqua Clean function (usually indicated by a water drop symbol) and set the timer for 30 minutes.
3. After the cycle, allow the oven to cool down.
4. Wipe the interior with a soft cloth to remove softened food residues.

### 6.2 General Cleaning

- Clean the oven regularly to prevent food residues from building up.
- Use mild detergents and soft cloths. Avoid abrasive cleaners, scouring pads, or harsh chemicals.
- Clean the oven door glass with a non-abrasive glass cleaner.

- Remove and clean oven accessories (racks, trays) separately in warm soapy water.

## 7. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not heat	No power supply; incorrect settings	Check power connection and circuit breaker; verify function and temperature settings.
Uneven cooking	Incorrect rack position; overloaded oven	Use recommended rack positions; avoid overcrowding the oven.
Excessive smoke during cooking	Food spills; greasy residues	Clean the oven thoroughly; use a baking tray to catch drips.
Oven light not working	Bulb needs replacement	Ensure oven is cool and disconnected from power; replace bulb according to instructions.

If the problem persists after attempting these solutions, please contact Hisense customer support or a qualified service technician.

## 8. SPECIFICATIONS

Below are the technical specifications for the Hisense BI64111AB oven:

Feature	Specification
Brand	Hisense
Model Number	BI64111AB
Product Dimensions (D x W x H)	56.4 x 59.5 x 59.5 cm
Weight	29 kg
Cavity Volume	77 Liters
Heating Method	Convection
Fuel Type	Electric
Installation Type	Built-in
Wattage	3500 watts
Energy Efficiency Class	A
Special Features	XXL Cavity, Fast Preheating, Aqua Clean, Pizza Function 300°C, Air Fry
Country of Origin	Slovenia

### 8.1 Energy Label




**ENERG**  
енергия · ενέργεια


Y IJA  
IE IA

HISENSE

BI64111AB

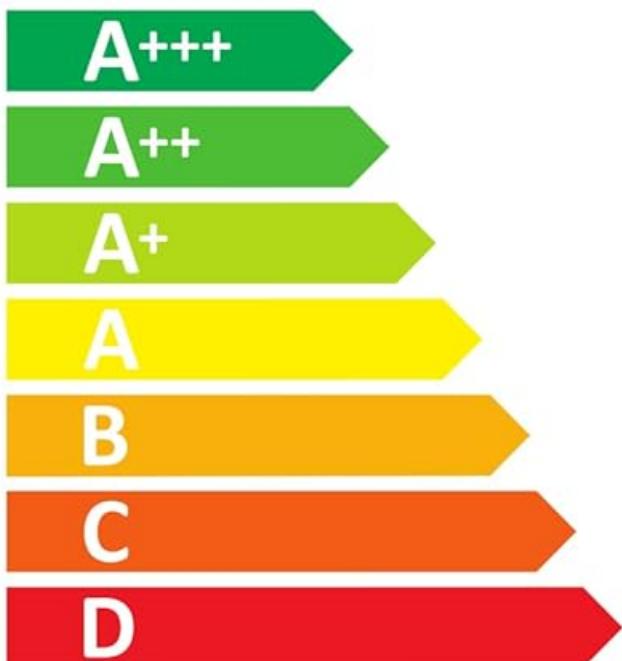

77 L

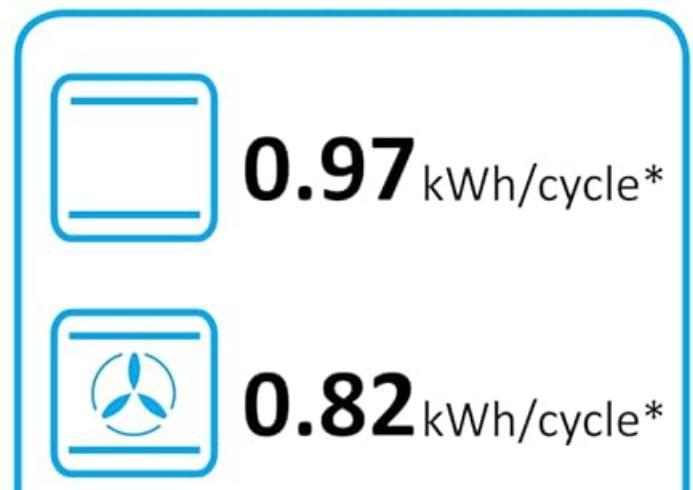

\* цикъл · cyklus · portion · zyklus · πρόγραμμα · ciclo · tsükkeli · ohjelma · ciklus  
ciklas · cikls · ciklu · cyclus · cykl · ciclu · program · cykel

**65/2014**

Figure 8.1: The EU energy efficiency label for the Hisense BI64111AB oven, indicating its Class A rating and 77-liter volume.

## 8.2 Product Data Sheet

<b>Ficha del producto</b>	
Reglamento Delegado (UE) 65/2014	
Nombre o marca comercial del proveedor	<b>HISENSE</b>
Identificador del modelo	<b>BI64111AB</b>
Número de cavidades	<b>1</b>
<b>Cavidad 1</b>	
Índice de eficiencia energética	<b>94,3</b>
Clase de eficiencia energética	<b>A</b>
Consumo energético por ciclo (modo convencional)	<b>0,97 kWh</b>
Consumo energético por ciclo (modo circulación forzada)	<b>0,82 kWh</b>
Fuente de calor	<b>Eléctrico</b>
Volumen	<b>77 Litros</b>

Figure 8.2: Product data sheet providing detailed regulatory information and energy consumption figures.

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

Your Hisense BI64111AB oven comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Hisense website for detailed terms and conditions regarding warranty coverage and duration.

### 9.2 Customer Support

For technical assistance, spare parts, or service requests, please contact Hisense customer support. You can find contact information on the official Hisense website or in the documentation provided with your appliance.

- Online Support:** Visit the [Hisense official website](#) for FAQs, troubleshooting guides, and contact forms.
- Service Center:** Locate an authorized Hisense service center in your area for professional repairs.