

[Manuals.plus](#) /

› [Music Sound](#) /

› Music Sound Karaoke Speaker User Manual

## Music Sound BTSPKMSKARAOKEK

# Music Sound Karaoke Speaker User Manual

Model: BTSPKMSKARAOKEK

### INTRODUCTION

The Music Sound Karaoke Speaker is a portable Bluetooth speaker designed for karaoke entertainment. It features integrated LED lights and comes with a wired microphone, allowing users to sing along to their favorite songs. Its compact and lightweight design makes it easy to transport, and it offers approximately 8 hours of battery life on a single charge.

### WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Music Sound Bluetooth Karaoke Speaker
- Micro-USB Charging Cable
- Wired Microphone
- Instruction Manual (this document)



Image: The Music Sound Karaoke Speaker, showing its main unit with integrated LED lights and the included wired microphone.

## SETUP

### Charging the Speaker

1. Locate the Micro-USB charging port on the speaker.
2. Connect one end of the provided Micro-USB cable to the speaker's charging port.
3. Connect the other end of the Micro-USB cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate.
5. Once fully charged, the indicator light may change or turn off. Disconnect the cable.

A full charge provides approximately 8 hours of playback time.

### Connecting the Microphone

- Insert the microphone's jack into the designated microphone input port on the speaker.

- Ensure the connection is secure.

Sing anywhere  
with **INCLUDED  
MICROPHONE**



Image: A close-up view of the wired microphone, ready for connection to the speaker.

## OPERATING INSTRUCTIONS

### Powering On/Off

- To power on the speaker, locate the power button/switch and press/slide it to the 'ON' position.
- To power off, press/slide the power button/switch to the 'OFF' position.

### Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED light or an audible prompt).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.

3. Search for available Bluetooth devices. The speaker will appear as "Music Sound Karaoke Speaker" or similar.
4. Select the speaker from the list to pair. Once paired, you will hear a confirmation sound, and the LED light may become solid.
5. You can now play audio from your device through the speaker.

The speaker supports Bluetooth 5.1 and has an operating range of approximately 10 meters (33 feet).

### Using the Microphone and LED Lights

- Once the microphone is connected, ensure its switch (if present) is in the 'ON' position.
- Adjust the microphone volume using the dedicated 'MIC VOL' knob on the speaker's control panel.
- The integrated LED lights will automatically activate when the speaker is in use, providing a dynamic visual effect for your karaoke sessions.
- Some models may feature an 'ECHO' knob to add reverberation to your voice for enhanced karaoke effects.



Image: A detailed view of the speaker's control panel, highlighting the power, volume, echo, and microphone input controls, along with USB and SD card slots.

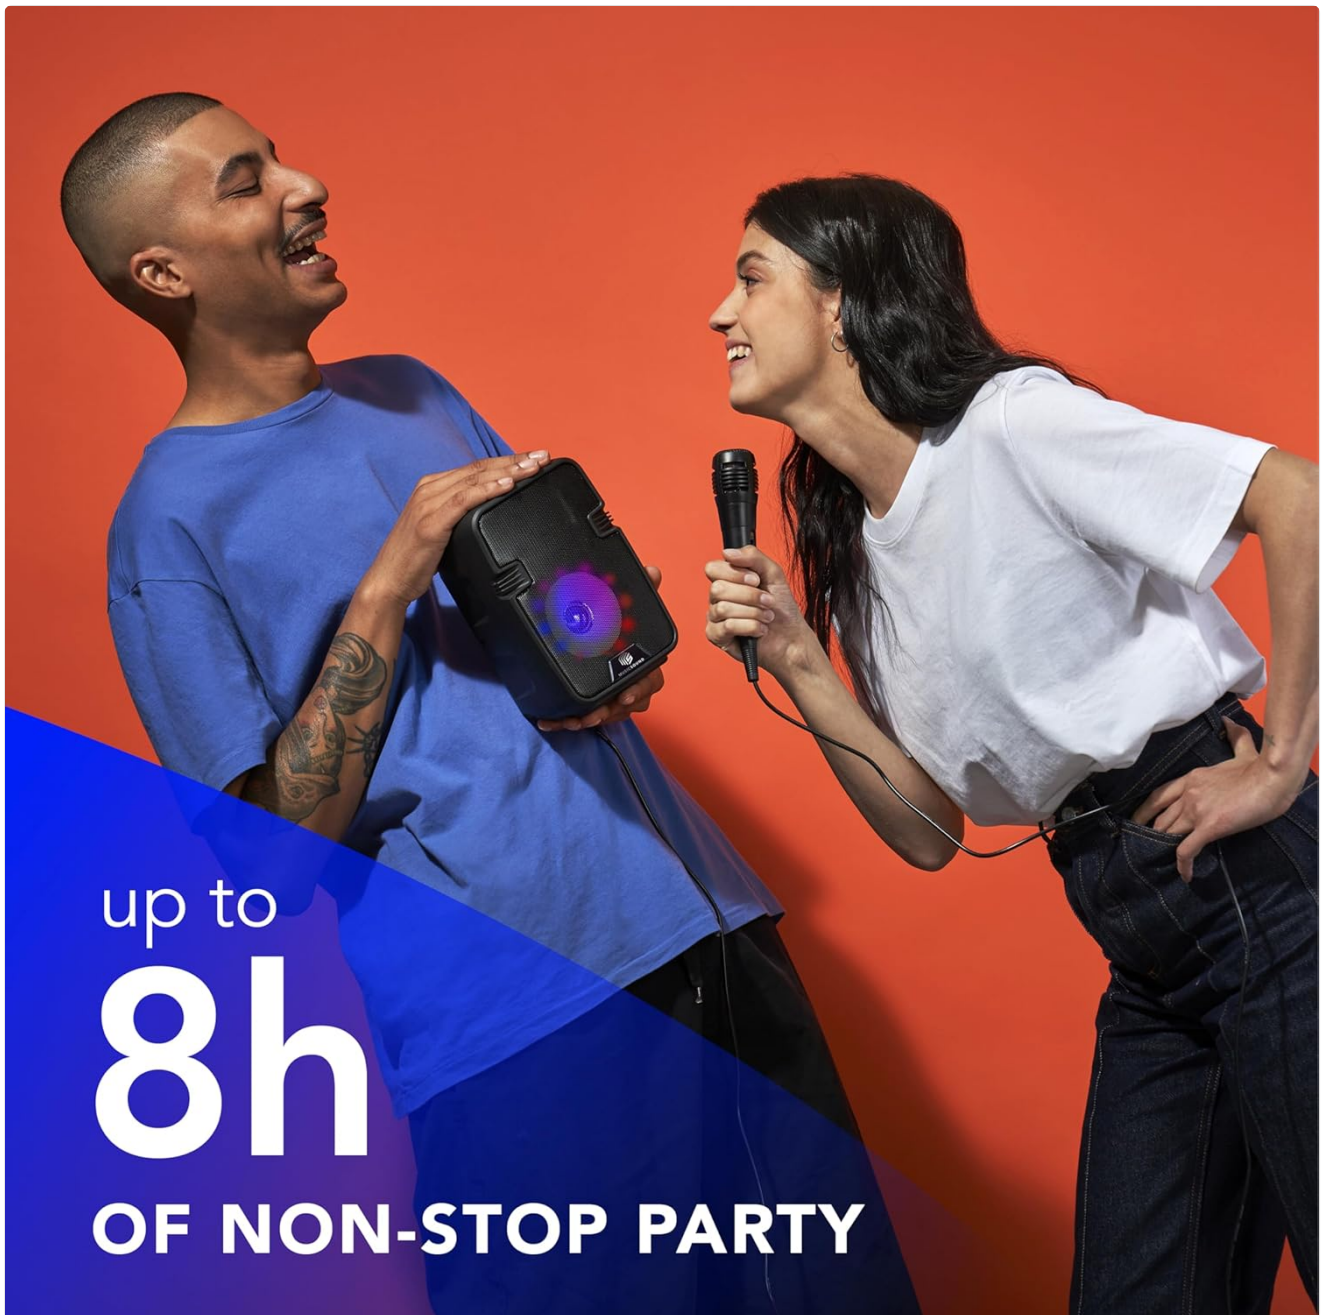


Image: Two individuals happily using the Music Sound Karaoke Speaker, demonstrating its portability and the vibrant LED light effects during a karaoke session.

## MAINTENANCE

### Cleaning

- Before cleaning, ensure the speaker is powered off and disconnected from any power source.
- Wipe the exterior of the speaker with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings.

### Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically (e.g., every 3-6 months) to maintain battery

health.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided Micro-USB cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or too far from device.	Ensure speaker is in pairing mode. Move device closer to speaker (within 10m). Turn off and on Bluetooth on your device.
No sound from speaker.	Volume is too low or device is not playing.	Increase volume on both the speaker and your connected device. Ensure audio is playing on your device.
Microphone not working.	Microphone not properly connected or switched off.	Ensure microphone is securely plugged into the correct port. Check if the microphone's ON/OFF switch is in the 'ON' position. Adjust 'MIC VOL' knob.
LED lights not working.	Speaker may be in a mode where lights are off, or a malfunction.	The LED lights are typically automatic. If they are not working, try restarting the speaker. If the issue persists, contact customer support.

## SPECIFICATIONS

- **Model Number:** BTSPKMSKARAOKEK
- **Connectivity Technology:** Bluetooth 5.1, USB
- **Wireless Range:** Approximately 10 meters (33 feet)
- **Battery Life:** Approximately 8 hours
- **Power Output:** 5 Watts (for this specific model)
- **Dimensions:** 11.8 x 23 x 17.7 cm (4.65 x 9.06 x 6.97 inches)
- **Weight:** 820 grams (1.81 lbs)
- **Included Components:** Speaker, Micro-USB Cable, Wired Microphone
- **Manufacturer:** CellularLine Spa
- **Country of Origin:** China

## WARRANTY AND SUPPORT

This product is covered by a warranty in accordance with local consumer protection laws. For specific warranty details and return policies, please refer to the terms provided by your retailer at the time of purchase. For purchases made on Amazon, a return policy of 14 days for refund/replacement is typically offered.

For technical support, troubleshooting assistance beyond this manual, or inquiries regarding product defects, please contact Music Sound customer service or your point of purchase. Keep your purchase receipt as proof of purchase for warranty claims.

You can visit the official Music Sound store for more information and product updates: [Music Sound Store](#)