

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› **VINABTY Replacement Remote Control User Manual for Hitachi Plasma TV**

VINABTY CLE-998

VINABTY Replacement Remote Control User Manual for Hitachi Plasma TV

INTRODUCTION

This manual provides instructions for the VINABTY replacement remote control, designed for various Hitachi Plasma TV models, including P42H401 and P50H401A. This remote is compatible with original remote models such as CLE-998, CLE-967, CLU-49101S, CLU-4997S, CLU-4591AV, CLE-984, CLE-966A, and CLE-957. No programming is required for basic infrared (IR) functionality.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.
5. The remote is now ready for use.





Image: The back of the remote control, highlighting the battery compartment cover at the bottom. This is where two AAA batteries are inserted.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between

the remote and your Hitachi Plasma TV.

Basic Functions





Image: The front of the VINABTY replacement remote control, displaying all buttons and their labels for various TV functions.

- **Power Button:** Located at the top right, press to turn the TV on or off.
- **Input/Source:** Use the "INPUT" button to cycle through available input sources (HDMI, AV, etc.).
- **Channel Selection:** Use the number pad (0-9) to directly enter channel numbers. Use the "CH+" and "CH-" buttons to navigate channels sequentially.
- **Volume Control:** Use the "VOL+" and "VOL-" buttons to adjust the volume. The "MUTE" button silences the TV audio.
- **Navigation Pad:** The central circular pad with "OK" button allows for menu navigation and selection. Use the directional arrows (Up, Down, Left, Right) to move through options.
- **Menu/Guide:** Access the TV's main menu or program guide using the "MENU" or "GUIDE" buttons.
- **Exit:** The "EXIT" button closes current menus or on-screen displays.
- **Last Channel:** The "LAST CH" button returns to the previously viewed channel.

MAINTENANCE

- Keep the remote control dry. Avoid exposure to liquids.
- Do not drop or subject the remote to strong impacts.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA batteries.
- **Line of Sight:** Verify there is a clear path between the remote control and the TV's IR receiver. Remove any obstructions.
- **TV Sensor:** Ensure the TV's IR sensor is not blocked or dirty.
- **TV Compatibility:** Confirm your Hitachi Plasma TV model is listed as compatible with this

replacement remote.

SPECIFICATIONS

- **Model Number:** CLE-998
- **Compatible TV Brands:** Hitachi Plasma TV
- **Compatible Remote Models:** CLE-998, CLE-967, CLU-49101S, CLU-4997S, CLU-4591AV, CLE-984, CLE-966A, CLE-957
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 8.3 x 2 x 0.7 inches (approximately)
- **Item Weight:** 3.2 ounces (approximately)
- **Special Feature:** Ergonomic design
- **Color:** Black

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact the retailer where the product was purchased. Keep your purchase receipt for proof of purchase.