

[Manuals.plus](#) /

› [DreamSky](#) /

› DreamSky Wooden Digital Alarm Clock User Manual

DreamSky DS2201

DreamSky Wooden Digital Alarm Clock User Manual

Model: DS2201

1. INTRODUCTION

Thank you for purchasing the DreamSky Wooden Digital Alarm Clock. This clock combines modern design with essential features, including a large LED display, adjustable brightness, temperature display, and a convenient USB charging port. This manual provides detailed instructions to help you set up and operate your new alarm clock efficiently.

2. PACKAGE CONTENTS

- DreamSky Wooden Digital Alarm Clock (Model: DS2201)
- Power Adapter
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your DreamSky alarm clock.



Figure 3.1: Front view of the DreamSky Wooden Digital Alarm Clock, displaying time, alarm setting, and current temperature.

7.7 Inch Large Display with Big Bold Numbers

The clock time, alarm time and indoor temperature is clear at a glance



Figure 3.2: Detailed view of the 7.7-inch large display, highlighting the clear presentation of time, alarm time, and indoor temperature.



Figure 3.3: Product dimensions, showing the clock's width (7.1 inches), height (2.9 inches), and depth (3.5 inches).

4. SETUP

4.1 Power Connection

1. Connect the provided power adapter to the DC 5V port on the back of the alarm clock.
2. Plug the power adapter into a standard electrical outlet. The display will light up.

Dedicated Touch Snooze Button for Maximum Ease of Use



Figure 4.1: Illustration of connecting the power adapter to the clock's DC 5V input.

4.2 Battery Backup (Optional)

The clock requires 2 AAA batteries (not supplied) for memory backup in case of a power outage. These batteries do not power the display continuously but preserve your time and alarm settings.

1. Open the battery compartment on the back of the clock.
2. Insert 2 AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment.

2 Minutes Buzzer Alarm with Customizable Alarm Volume



Figure 4.2: View of the battery compartment, indicating where to insert 2 AAA batteries for backup power.

5. OPERATING INSTRUCTIONS

5.1 Setting Time (12/24H Format)

1. Press and hold the **TIME SET** button on the back of the clock until the hour digits flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **TIME SET** again to confirm the hour and move to minutes.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.
5. Press **TIME SET** to confirm minutes.
6. To switch between 12-hour and 24-hour format, press the **12/24H** button.

5.2 Setting Alarm and Volume

1. Press and hold the **ALARM SET** button on the back until the alarm hour digits flash.
2. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
3. Press **ALARM SET** again to confirm and move to alarm minutes.
4. Use the **UP** or **DOWN** buttons to adjust the alarm minutes.
5. Press **ALARM SET** to confirm the alarm time. The alarm icon will appear on the display.
6. To adjust the alarm volume (30-90dB), use the **VOLUME** dial on the back of the clock.
7. To turn the alarm ON/OFF, press the **ALARM ON/OFF** button. When OFF, "OFF" will be displayed.

2 Minutes Buzzer Alarm with Adjustable Alarm Volume

You know when to wake up with the alarm time shown on display

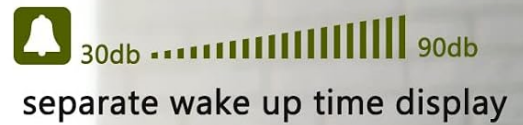


Figure 5.1: Visual representation of the adjustable alarm volume, ranging from 30dB to 90dB.

5.3 Snooze Function

When the alarm sounds, gently touch the **SNOOZE** button on the top of the clock to activate the snooze function. The alarm will pause for 9 minutes and then sound again.

To turn off the alarm completely for the day, press any button on the back of the clock.

Independent Touch Style Snooze Button on the Top

Get extra 9 minutes sleep is a breeze, just touch the top side.



Figure 5.2: Demonstrates the easy-to-use touch-style snooze button located on the top surface of the clock.

5.4 Brightness Adjustment

The display brightness is 0-100% adjustable. Use the **DIMMER** dial on the back of the clock to set your preferred brightness level, from completely dark to very bright.

0-100% Adjustable Brightness Dimmer

No glaring light at night



Variable display mode



Figure 5.3: Shows the 0-100% adjustable brightness dimmer and examples of the display at various brightness settings.

5.5 Temperature Display (Fahrenheit/Celsius)

The clock displays the indoor temperature. Press the °C/°F button on the back to switch between Celsius and Fahrenheit units.

5.6 USB Charging Port

The clock features a USB port on the side, allowing you to charge your electronic devices (e.g., smartphones) conveniently. Simply connect your device's USB charging cable to the clock's USB port.



Figure 5.4: Depicts the USB charging port on the side of the clock, demonstrating its use for charging a mobile phone.

6. MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble the clock. This will void the warranty.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank.	No power connection or power outage.	Ensure the power adapter is securely plugged into the clock and a working outlet. Check for power outages.

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm is not set or turned off. Volume is too low.	Verify alarm time is set and the alarm is turned ON. Increase alarm volume using the dial.
Time is incorrect after power loss.	Backup batteries are not installed or are depleted.	Install new AAA batteries for memory backup. Reset the time.
Display is too bright/dim.	Brightness setting needs adjustment.	Adjust the DIMMER dial on the back of the clock to your desired brightness.

8. SPECIFICATIONS

Feature	Detail
Model	DS2201
Display Type	LED
Dimensions	7.1"W x 2.9"H x 3.5"D
Power Source	Corded Electric (AC Adapter included)
Battery Backup	2 x AAA batteries (not included)
Brightness	0-100% Dimmable
Alarm Volume	30-90dB Adjustable
Snooze Duration	9 minutes
Temperature Display	°C/°F Switchable
USB Charging Port	Yes
Material	Wood

9. WARRANTY AND SUPPORT

DreamSky provides a 1-year replacement warranty for this product. For any questions, technical support, or warranty claims, please contact DreamSky customer service. Refer to the contact information provided with your purchase or visit the official DreamSky website.

DreamSky Store: <https://www.amazon.com/stores/DreamSky/page/A77B43AC-E42E-451A-A58D-8BE8A4B441B5>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question