

AKCISOT 801822122

AKCISOT 12-Inch Silent Wall Clock Model 801822122 Instruction Manual

Model: 801822122

1. INTRODUCTION

Thank you for choosing the AKCISOT 12-inch Silent Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.

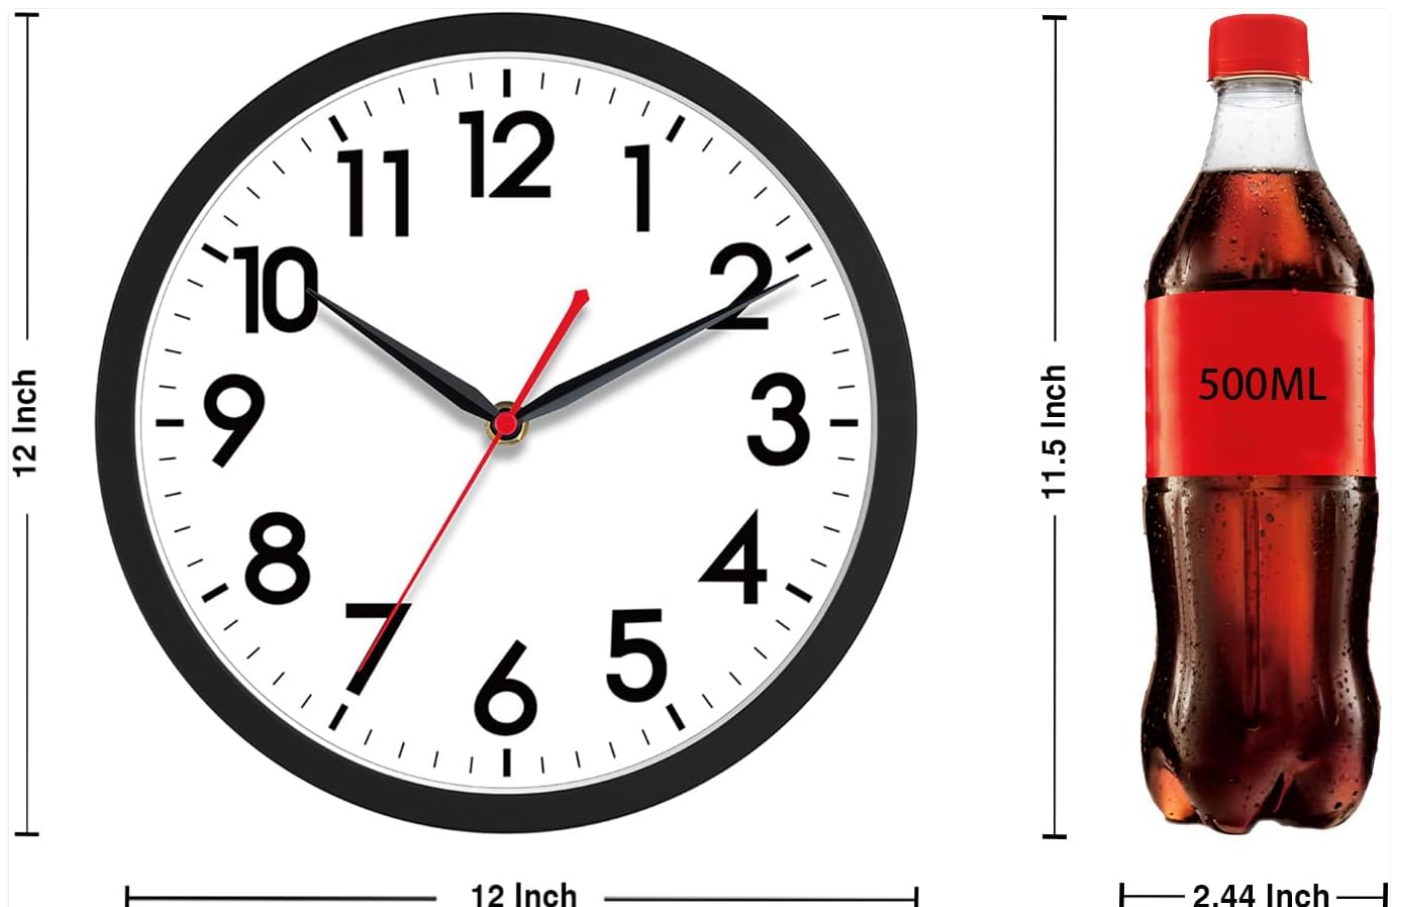 


Image 1: Front view of the AKCISOT 12-inch Silent Wall Clock. The clock features a black frame, white face, large black numbers, and a red second hand.

2. SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or repair the clock yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x AKCISOT 12-inch Silent Wall Clock
- 2 x Wall Hooks (for mounting)
- *Note: 1 AA battery is required and not included.*

What You Get ?



Image 2: Contents of the AKCISOT wall clock package, showing the clock, two types of wall hooks, and product packaging.

4. SETUP

4.1. Installing the Battery

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

4.2. Setting the Time

1. Locate the time adjustment knob on the back of the clock, usually a small wheel.
2. Gently turn the knob in either direction until the hour and minute hands display the correct time.
3. The second hand will begin to move smoothly once the battery is installed and the time is set.

4.3. Mounting the Clock

The clock can be easily mounted on a wall using the provided hooks.

1. Choose a suitable location on your wall.
2. Install one of the provided wall hooks securely into the wall. Ensure it is strong enough to hold the clock's weight.
3. Hang the clock onto the hook using the hanging slot on the back of the clock mechanism.



Image 3: The AKCISOT wall clock displayed in a home office setting, mounted on a white wall above a desk.

5. OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, your AKCISOT wall clock will operate continuously. The silent, non-ticking quartz movement ensures a quiet environment, making it suitable for bedrooms, offices, and other spaces where silence is preferred.

- **Accurate Timekeeping:** The clock is designed to maintain precise time.

- **Silent Movement:** The sweep second hand moves continuously without any ticking noise.

6. MAINTENANCE

6.1. Battery Replacement

When the clock starts losing time or stops working, it is an indication that the battery needs to be replaced.

1. Remove the clock from the wall.
2. Open the battery compartment on the back.
3. Remove the old AA battery and dispose of it properly.
4. Insert a new AA battery, observing the correct polarity (+/-).
5. Close the compartment and reset the time as described in Section 4.2.
6. Re-hang the clock on the wall.

6.2. Cleaning

To clean your clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the clock's finish or internal components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not working or stops intermittently.	Battery is dead or incorrectly installed.	Replace the battery with a new AA battery, ensuring correct polarity.
Clock is losing or gaining time.	Low battery power or faulty movement.	Replace the battery. If the problem persists, contact customer support.
Hands are stuck or not moving smoothly.	Obstruction or internal mechanism issue.	Ensure hands are not bent or touching each other or the clock face. If not, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	801822122
Dimensions (L x W x H)	30.43 x 30.43 x 3.38 cm (approximately 12 inches diameter)
Weight	362.87 grams
Power Source	1 x AA Battery (not included)
Display Type	Analog
Special Feature	Silent, Non-Ticking Movement
Material	Plastic

Feature	Detail
Color	Black frame, White dial

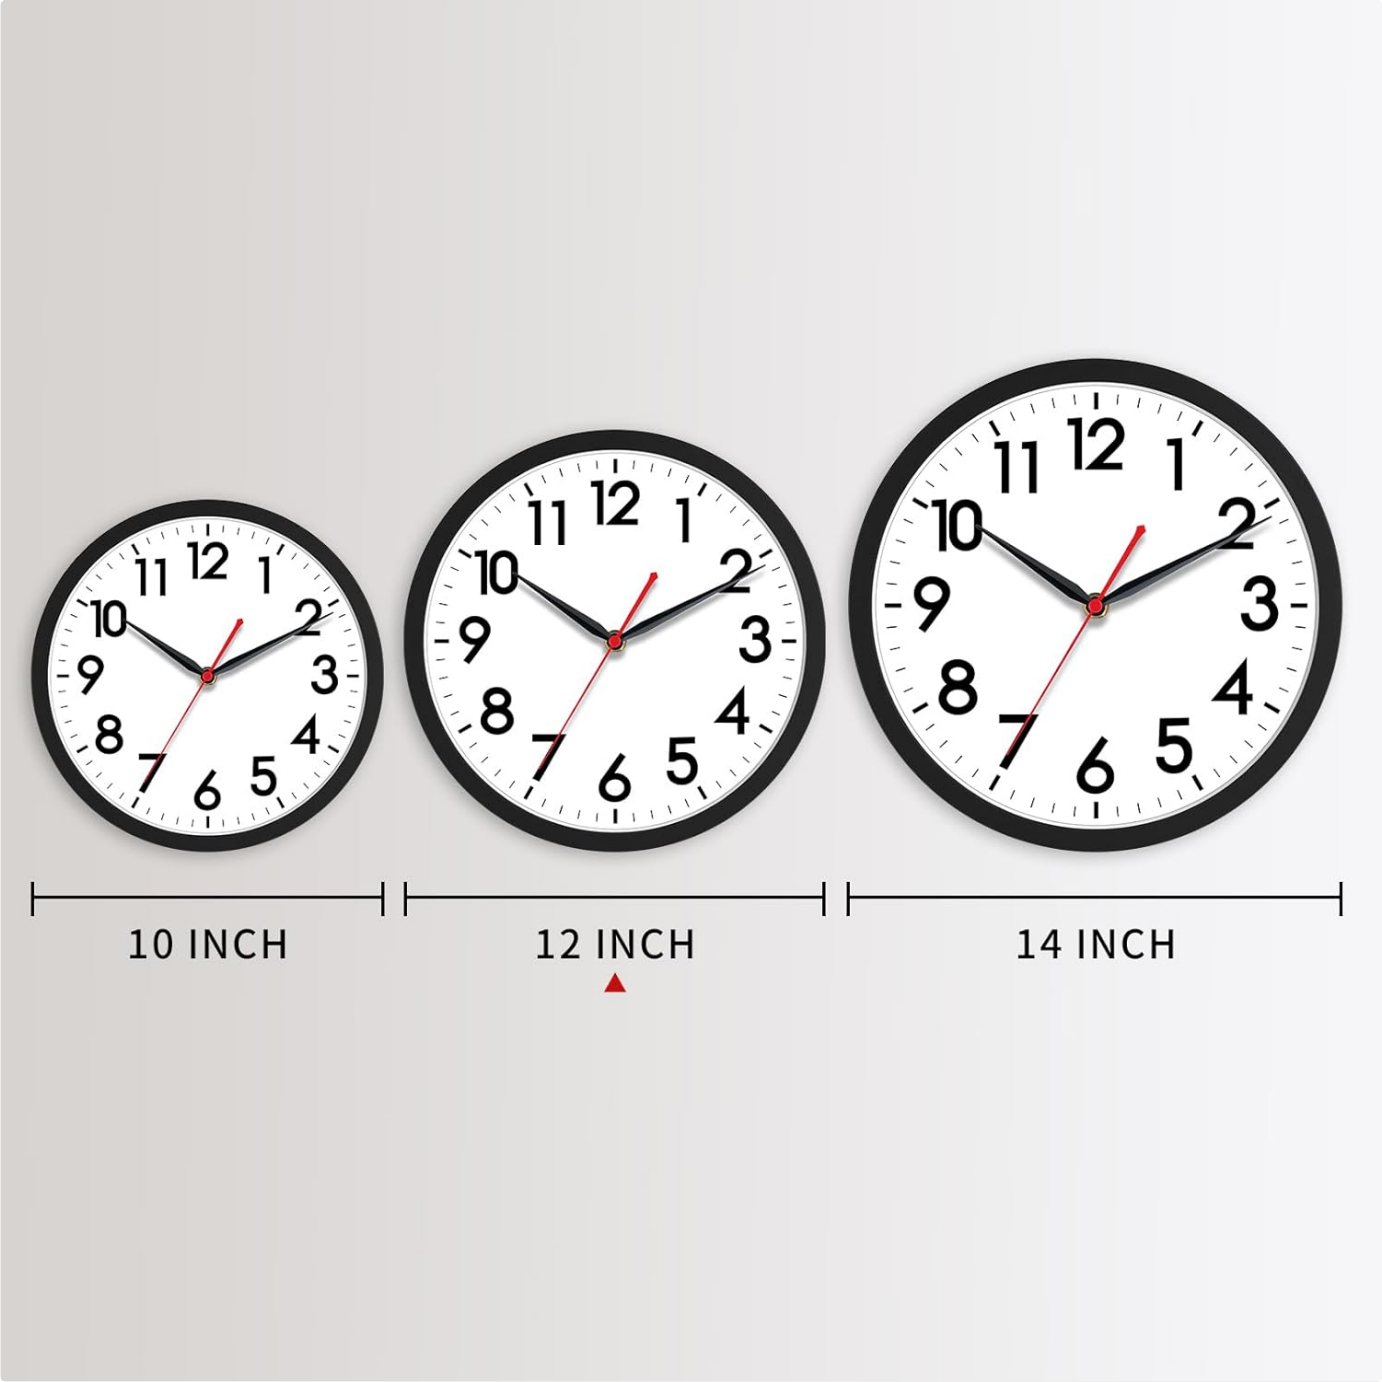 


Image 4: Size comparison of the 12-inch AKCISOT wall clock with a 500ml soda bottle, illustrating its dimensions.

OTHER OPTIONS

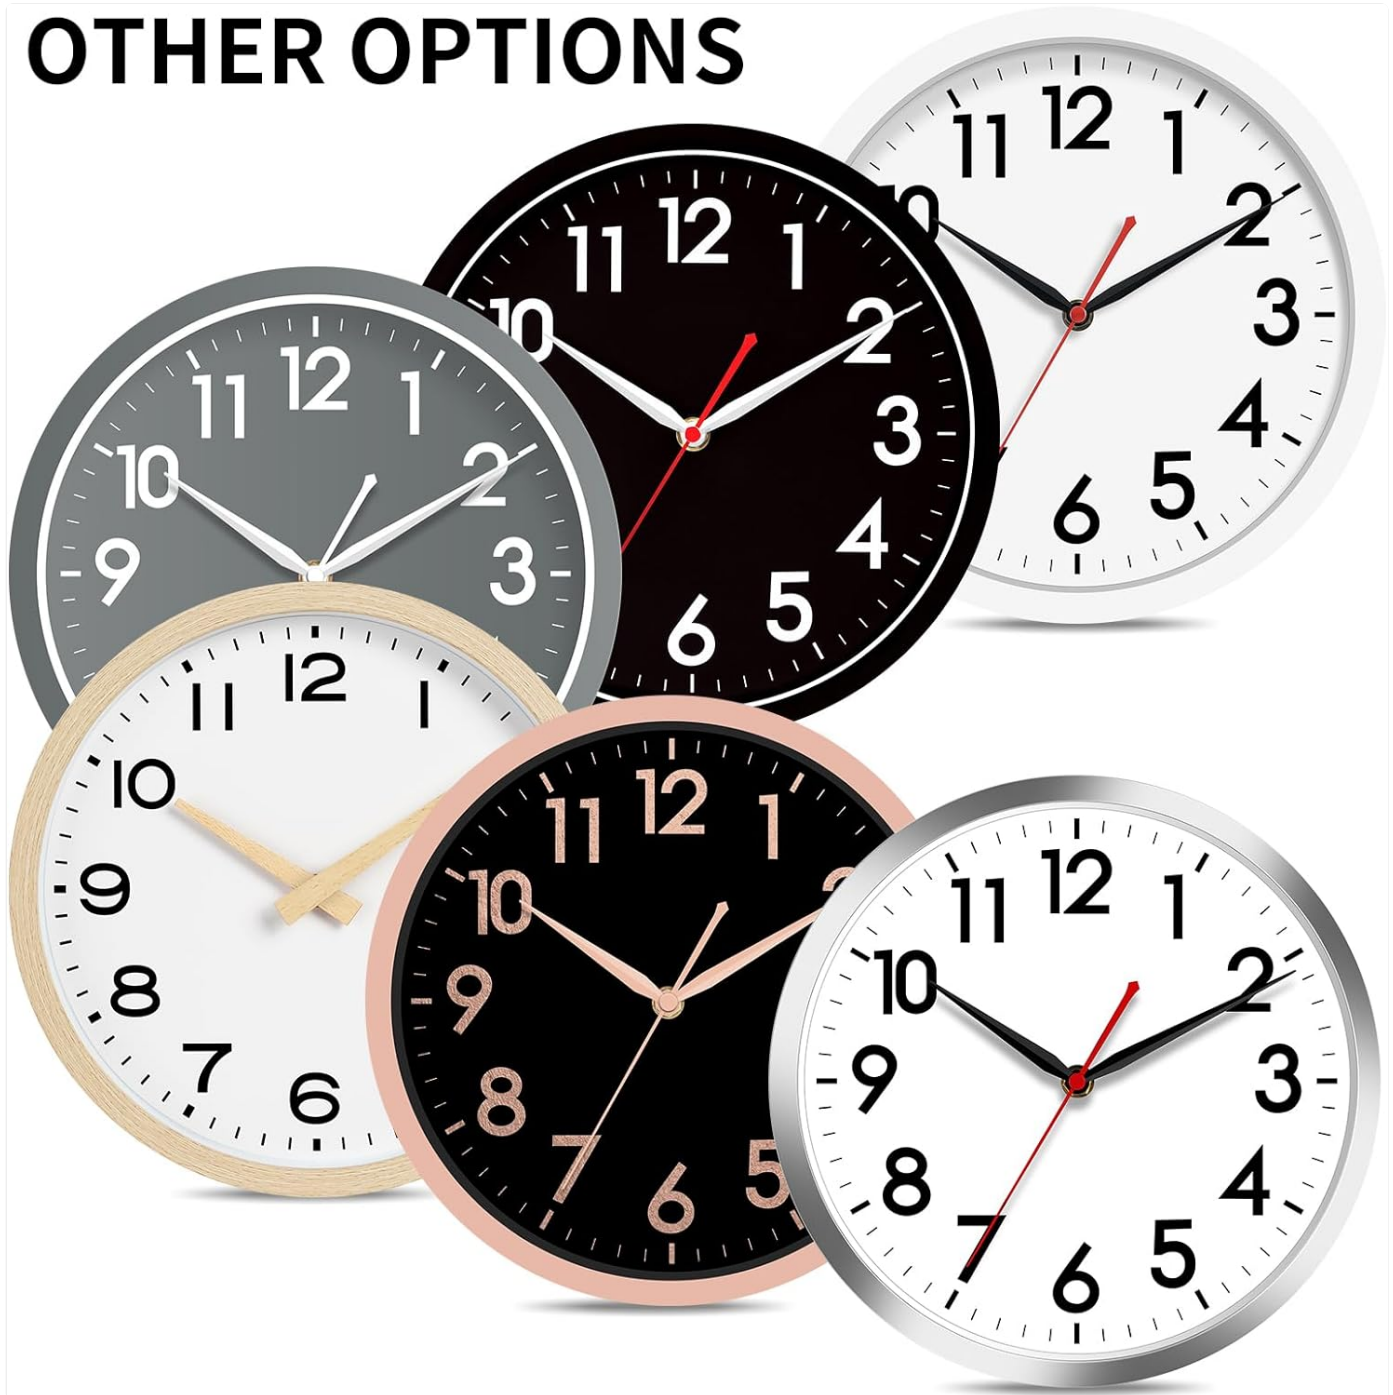 


Image 5: Comparison of AKCISOT wall clocks in 10-inch, 12-inch, and 14-inch sizes. The product is the 12-inch model shown in the middle.

9. WARRANTY AND SUPPORT

AKCISOT products are manufactured with quality and reliability in mind. For information regarding warranty coverage or technical support, please refer to the product packaging or contact your retailer. You may also visit the official AKCISOT website for further assistance.

For customer service inquiries, please contact the seller directly through your purchase platform.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question