

[Manuals.plus](#) /

› [OLEVS](#) /

› OLEVS Men Multifunction Watch Instruction Manual

OLEVS 2879

OLEVS Men Multifunction Watch Instruction Manual

Model: 2879 | Brand: OLEVS

INTRODUCTION

Thank you for choosing the OLEVS Men Multifunction Watch. This timepiece combines elegant design with practical features, including a chronograph, date display, and luminous hands. This manual provides detailed instructions to help you set up, operate, and maintain your watch for optimal performance and longevity.



Figure 1: OLEVS Men Multifunction Watch (Gold) with band adjustment tool.

PRODUCT FEATURES

- **Multifunction Sub-dials:** Features three sub-dials supporting second, minute, and timing chronographs.
- **Date Display:** Convenient date window for daily utility.
- **Luminous Hands:** Non-self-luminous hands require exposure to bright light to activate glow for low-light visibility.
- **Water Resistance:** 30M (3ATM) water-resistant, suitable for daily use like hand washing and splashes. (Please do not pull out the buttons underwater).
- **Durable Construction:** High-quality quartz movement, stainless steel band, and scratch-proof mineral glass dial.
- **Adjustable Band:** Comes with a tool for easy band adjustment to fit various wrist sizes.

WATCH INFORMATION

Brand : OLEVS

Waterproof : 30M

Band Material : Stainless Steel

Watch Movement: Quartz

Case Material : Alloy



Dial width: 41mm



Dial thickness: 12 mm



Band Width: 20mm



Band length: 24. cm

Figure 2: Key features of the OLEVS Multifunction Watch, highlighting water resistance, glass durability, strap design, and luminous capability.



Figure 3: Detailed watch information including dimensions and materials.

SETUP

Setting Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to the first click position to set the date, or to the second click position to set the time.
2. **Adjust the time:** Rotate the crown to move the hour and minute hands to the desired time.
3. **Adjust the date:** In the first click position, rotate the crown to change the date.
4. **Push in the crown:** Once set, push the crown back into its original position to start the watch and seal it against water.

Adjusting the Watch Band

Your OLEVS watch comes with a band adjustment tool. To resize the stainless steel band:

1. Identify the pins on the side of the band links that have small arrows indicating the direction to push.

2. Place the band in the adjustment tool, aligning the pin with the tool's pusher.
3. Gently turn the tool's screw to push the pin out. Remove the desired number of links.
4. Reassemble the band by inserting the pins in the opposite direction of the arrows, ensuring they are fully seated.

If you encounter difficulty, it is recommended to seek assistance from a professional watch repair service to avoid damaging the band or pins.

OPERATING INSTRUCTIONS

Using the Chronograph Function

The OLEVS Multifunction Watch features a chronograph (stopwatch) function with dedicated sub-dials for seconds, minutes, and hours.

1. **Start/Pause:** Press the top button on the side of the watch to start the chronograph. Press it again to pause the timing.
2. **Reset:** While the chronograph is paused, press the bottom button to reset all chronograph hands back to zero.

Your browser does not support the video tag.

Video 1: Demonstration of the OLEVS watch's chronograph function, showing start, pause, and reset operations, along with a water resistance test.

Luminous Function

The watch hands and markers are designed with a luminous material for visibility in low-light conditions. To activate the luminous function, expose the watch to a bright light source (e.g., sunlight or a lamp) for a period of time. The stored light energy will then allow the watch to glow in the dark.

MAINTENANCE

Water Resistance

This watch is rated for 30 meters (3ATM) water resistance. This means it is suitable for daily activities such as hand washing, light rain, or accidental splashes. **Important:** Do not pull out the crown or press any buttons while the watch is submerged in water, as this can compromise the water seal and lead to internal damage. Avoid hot water, steam, or prolonged submersion.

General Care

- Clean the watch regularly with a soft, dry cloth to remove dust and smudges.
- Avoid exposing the watch to extreme temperatures, strong magnetic fields, or harsh chemicals.
- Store the watch in a cool, dry place when not in use, preferably in its original box or a watch case.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not keeping accurate time	Low battery; Crown not fully pushed in; Exposure to strong magnetic fields.	Ensure crown is fully pushed in. If issue persists, replace battery at a professional watch shop. Keep away from magnets.
Luminous function not glowing	Insufficient light exposure.	Expose the watch to bright light for an extended period (e.g., sunlight for 10-15 minutes).

Problem	Possible Cause	Solution
Band difficult to adjust or pins falling out	Incorrect use of adjustment tool; Worn pins.	Carefully follow band adjustment instructions. If pins are damaged or lost, contact customer support for replacements or seek professional assistance.
Water inside the watch	Crown/buttons pressed underwater; Exposure to hot water/steam; Damaged seal.	Immediately take the watch to a professional for inspection and repair to prevent further damage. Avoid activities beyond 30M water resistance.

SPECIFICATIONS

Feature	Detail
Brand	OLEVS
Model Number	2879
Movement	Quartz
Case Diameter	41mm
Case Thickness	12mm
Band Material	Stainless Steel
Band Width	20mm
Band Length	24cm (adjustable)
Water Resistance	30M (3ATM)
Dial Window Material	Scratch-proof Mineral Glass
Clasp Type	Double-layer safety clasp
Net Weight	0.26lb (122g)
Country of Origin	China

WARRANTY AND SUPPORT

OLEVS offers a **30-day free return** policy and a **24-month warranty** for any quality-related issues. Customer satisfaction is our first priority.

If you have any questions, require technical assistance, or need to claim warranty service, please contact OLEVS customer support through the retailer where you purchased the watch. Please have your purchase details and model number (2879) ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question