

[Manuals.plus](#) /

› [Goobay](#) /

› Goobay 58526 TV Stand User Manual

Goobay 58526

Goobay 58526 TV Stand User Manual

Model: 58526 | For TVs and Monitors between 37 and 70 Inches

1. INTRODUCTION

Thank you for choosing the Goobay 58526 TV Stand. This stand is designed to securely hold flat or curved TVs and monitors ranging from 37 to 70 inches (94-178 cm) with a maximum weight of 40 kg. Featuring a sturdy metal construction with a solid glass base, it offers a 350 swivel range and flexible height adjustment for optimal viewing. An integrated cable management system helps maintain a tidy setup. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your TV stand.



Figure 1.1: The Goobay 58526 TV Stand with a mounted television, illustrating its compatibility with 37"-70" screens, 40 kg max load, and swivel capability.

2. IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before assembly and use. Keep this manual for future reference.
- Do not exceed the maximum load capacity of 40 kg (88 lbs). Overloading can cause serious injury or damage.
- Ensure the TV stand is placed on a stable, level surface to prevent tipping.
- Do not allow children to climb on or play with the TV stand.
- Verify that your TV's VESA mounting pattern is compatible with the stand (200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400).

- Use only the provided hardware. If any parts are missing or damaged, contact customer support.
- Tighten all screws firmly, but do not overtighten.

3. PACKAGE CONTENTS

Please check the package contents against the list below to ensure all components are present and undamaged.

TV-Bodenständer

Fixed Basic



Gewichtskapazität



Größe L 37" – 70"



Einfache Montage



**VESA-Norm
kompatibel**



Figure 3.1: Overview of the TV stand's key features and components, including its 40kg weight capacity, 37"-70" size compatibility, easy

assembly, and VESA standard compatibility.

Components List:

- Main Support Column
- Glass Base
- Adjustable Media Shelf
- TV Mounting Brackets (Left and Right)
- VESA Adapter Arms (if applicable for larger VESA patterns)
- Hardware Kit (screws, washers, spacers, Allen keys)
- Cable Management Clips/Covers

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your Goobay TV stand. It is recommended to have two people for assembly, especially when mounting the TV.

Produktabmessungen

Mit höhenverstellbaren Funktionen

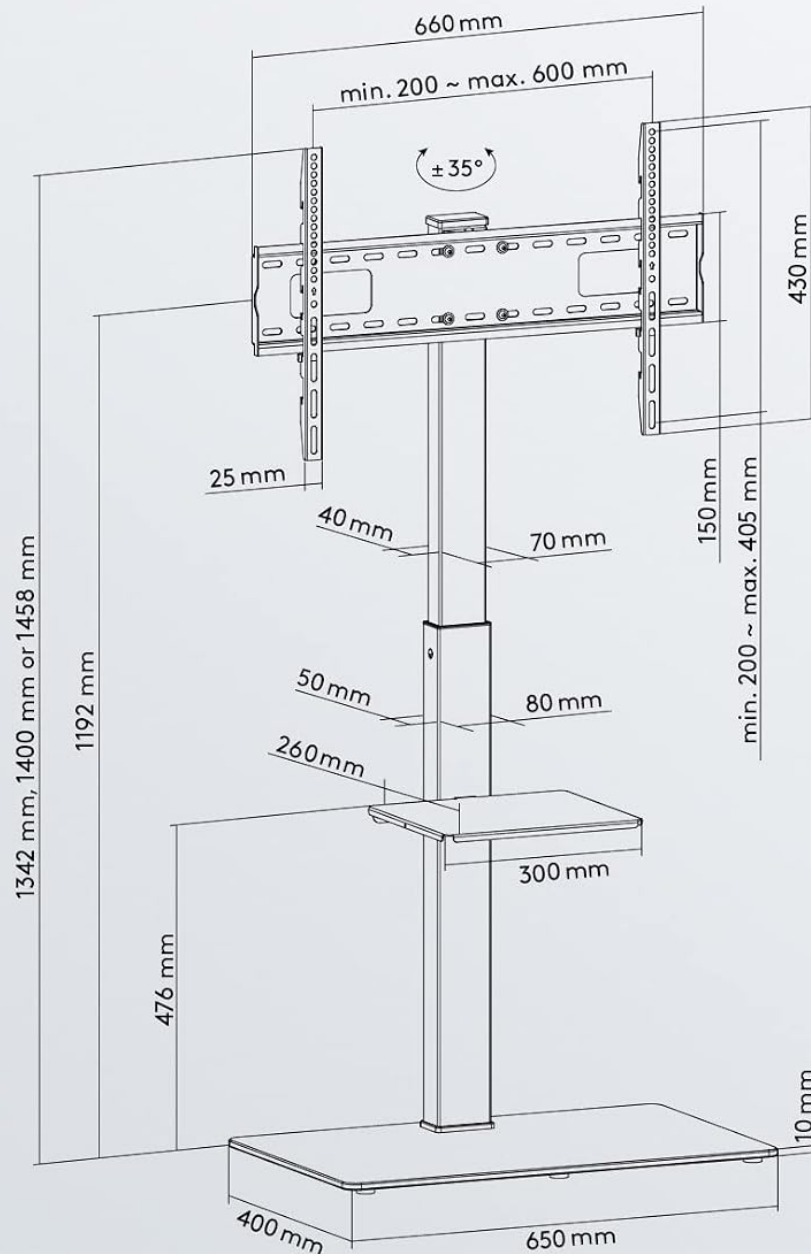


Figure 4.1: Technical drawing showing all critical dimensions of the TV stand, including height adjustments, base dimensions, and VESA mounting ranges. This diagram is essential for understanding the stand's physical characteristics and compatibility.

Step 4.1: Attach the Main Column to the Base

1. Carefully unbox all components and lay them out on a soft, clean surface to prevent scratches.
2. Attach the main support column to the glass base using the provided screws and tools. Ensure the column is oriented correctly as per the diagrams.

Step 4.2: Install the Adjustable Media Shelf

1. Slide the adjustable media shelf onto the main column at your desired height. Secure it in place with the designated fasteners.

Step 4.3: Attach TV Mounting Brackets to Your TV


1. Identify the VESA mounting holes on the back of your TV.
2. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's mounting holes.
3. Attach the left and right TV mounting brackets to the back of your TV. Ensure they are level and securely fastened. Do not overtighten.

Step 4.4: Mount the TV to the Stand

1. With assistance, carefully lift your TV with the attached brackets.
2. Hook the TV mounting brackets onto the main support column's mounting plate. Ensure the brackets are fully seated and the TV is secure.
3. Engage any safety locks or screws on the mounting plate to prevent accidental dislodgement.

Produktinformation

Funktionen im Überblick:

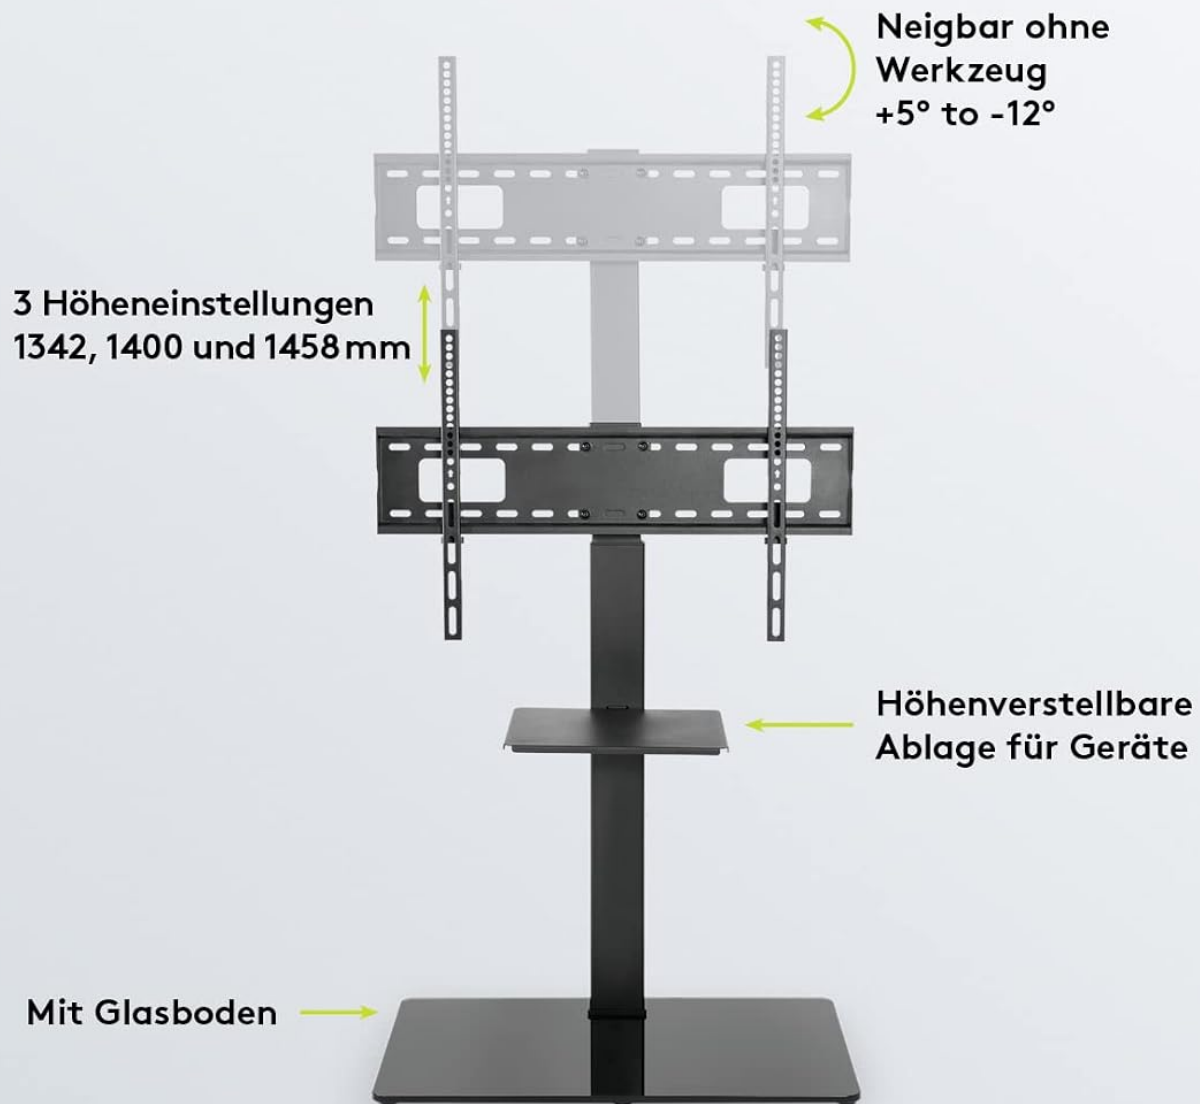

gobay®

Figure 4.2: This image highlights the product's adjustable features, including three height settings (1342mm, 1400mm, 1458mm), tool-free tilt adjustment from +50 to -120, a height-adjustable shelf for devices, and the solid glass base.

Step 4.5: Cable Management

1. Route your TV and device cables through the integrated cable management system within the main column.
2. Use the provided clips or covers to secure the cables neatly and out of sight.

TV-Bodenständer

Mit Kabelmanagementsystem



goobay®

Figure 4.3: A close-up view of the TV stand's integrated cable management system, demonstrating how cables can be neatly routed and hidden within the stand's column for a clean setup.

5. OPERATING INSTRUCTIONS

5.1. Height Adjustment

The Goobay 58526 TV Stand offers three height settings for optimal viewing. To adjust the height:

1. With assistance, carefully lift the TV slightly to relieve pressure on the height adjustment mechanism.
2. Locate the height adjustment pins or screws on the main column.
3. Adjust the TV to one of the three available height settings: 1342 mm, 1400 mm, or 1458 mm (measured from the floor to the top of the column).
4. Ensure the TV is securely locked into the desired height position before releasing it.

5.2. Swivel Function

The TV stand allows for a 350 swivel range (17.50 left and 17.50 right) to provide flexible viewing angles.

- Gently grasp the sides of your TV and rotate it to the desired angle.
- The swivel mechanism is designed for smooth movement. Do not force the TV beyond its intended range.

5.3. Media Shelf Usage

The adjustable media shelf can hold remote controls, small media players, or other accessories. Ensure items placed on the shelf do not exceed its weight capacity and are stable.

6. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the metal and glass surfaces. For stubborn marks on glass, a mild glass cleaner can be used. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Dusting:** Regularly dust the stand to prevent accumulation, especially around the cable management area.
- **Avoid Overloading:** Never place items on the stand that exceed its specified weight capacity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
TV stand is wobbly or unstable.	Uneven floor; loose screws; incorrect assembly.	Ensure stand is on a level surface. Check and tighten all assembly screws. Review assembly steps.
TV does not swivel smoothly.	Dust or debris in swivel mechanism; overtightened mounting.	Clean around the swivel joint. Ensure TV mounting screws are not overtightened, allowing for movement.
Cannot adjust TV height.	Mechanism jammed; TV weight not relieved.	Ensure TV weight is slightly lifted off the mechanism. Check for any obstructions.
Cables are not neatly hidden.	Incorrect cable routing; too many cables.	Reroute cables through the designated channels. Consider using fewer cables or thinner ones if space is limited.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	58526
Compatible Screen Sizes	37" - 70" (94 - 178 cm)

Feature	Specification
Maximum Load Capacity	40 kg (88 lbs)
Swivel Range	350 (17.50 left / 17.50 right)
Height Adjustment	3 positions: 1342 mm, 1400 mm, 1458 mm
VESA Compatibility	200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400
Material	Alloy Steel (powder-coated), Glass Base
Product Dimensions (W x H x D)	650 mm x 1458 mm x 400 mm (approx. 25.59 x 57.4 x 15.75 inches)
Item Weight	15.37 kg (approx. 35.6 pounds)

9. WARRANTY AND SUPPORT

Goobay products are manufactured with high-quality materials and undergo strict quality control. For information regarding warranty coverage, technical support, or replacement parts, please visit the official Goobay website or contact your local retailer. Please have your model number (58526) and purchase information ready when contacting support.

© 2024 Goobay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

