

goobay 58525

goobay 58525 TV Stand Instruction Manual

For TVs and Monitors Between 32 - 70 Inches (81-180 cm)

1. INTRODUCTION

Thank you for choosing the goobay 58525 TV Stand. This product is designed to provide a stable and adjustable base for your television or monitor, accommodating screen sizes from 32 to 70 inches and supporting a maximum weight of 50 kg. It features a tilt function and height adjustment for optimal viewing, along with an integrated cable management system. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.

2. SAFETY INSTRUCTIONS

- Ensure all components are present and undamaged before assembly. Do not use damaged parts.
- Do not exceed the maximum load capacity of 50 kg (110 lbs).
- This stand is designed for TVs and monitors between 32 and 70 inches. Verify your TV's VESA pattern and weight before installation.
- Always assemble the stand on a soft, clean surface to prevent scratches to the product or your furniture.
- Ensure the stand is placed on a stable, level surface to prevent tipping.
- Keep children and pets away during assembly. Small parts can be a choking hazard.
- If you are unsure about any part of the assembly process, seek professional assistance.

3. PACKAGE CONTENTS

Please check the package contents against the list below. If any parts are missing or damaged, contact your retailer.

Retail Box

Enthält 1 x TV-Standfuß

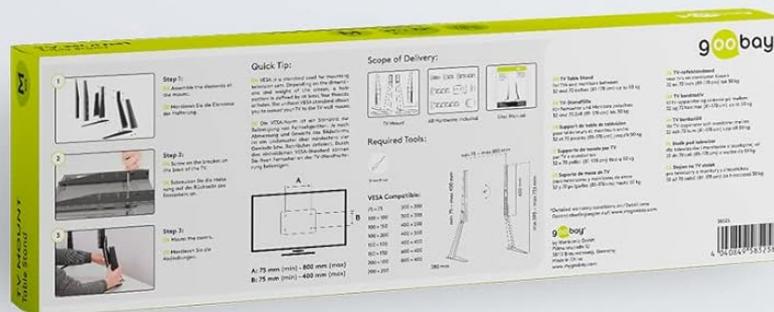


Image: Retail box and assembly quick tips with parts list. This image shows the packaging and a diagram detailing the included components and initial assembly steps.

Refer to the "Scope of Delivery" diagram on the quick tip sheet (visible in the image above) for a detailed list of screws, washers, and other hardware.

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your goobay 58525 TV Stand. It is recommended to have a second person assist with mounting the TV.

4.1 Attach Mounting Brackets to TV

1. Carefully place your TV face-down on a soft, clean surface to prevent screen damage.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's VESA pattern. Refer to your TV's manual for recommended screw length.
4. Attach the two vertical mounting brackets to the back of your TV using the selected hardware. Ensure they are securely fastened and level. The hooks on the brackets should face upwards.



Image: The goobay 58525 TV Stand's main components, showing the two vertical mounting brackets and the base feet.

4.2 Assemble the Base Feet

5. Connect the two base feet to the main vertical support columns using the provided screws. Ensure they are oriented correctly as shown in the diagrams.
6. Attach the foam foot pads to the bottom of the base feet to protect your furniture from scratches.

TV-Halterung

Standfüße



Gewichtskapazität



VESA-Norm kompatibel



Größe M
32" – 70"



Einfache Montage

goobay®

Image: The goobay 58525 TV Stand with its base feet assembled, shown from different angles and with a TV mounted.

4.3 Mount TV onto Stand

7. With assistance, carefully lift the TV with the attached mounting brackets.
8. Hook the top of the TV mounting brackets onto the corresponding slots on the vertical support columns of the stand.
9. Ensure the TV is securely seated and level. Fasten the safety screws at the bottom of the brackets to prevent accidental dislodging.



Image: The goobay 58525 TV Stand highlighting its weight capacity (50kg), VESA compatibility, screen size range (32"-70"), and easy assembly.

5. OPERATING INSTRUCTIONS


5.1 Adjusting Height

The goobay 58525 TV Stand offers multiple height adjustment levels. To adjust the height:

1. With assistance, carefully lift the TV slightly to relieve pressure on the mounting points.
2. Unfasten any safety screws that lock the TV's vertical position.
3. Adjust the TV to the desired height by repositioning the mounting brackets on the vertical support columns. The stand offers 3 height levels.
4. Once the desired height is achieved, re-fasten the safety screws to secure the TV in place.

Produktabmessungen

Mit höhenverstellbaren Funktionen

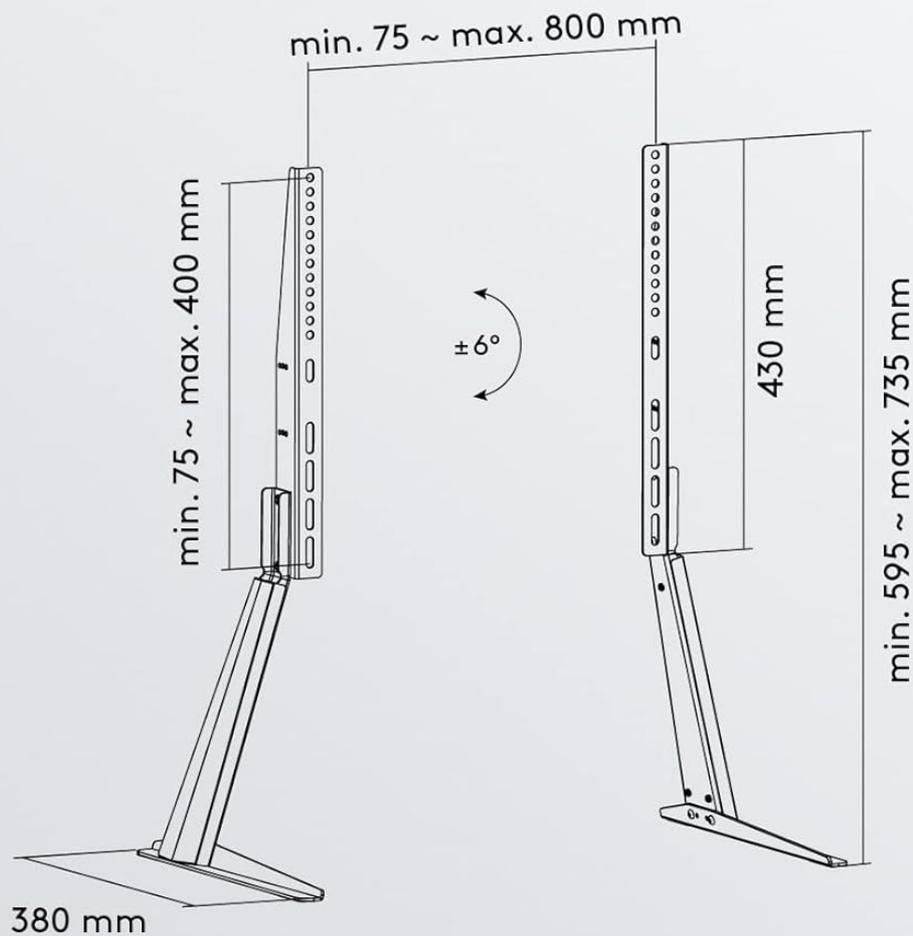

gobay®

Image: Product dimensions and adjustable features, including the tilt angle of ± 6 degrees and height range.

5.2 Adjusting Tilt Angle

The stand allows for a tilt angle of up to 6 degrees. To adjust the tilt:

1. Locate the tilt adjustment mechanism on the mounting brackets.
2. Loosen the tilt locking screws (if present).
3. Gently tilt the TV to the desired angle (up to 6 degrees).
4. Tighten the tilt locking screws to secure the TV in position.

5.3 Cable Management

The goobay 58525 TV Stand includes an integrated cable management system to keep your cables organized and protected.

1. Gather all TV and device cables.
2. Route the cables through the designated cable channels or clips on the back of the stand's vertical columns.
3. Use the included bezel or cover to discreetly hide the cables within the stand's structure.

TV-Halterung

Standfüße



goobay®

Image: The goobay 58525 TV Stand showcasing its integrated cable management system, with cables neatly routed through the stand.

Ordnung und Schutz

Mit Kabelmanagementsystem



goobay®

Image: A close-up view demonstrating how to route cables through the integrated cable management system of the goobay 58525 TV Stand.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the stand. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.

- **Weight Limit:** Do not place items exceeding the 50 kg weight limit on the stand or attach TVs larger than 70 inches.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Screws are loose; stand is on an uneven surface; TV weight exceeds limit.	Check and tighten all assembly screws. Move the stand to a level surface. Verify TV weight is within 50 kg limit.
TV cannot be tilted.	Tilt locking screws are too tight.	Loosen the tilt locking screws, adjust the angle, then re-tighten.
TV cannot be adjusted for height.	Safety screws are engaged; TV is too heavy to lift easily.	Ensure safety screws are disengaged. Seek assistance to lift the TV for adjustment.
Scratches on furniture.	Foam foot pads not installed or dislodged.	Ensure foam foot pads are correctly attached to the bottom of the base feet.

8. SPECIFICATIONS

Feature	Detail
Model Number	58525
Brand	goobay
Material	Steel (powder-coated)
Color	Black
Compatible Screen Sizes	32 - 70 inches (81 - 178 cm)
Maximum Load Capacity	50 kg (110 lbs)
VESA Compatibility	75x75, 100x100, 100x150, 100x200, 150x100, 150x150, 200x100, 200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400, 800x400 mm
Tilt Angle	Up to 6 degrees
Height Adjustment	3 levels (min. 595 mm - max. 735 mm)
Depth	380 mm
Integrated Features	Cable management system, foam foot pads

TV-Standfuß

Vorteile im Überblick:



goobay[®]

Image: An overview of the goobay 58525 TV Stand's benefits, including foot pads for furniture protection, integrated cable management, and easy assembly with VESA standards.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance or technical inquiries, please visit the official goobay website or contact their customer service department.

