

[Manuals.plus](#) /

› [Spares2go](#) /

› SPARES2GO Front Wheel for Stiga Lawnmower (Set of 2 Wheels) - Instruction Manual

Spares2go 04-SGU-533

SPARES2GO Front Wheel for Stiga Lawnmower (Set of 2 Wheels) - Instruction Manual

Model: 04-SGU-533

INTRODUCTION

This instruction manual provides essential information for the installation, maintenance, and general use of your SPARES2GO front wheels for Stiga lawnmowers. Please read this manual carefully before attempting any installation or maintenance to ensure safe and correct operation.

PRODUCT OVERVIEW

This product includes two replacement front wheels designed for various Stiga lawnmower models. The wheels are constructed from durable plastic and feature a tread pattern for optimal traction.



Image: Two SPARES2GO front wheels for Stiga lawnmowers.



Image: Detailed view of one wheel with approximate dimensions: 165mm diameter, 45mm width, and 35mm inner diameter.

165mm
(Approx')



27mm
(Approx')

Image: View of the wheel's inner hub, indicating an approximate inner diameter of 27mm.

COMPATIBILITY

These front wheels are compatible with a wide range of Stiga lawnmower models. Please verify your specific model number against the list below to ensure proper fitment.

Compatible Models (Partial List):

- **Collector Series:** 43 (12-2134-13, 12-2134-63, 12-2134-14), 43 el (297430664/ST9), 43S (12-2334-12), 45 (12-1134-21), 46 (24-3734-43, 24-3734-64, 299164624/ST9), 46 Combi (24-3734-44), 46 Combi B (24-3780-34, 24-3781-84), 46 el (24-3766-43, 24-3766-13, 24-3766-14, 299124664/ST9), 46B (24-3781-43), 46S (24-3834-23, 299264624/ST9), 46S B (24-3881-23, 24-3881-44), 46S Combi (24-381-38884-34-34-34-34-384-36S 24 834-13, 24-3834-24), 46S Combi B (24-3880-34), 46S el (24-3868-43, 24-3868-13), 46S Ethanol Combi (24-3835-14), 46S H (24-3803-33), 53S B (23-5281-07).
- **Combi Series:** 46 (299174644/ST9), 46B (299174621/ST9, 299174624/ST9), 46H (299174638/ST9), 46S (299274644/ST9), 46SB (299274621/ST9, 299274624/ST9), 46S Ethanol (299294644/ST9), 46SH (299274634/ST9, 299274638/ST9), 46SE (299324644/ST9), 53 (299175344/ST9), 53SB (299275344/ST9, 299275324/ST9).
- **Dino Series:** 47 (11-1134-21, 11-1134-22, 292470144/ST9), 47B (11-1181-72, 292470124/ST9), 47 Euro (11-1134-31, 11-1134-32).
- **Silent Series:** 45 Combi el (24-3765-83), 45S Combi el (24-3768-83).
- **Turbo Series:** 41 el (23-2365-12, 23-4365-23), 45S Rental (292452041/ST9), 45S Rental B (292502021/ST9), 50S Rental (292502041/ST9), 50S Rental B (292502021/ST9), 50SE Rental (292502541/ST9), 55 4S Rental (292554041/ST9), 55 4S Rental B (292553021/ST9), 55 4SE Rental (292554541/ST9).
- **Turbo Pro Series:** 50S (292502038/ST9, 292502138/ST9), 55 4S (292553021/ST9).

SETUP AND INSTALLATION

Replacing the front wheels on your Stiga lawnmower typically involves a few steps. Always refer to your lawnmower's original instruction manual for specific safety precautions and detailed disassembly/assembly procedures.

1. **Safety First:** Ensure the lawnmower is turned off, the spark plug cap is disconnected (for petrol models), or the battery is removed (for electric/cordless models) to prevent accidental starting.
2. **Stabilize the Lawnmower:** Tilt the lawnmower onto its back or side, ensuring it is stable and cannot tip over during the wheel replacement process. Use appropriate supports if necessary.
3. **Remove Old Wheel:** Locate the retaining mechanism for the front wheel (e.g., a bolt, nut, or clip). Use the correct tools to carefully remove this fastener. Once the fastener is removed, the old wheel should slide off the axle.
4. **Clean Axle:** Inspect the axle for any dirt, debris, or rust. Clean the axle thoroughly to ensure the new wheel can be installed smoothly.
5. **Install New Wheel:** Slide the new SPARES2GO front wheel onto the axle, ensuring it is correctly aligned.
6. **Secure New Wheel:** Reattach the retaining mechanism (bolt, nut, or clip) and tighten it securely. Do not overtighten, as this can damage the wheel or axle.
7. **Repeat for Other Wheel:** If replacing both front wheels, repeat steps 3-6 for the second wheel.
8. **Test:** Once both wheels are installed, return the lawnmower to its operating position and gently push it to ensure the new wheels rotate freely and are securely attached.

If you encounter any difficulties, consult a qualified technician or your lawnmower's specific service manual.

OPERATING CONSIDERATIONS

While these are replacement parts, proper operation of your lawnmower relies on functional wheels. Ensure wheels are free from obstructions and rotate smoothly before each use. Avoid operating the lawnmower on excessively rough terrain that could damage the wheels or axle.

MAINTENANCE

Regular maintenance of your lawnmower wheels will extend their lifespan and ensure optimal performance.

- **Cleaning:** After each use, clean any grass clippings, mud, or debris from the wheels and around the axle area. This prevents buildup

that can hinder rotation or cause premature wear.

- **Inspection:** Periodically inspect the wheels for signs of wear, cracks, or damage. Check that the tread pattern is still intact for good traction.
- **Axle Check:** Ensure the wheels are still securely fastened to the axle. If there is any wobble, check the retaining mechanism and tighten if necessary.
- **Lubrication:** Some lawnmower axles may benefit from light lubrication. Refer to your lawnmower's original manual for recommendations on axle lubrication.

TROUBLESHOOTING

If you experience issues with your new wheels, consider the following:

- **Wheel Not Rotating Freely:**
 - Check for grass, dirt, or debris caught between the wheel and the axle housing.
 - Ensure the retaining bolt/nut is not overtightened.
 - Verify the wheel is correctly seated on the axle.
- **Wobbling Wheel:**
 - Ensure the retaining bolt/nut is securely tightened.
 - Inspect the axle for damage or bending.
 - Check the wheel itself for any structural damage.
- **Poor Traction:**
 - Ensure the tread pattern is clean and free of mud or grass.
 - Verify that the correct wheel size and type are installed for your lawnmower model.

SPECIFICATIONS

Feature	Detail
Brand	Spares2go
Model Number	04-SGU-533
Quantity	2 Wheels
Material	Plastic
Wheel Diameter (Approx.)	165 mm
Wheel Width (Approx.)	45 mm
Inner Diameter (Axle Hole, Approx.)	35 mm
Inner Diameter (Hub, Approx.)	27 mm
Manufacturer	SPARES2GO
Country of Origin	China

WARRANTY INFORMATION

Specific warranty details for SPARES2GO products may vary. Please refer to the seller's return policy or contact SPARES2GO directly for information regarding product warranties and guarantees. Generally, products are covered against manufacturing defects for a reasonable period from the date of purchase.

SUPPORT

For further assistance, technical support, or inquiries regarding this product, please contact the seller directly through the platform where the purchase was made. You may also visit the official SPARES2GO website for general information and contact options.

Seller: [SPARES-2-GO](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B5VLNLT4>

More documents and user manuals: <https://manuals.plus/>