

SYMA Z4

SYMA Storm Quadcopter Z4 User Manual

Model: Z4

INTRODUCTION

The SYMA Storm Quadcopter Z4 is an excellent drone designed for beginners, offering ease of use and versatile flight capabilities. Its mid-sized frame makes it both light and agile, suitable for indoor use or outdoor flight in calm conditions. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Z4 Quadcopter to ensure a safe and enjoyable flying experience.

WHAT'S IN THE BOX

- SYMA Storm Quadcopter Z4
- Remote Control
- 4 Replacement Blades
- USB Charging Cable



SYMA Storm Quadcopter Z4, fully assembled and ready for flight.

SETUP

1. Unfolding the Drone

The Z4 Quadcopter features a compact, foldable design for easy transport and storage. Gently unfold each of the four arms until they click into their locked position. Ensure all arms are fully extended before flight.



COMPACT FOLDABLE DESIGN

The SYMA Storm Quadcopter Z4 in its compact, folded state, ideal for portability and storage.

2. Charging the Drone Battery

Connect the drone's battery to the included USB charging cable. Plug the USB end into a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status. A full charge typically takes approximately 60-80 minutes. Disconnect once fully charged.

3. Installing Remote Control Batteries

The remote control requires 4 "AA" batteries (not included). Open the battery compartment on the back of the remote control and insert the batteries, ensuring correct polarity. Close the compartment securely.



The remote control unit for the SYMA Storm Quadcopter Z4, showing the control sticks and power button.

4. Pairing the Drone and Remote Control

1. Place the drone on a flat, level surface.
2. Turn on the drone's power switch. The drone's indicator lights will flash.
3. Turn on the remote control.
4. Push the left joystick (throttle) all the way up, then pull it all the way down. The drone's indicator lights will stop flashing and remain solid, indicating successful pairing.

OPERATING INSTRUCTIONS

1. One-Key Take-Off and Landing

After pairing, press the one-key take-off/landing button on the remote control. The drone will automatically ascend to a stable hovering height. Press the button again to initiate an automatic landing.

2. Altitude Hold

The Z4 features an altitude hold function, allowing the drone to maintain a stable height without continuous throttle input, making it easier for beginners to control.

3. Speed Modes


The drone offers 2 speed modes. The slower speed is recommended for beginners to gain familiarity with controls, while the faster speed provides more agile flight for experienced users. Refer to the remote control diagram for the speed switch button.

4. 360-Degree Flips

To perform a 360-degree flip, fly the drone to a height of at least 3 meters. Press the flip button on the remote control, then quickly push the right joystick in the desired flip direction (forward, backward, left, or right). The drone will execute a flip in that direction.

5. Basic Flight Controls

- **Left Joystick (Throttle):** Push up to ascend, pull down to descend.
- **Left Joystick (Yaw):** Push left to rotate counter-clockwise, push right to rotate clockwise.
- **Right Joystick (Pitch/Roll):** Push forward to fly forward, pull back to fly backward. Push left to fly left, push right to fly right.

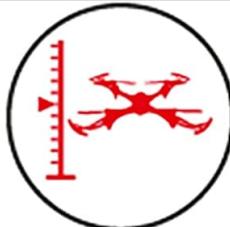

Altitude Hold



2 Speeds



Recharge USB



10 Minutes Flight Time



Easy One Button Take-Off / Landing



Compact - Foldable Design



Key features of the SYMA Storm Quadcopter Z4, including Altitude Hold, 2 Speeds, USB Recharge, 10 Minutes Flight Time, Easy One Button Take-Off/Landing, Compact-Foldable Design, and 360° Flip capability.

MAINTENANCE

1. Cleaning

Regularly clean the drone with a soft, dry cloth to remove dust and debris. Avoid using water or harsh chemicals.

2. Propeller Replacement

If propellers are damaged, replace them with the included spare blades. Ensure the correct propeller (marked A or B) is installed on the corresponding motor arm. Gently pull off the old propeller and push on the new one.

3. Battery Care

To prolong battery life, avoid overcharging or completely draining the battery. Store the battery in a cool, dry place when not in use.

TROUBLESHOOTING

- **Drone not responding:** Ensure both drone and remote control are powered on and properly paired. Check remote control batteries.
- **Short flight time:** Ensure the drone battery is fully charged. Old or damaged batteries may have reduced capacity.
- **Unstable flight:** Recalibrate the drone by placing it on a flat surface and performing the calibration sequence (refer to quick start guide if available). Check for damaged propellers.
- **Drone drifts:** Use the trim buttons on the remote control to adjust for any drifting.

SPECIFICATIONS

Feature	Detail
Brand	SYMA
Model Name	SYMA STORM Quadcopter Z4, Great Beginner Drone, One Key Take Off and Landing
Model Number	Z4
Age Range (Description)	Adult (Manufacturer recommended: 5 years and up)
Color	Multicolor
Video Capture Resolution	720p
Connectivity Technology	USB
Skill Level	Beginner
Item Weight	0.42 Kilograms (14.8 ounces)
Remote Control Technology	IR
Control Type	Remote Control
Material	Plastic
Are Batteries Included	No (for remote control)
Rechargeable Battery Included	Yes (for drone)
Product Dimensions	13.65 x 2.54 x 7.8 inches
Release Date	July 10, 2022

