



Manuals.plus /

› Magic Mixies /

› Magic Mixies Castle Play Tent Model 13204 Instruction Manual

Magic Mixies 13204

Magic Mixies Castle Play Tent Instruction Manual

Model: 13204

Brand: Magic Mixies

INTRODUCTION

This manual provides instructions for the safe and proper use of your Magic Mixies Castle Play Tent. Please read all instructions carefully before assembly and use. This play tent is designed for imaginative play, offering a dedicated space for children indoors or outdoors.

INCLUDED COMPONENTS

- 1 x Magic Mixies Castle Play Tent Fabric
- 1 x Set of Assembly Rods

SETUP INSTRUCTIONS

The Magic Mixies Castle Play Tent features a pop-up design for quick and easy setup. Follow these steps to assemble your tent:

1. Carefully remove the play tent fabric and assembly rods from its packaging.
2. Unfold the tent fabric. The tent is designed to pop up into its basic shape.
3. Insert the provided rods into the designated sleeves along the seams of the tent. Ensure all rods are fully inserted and secured to provide stability.
4. Adjust the tent to ensure it stands upright and is stable.



Image: The set of assembly rods included with the play tent.



Image: The Magic Mixies Castle Play Tent fully assembled, showcasing its vibrant colors and castle design.

Official Product Video: Setup and Features

Your browser does not support the video tag.

Video: An official product video from Moose Toys LLC. demonstrating the assembly and various features of the Magic Mixies Castle Play Tent.

OPERATING INSTRUCTIONS

Once assembled, the play tent is ready for use. Children can enter and exit through the main archway. The tent features arch windows for visibility and interaction. This tent is suitable for both indoor and outdoor play, providing a fun and imaginative space.



Image: A view of the Magic Mixies Castle Play Tent from a slight angle, showing the entrance and interior space.

MAINTENANCE

To ensure the longevity of your play tent, follow these maintenance guidelines:

- **Cleaning:** Wipe down the tent fabric with a damp cloth and mild soap. Do not machine wash or use

harsh chemicals.

- **Storage:** To store, carefully remove the rods and fold the tent flat. Store in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect the tent fabric and rods for any signs of wear or damage. Replace damaged components if necessary.

TROUBLESHOOTING

If you encounter any issues with your play tent, consider the following:

- **Tent not standing upright:** Ensure all assembly rods are fully inserted into their sleeves and are not bent or broken. Check that the tent fabric is properly stretched and secured.
- **Damage to fabric or rods:** If any part of the tent is damaged, discontinue use to prevent injury. Contact customer support for replacement parts or further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	13204
Brand	Magic Mixies
Dimensions (D x W x H)	31.5" x 31.5" x 41.73" (approx. 80cm x 80cm x 106cm)
Item Weight	1.32 Pounds (approx. 0.6 kg)
Material Type	Fabric (tent), Fiberglass (frame)
Color	Multicolor
Minimum Age	24 Months
Maximum Age	180 Months
Assembly Required	Yes (rod insertion)

WARRANTY AND SUPPORT

For warranty information or product support, please contact Moose Toys LLC., the manufacturer of the Magic Mixies Castle Play Tent. Refer to the product packaging for specific contact details or visit the official Magic Mixies website.

Manufacturer: MOOSE TOYS LLC