

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Magic Mixies](#) /
- › [Magic Mixies S2 Colour Surprise Magic Cauldron Instruction Manual](#)

**Magic Mixies 14686**

## **Magic Mixies S2 Colour Surprise Magic Cauldron Instruction Manual**

Model: 14686 | Brand: Magic Mixies



Image: The Magic Mixies S2 Colour Surprise Magic Cauldron.

## IMPORTANT SAFETY INFORMATION

**WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.**

Recommended Age: 5 - 15 years.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Magic Mixies Cauldron
- 1 x Plush Mixie
- 1 x Potion Bottle with Lid
- 1 x Magic Wand (Dropper)
- 1 x Fizz Powder Packet
- 1 x Colour Powder Packet
- 1 x Instruction Manual (this document)



Image: All components included in the Magic Mixies S2 Colour Surprise Magic Cauldron set.

## SETUP AND PREPARATION

- 1. Unpack Components:** Carefully remove all items from the packaging.
- 2. Battery Installation:** The cauldron requires 3 LR44 batteries (not included). Locate the battery compartment on the underside of the cauldron, open it with a small screwdriver, insert the batteries according to polarity markings, and secure the cover.
- 3. Prepare Your Workspace:** It is recommended to perform the magic reveal on a flat, stable surface that can be easily cleaned, as some fizzing and color change effects may involve liquids.

## OPERATING INSTRUCTIONS: THE MAGIC REVEAL

Follow these steps to reveal your Magic Mixie:

- 1. Add Fizz Powder:** Open the Fizz Powder packet and pour its contents into the cauldron.



Image: Children adding the fizz powder to the cauldron.

- 2. Pour Potion:** Fill the included potion bottle with water. Slowly pour the water from the potion bottle into the cauldron. Observe the fizzing reaction.



Image: Children pouring water into the cauldron to activate the fizz powder.

3. **Add Color Powder:** Once the fizzing subsides, open the Colour Powder packet and add it to the cauldron. This will initiate the color change effect.
4. **Stir with Wand:** Use the magic wand (dropper) to gently stir the contents of the cauldron.



Image: Using the wand to stir the cauldron's contents.

5. **Reveal Your Mixie:** As the color changes and the reaction completes, your plush Magic Mixie will be revealed from within the cauldron.



Image: The moment of revealing the plush Mixie from the cauldron.

6. **Activate Color Change on Mixie:** Some Magic Mixies have color-changing features. Use the magic wand to apply water to specific areas of your plush Mixie (e.g., forehead gem, belly button) to observe additional color changes.



Image: Applying water to the Mixie with the wand to reveal color changes.

## MAINTENANCE AND CARE

- **Cauldron Cleaning:** After each use, rinse the cauldron thoroughly with clean water. Do not use harsh chemicals or abrasive cleaners. Allow it to air dry completely.
- **Plush Mixie Care:** The plush Mixie can be spot cleaned with a damp cloth if necessary. Do not machine wash or submerge in water, as this may damage its color-changing features or internal components.
- **Storage:** Store all components in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the cauldron's lights or sounds diminish, replace the LR44 batteries.

## TROUBLESHOOTING

Issue	Possible Cause / Solution
-------	---------------------------

Issue	Possible Cause / Solution
Cauldron not fizzing or changing color.	<p>Ensure both Fizz Powder and Colour Powder packets were added.</p> <p>Verify sufficient water was added from the potion bottle.</p> <p>Check if the powders were mixed properly with the wand.</p>
Plush Mixie not appearing.	<p>Confirm all steps of the magic reveal were followed in sequence.</p> <p>Ensure enough time was allowed for the reaction to complete.</p>
Mixie's color-changing feature not working.	<p>Ensure water is applied directly to the designated color-changing areas.</p> <p>The effect may be less noticeable if the Mixie is already wet. Allow it to dry and re-test.</p>
Cauldron lights/sounds not working.	<p>Check battery installation and ensure batteries are fresh.</p> <p>Verify the battery compartment is securely closed.</p>

## PRODUCT SPECIFICATIONS

- Model Number:** 14686
- Product Dimensions:** 5.31 x 6.69 x 6.69 inches
- Item Weight:** 14.1 ounces
- Batteries:** 3 x LR44 batteries (required)
- Manufacturer Recommended Age:** 5 - 15 years
- Manufacturer:** MOOSE TOYS LLC

## WARRANTY INFORMATION

Specific warranty details for the Magic Mixies S2 Colour Surprise Magic Cauldron are typically provided with the product packaging or can be obtained by contacting the manufacturer directly. Please retain your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Magic Mixies S2 Colour Surprise Magic Cauldron, please contact Moose Toys LLC customer support. Refer to the product packaging or their official website for current contact information.

*Note: This manual provides general instructions. Product appearance and specific features may vary slightly.*

