

## QUMOX G47

# QUMOX G47 Car FM Transmitter and MP3 Player User Manual

Model: G47 | Brand: QUMOX

## INTRODUCTION

The QUMOX G47 is a versatile car FM transmitter and MP3 player designed to enhance your in-car audio experience. It features Bluetooth 5.0 for wireless audio streaming, multiple charging ports (Type-C and USB), and supports TF card and U-disk playback. The device also includes an RGB light for customizable ambiance, hands-free calling, and fast charging capabilities.

## PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the components of your QUMOX G47 device:



**Image:** Labeled diagram of the QUMOX G47 showing its various ports and buttons.

- **LED Display:** Shows FM frequency and other status information.
- **U Disk Reader:** USB port for playing music from a USB flash drive.
- **Previous Song Button:** Press to go to the previous track.
- **Light Switch:** Button to change or turn off the RGB ambient light.
- **TF Card Slot:** Insert a TF (MicroSD) card for music playback.
- **Power Supply:** Standard car cigarette lighter plug for power.
- **Type-C Output:** USB Type-C port for charging devices (5V/3.0A).
- **USB Charging Port:** Standard USB-A port for charging devices (5V/3.0A).

- **Next Song Button:** Press to go to the next track.
- **Play/Pause/Answer/Hang Up Button:** Multi-function button for media control and call management.

## SETUP INSTRUCTIONS

---

1. **Power On:** Insert the QUMOX G47 into your car's 12V/24V cigarette lighter socket. The device will power on automatically, and the LED display will light up.
2. **Set FM Frequency:**
  - Tune your car's FM radio to an unused frequency (one with static or no broadcast).
  - On the QUMOX G47, press and hold the multi-function button (Play/Pause/Answer) until the FM frequency on the LED display starts flashing.
  - Rotate the multi-function button left or right to adjust the frequency to match your car's radio.
  - Once matched, press the multi-function button again to confirm the frequency.



**Image:** Visual guide for synchronizing the FM frequency between the device and your car's radio.

3. **Bluetooth Pairing:**
  - Enable Bluetooth on your mobile device (smartphone, tablet).
  - Search for available Bluetooth devices and select "G47" from the list.
  - Once paired, a voice prompt will confirm the connection. You can now stream audio from your device to your car stereo.

## OPERATING INSTRUCTIONS

---

### Audio Playback

- **Bluetooth Playback:** After successful Bluetooth pairing, play music on your mobile device. The audio will be transmitted to your car stereo via the set FM frequency.
- **TF Card/U-Disk Playback:** Insert a TF card or USB flash drive (U-disk) containing MP3/WMA/WAV/FLAC audio files into the respective slot. The device will automatically detect and play music from the storage device.
- **Switching Modes:** The device will automatically prioritize playback from Bluetooth, TF card, or U-disk based on connection.
- **Track Control:** Use the "Previous Song" and "Next Song" buttons on the device to skip tracks.
- **Play/Pause:** Press the multi-function button (Play/Pause/Answer) to play or pause music.



**Image:** The QUMOX G47 with a TF card and USB flash drive, illustrating media playback options.

## Hands-Free Calling

- **Answer Call:** When a call comes in, press the multi-function button (Play/Pause/Answer) once to answer.
- **End Call:** During a call, press the multi-function button once to hang up.
- **Reject Call:** Press and hold the multi-function button to reject an incoming call.
- **Redial:** Double-press the multi-function button to redial the last number.

## Device Charging

- Connect your mobile devices to the USB-A or Type-C charging ports on the QUMOX G47 using appropriate cables.
- The device provides 5V/3.0A output from both USB and Type-C ports for efficient charging.



**Image:** A smartphone connected to the QUMOX G47's Type-C port for charging.

## RGB Ambient Light

- Press the "Light Switch" button to cycle through different RGB colors or to turn the light off.
- The device offers 7 adjustable colors to match your car's interior or personal preference.



**Image:** The QUMOX G47 displaying different RGB light colors, highlighting the customizable ambiance feature.

## MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or solvents.
- Ensure the device is unplugged from the cigarette lighter when not in use for extended periods.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

| Problem                           | Possible Cause                                                                | Solution                                                                                                                                                                                                                                                                                   |
|-----------------------------------|-------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power/Device not turning on    | Loose connection; Car cigarette lighter socket issue; Blown fuse in car.      | Ensure the device is firmly plugged into the cigarette lighter. Check if the car's cigarette lighter socket is working. Consult a car technician if fuse is suspected.                                                                                                                     |
| Poor sound quality/Static/Hissing | FM frequency interference; Volume levels too low/high; Weak Bluetooth signal. | <ul style="list-style-type: none"><li>◦ Find a clearer, unused FM frequency on your car radio and match it on the G47.</li><li>◦ Adjust the volume on both your mobile device and car stereo.</li><li>◦ Ensure your mobile device is within Bluetooth range (approx. 10 meters).</li></ul> |
| Bluetooth connection issues       | Device not in pairing mode; Incorrect device selected; Interference.          | <ul style="list-style-type: none"><li>◦ Ensure Bluetooth is enabled on your mobile device.</li><li>◦ Forget "G47" from your device's Bluetooth list and re-pair.</li><li>◦ Restart both the G47 (by unplugging and replugging) and your mobile device.</li></ul>                           |

| Problem                    | Possible Cause                                                               | Solution                                                                                                                                                                                                                                       |
|----------------------------|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TF card/U-disk not playing | Unsupported file format;<br>Corrupted files; Improperly inserted card/drive. | <ul style="list-style-type: none"><li>◦ Ensure audio files are in supported formats (MP3/WMA/WAV/FLAC).</li><li>◦ Reinsert the TF card or U-disk correctly.</li><li>◦ Test the card/drive on another device to check for corruption.</li></ul> |

## SPECIFICATIONS

- **Model:** G47
- **Bluetooth Version:** 5.0
- **Bluetooth Transmission Distance:** Up to 10 meters
- **USB Output:** 5V / 3.0A
- **Type-C Output:** 5V / 3.0A
- **Working Voltage:** 12V-24V (compatible with most cars and trucks)
- **Supported Audio Formats:** MP3, WMA, WAV, FLAC
- **Media Support:** TF Card, U-Disk (USB Flash Drive)
- **Material:** Plastic
- **Color:** Black
- **Dimensions:** Approximately 75 x 45 x 30 mm
- **Compatible Devices:** Smartphones, tablets, laptops, car stereo systems

## SAFETY INFORMATION

Please read and follow these safety guidelines:

- This device uses Bluetooth technology and may cause interference with other wireless devices.
- Ensure proper ventilation around the device during operation.
- Do not expose the device to extreme temperatures, direct sunlight, or moisture.
- Avoid disassembling or modifying the device, as this may void the warranty and pose safety risks.
- When handling car batteries or electrical systems, always follow your vehicle manufacturer's safety instructions.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact QUMOX customer service directly. Specific warranty terms may vary by region and retailer.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**