

[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY RC4876 Universal Remote Control Instruction Manual

## ALLIMITY RC4876

# ALLIMITY RC4876 Universal Remote Control Instruction Manual

Model: RC4876

## INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY RC4876 universal remote control. Designed to replace your original remote, the RC4876 offers broad compatibility with various television models from brands such as LINSAR, Lazer, Nabo, OK, Logik, PRINCETON, and QILIVE. This remote is pre-programmed and typically requires no setup for compatible devices, allowing for immediate use.





Image: The ALLIMITY RC4876 universal remote control, featuring a black finish with clearly labeled buttons for power, numbers, volume, channel, menu, navigation, and media playback.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

### 2. Initial Use (No Programming Required)

The ALLIMITY RC4876 remote control is designed for immediate use with a wide range of compatible TV models. No complex programming or code entry is typically required. Simply install the batteries, point the remote at your television, and begin operating it.

**Note:** If the remote does not function immediately with your device, ensure your TV model is listed among the compatible devices in the [Specifications](#) section. For specific models not responding, ensure there are no obstructions between the remote and the TV's infrared receiver.

## OPERATING INSTRUCTIONS

---

The RC4876 remote control provides full functionality for your compatible television. Below is a general guide to its buttons and their functions:





Image: Top-down view of the ALLIMITY RC4876 remote control, highlighting the layout of all buttons including power, numeric keypad, volume, channel, menu, navigation, and media controls.

- **Power Button ( ):** Turns the television on or off.
- **Numeric Keypad (0-9):** Used for direct channel selection and inputting numbers.
- **Volume Control (+V / -V):** Adjusts the audio volume up or down.
- **Channel Control (+P / -P):** Changes the television channel up or down.
- **Mute Button ( ):** Mutes or unmutes the television audio.
- **Menu Button:** Accesses the television's main menu.
- **Q.MENU Button:** Accesses quick menu options.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Used to navigate through menus and options.
- **OK Button:** Confirms selections within menus.
- **BACK Button:** Returns to the previous screen or menu.
- **EXIT Button:** Exits the current menu or function.
- **Source/Input Button ( ):** Changes the input source (e.g., HDMI 1, AV).
- **Info Button (i):** Displays information about the current program or input.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain applications or menus, as indicated on screen.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback on compatible devices or applications.
- **LANG. Button:** Changes audio language or subtitle options.

## MAINTENANCE

---

### Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.

- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or benzene, as these can damage the remote's finish or internal components.

Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you encounter issues with your ALLIMITY RC4876 remote control, please refer to the following common solutions:

| Problem                                     | Possible Cause / Solution                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote is not working.                      | <b>Batteries:</b> Check if the batteries are inserted correctly with the correct polarity. Replace old or depleted batteries with new AAA batteries.<br><b>Line of Sight:</b> Ensure there are no obstructions between the remote control and the TV's infrared receiver.<br><b>Distance:</b> Make sure you are within the effective operating range (up to 10 meters). |
| Some functions are not working.             | <b>Compatibility:</b> Verify that your television model is listed as compatible with the RC4876 remote. While universal, some specific advanced functions might vary by TV model.<br><b>TV Settings:</b> Some functions might require specific settings within your TV's menu. Consult your TV's original manual.                                                       |
| Remote control is sluggish or unresponsive. | <b>Low Batteries:</b> Replace the batteries.<br><b>Interference:</b> Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.                                                                                                                                                                       |

SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Name:** RC4876 (QYSY-RC4876-QYSY02)
- **Color:** Black
- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** Universal compatibility
- **Maximum Range:** 10 meters (approximately 33 feet)
- **Controller Type:** Remote Control
- **Compatible Devices:** LINSAR, Lazer, Nabo, OK, Logik, PRINCETON, QILIVE TV models including Q1324, Q1698, Q.32-162-WHITE, Q32-163-W, Q.32-164, Q1127, Q1127/2, PR32HD21B, PR48FHD18B, L24HEDW14, LZ32700I, LZ32700, LZ4816I, LED24HBDVD, LED32HB, 19LED900, 20LED980, 22LED1600, 22LED906TIE, 32LED300S, 40LCD507, 19LED900IE, 22LED900, 24LED900, 32LED900B, 65F8200T, 19LED906T, 22LED901, 26LED906T, 32LED900W, 19LED900W, 22LED900IE, 26LED900, 32LED900T, 20LED2000T, 32LED200, 39LED900IE, 28LV4000,

43LV4000, 19LV2000, 28LV3000, 48UV7000, 32LV4700, 19LV2500, 32LV3000, 40LV3000, 32LV4200, 22LV2000, 39LV3000, 39LV3100, 22LV4000, 22LV2500, 42LV3000, 24LV4000, 22LV4500, 24LV2000.

## Warranty Information

Specific warranty details for the ALLIMITY RC4876 remote control are not provided in the available product data. Please refer to the seller's return policy or contact the retailer where the product was purchased for warranty information.

## Customer Support

For further assistance or inquiries regarding your ALLIMITY RC4876 remote control, please contact the seller directly through the platform where the purchase was made. Support contact information is not available in the provided product data.

© 2023 ALLIMITY. All rights reserved.

### Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0B5WPLZHV>

More documents and user manuals: <https://manuals.plus/>