

Casio SA-51

Casio Casiotone SA-51 32-Key Mini Keyboard User Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Casio Casiotone SA-51 32-Key Mini Keyboard. Please read this manual thoroughly before using the instrument to ensure optimal performance and longevity.

The Casio SA-51 is a compact and portable mini keyboard designed for beginners and on-the-go musicians. It features 32 mini keys, 100 built-in tones, 50 rhythm patterns, and 10 built-in songs for practice and enjoyment. Its lightweight design and dual power options make it versatile for various settings.



A compact body packed with beautiful tones, rhythms and functions

Image: The Casio Casiotone SA-51 Mini Keyboard, showcasing its compact body and control panel with various functions.

SETUP

Unboxing and Included Components

Carefully remove all components from the packaging. Verify that all items are present:

- Casio Casiotone SA-51 32-Key Mini Keyboard
- Power Supply (AC adapter)
- Key Stickers
- Instructional Book
- Instructional DVD
- Austin Bazaar Polishing Cloth



Image: All components included in the Casio Casiotone SA-51 bundle, laid out for inspection.

Powering the Keyboard

The SA-51 can be powered using two methods:

1. **AC Adapter:** Connect the included AC adapter to the DC 9.5V jack on the rear of the keyboard and plug it into a standard wall outlet.
2. **Batteries:** For portable use, insert six (6) AA-size alkaline batteries (not included) into the battery compartment on the underside of the keyboard. Ensure correct polarity. The keyboard can operate for approximately 12 hours on batteries.

Connecting Headphones or External Audio

To practice privately or connect to external speakers, use the PHONES / OUTPUT (stereo mini jack) located on the rear of the keyboard. This is a 3.5mm jack.

Console panel



Input/Output Terminals

Image: Detailed view of the keyboard's console panel and the input/output terminals, including the power input and headphone jack.

Applying Key Stickers

The included key stickers can be applied to the keys to assist with learning note identification. Follow the instructions provided with the stickers for proper placement.

OPERATING INSTRUCTIONS

Power On/Off and Volume Control

- **Power:** Use the ON/OFF switch located on the control panel to turn the keyboard on or off.
- **Volume:** Adjust the volume slider on the control panel to your desired listening level.

Selecting Tones

The SA-51 features 100 built-in tones. To select a tone:

1. Press the **TONE** button.
2. Use the number buttons (0-9) to enter the two-digit tone number (e.g., 00 for Piano, 12 for Organ, 20 for Guitar).
3. The selected tone number will appear on the LCD screen.



Tone Buttons



Piano



Trumpet



Drums

Image: The tone selection buttons on the Casio Casiotone SA-51, including Piano, Trumpet, and Drums.

Selecting Rhythm Patterns

The keyboard includes 50 rhythm patterns. To select a rhythm:

1. Press the **PATTERN** button.
2. Use the number buttons (0-9) to enter the two-digit rhythm number (e.g., 00 for Pops, 15 for European).
3. Press the **START/STOP** button to begin or end the rhythm.

Using the Song Bank

The SA-51 has 10 built-in songs. To play a song:

1. Press the **SONG BANK** button.
2. Use the number buttons (0-9) to enter the song number (e.g., 03 for Twinkle, Twinkle Little Star).
3. Press the **START/STOP** button to begin or end the song.
4. Press the **MELODY ON/OFF** button to mute or unmute the melody part of the song, allowing you to play along.

Adjusting Tempo

Use the **TEMPO** buttons (up/down arrows) to increase or decrease the speed of rhythms or songs.

Additional Sound Controls

The keyboard also features controls for octave shift, transpose, tuning, and reverb to further customize your sound. Refer to the instructional book for detailed usage of these functions.



Video: A demonstration of the Casio Casiotone keyboard's features, including changing tones, rhythm patterns, and using the song bank. While the video title mentions SA-81, the features demonstrated are applicable to the SA-51 model.

MAINTENANCE

Cleaning

Regularly wipe the keyboard with the included Austin Bazaar polishing cloth or a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents, as these can damage the finish.

Battery Care

If using batteries, remove them if the keyboard will not be used for an extended period to prevent leakage and damage. Replace all batteries with new ones of the same type simultaneously.

TROUBLESHOOTING

No Sound

- Check if the power is on and the volume is turned up.
- Ensure headphones are not connected if you intend to use the built-in speakers.
- If using batteries, check if they are correctly inserted and not depleted.
- If using the AC adapter, ensure it is securely connected to both the keyboard and the power outlet.

Keys Not Responding

- Ensure the keyboard is powered on.
- If specific keys are not responding, gently clean around them.

For further assistance, consult the instructional book or contact customer support.

SPECIFICATIONS

Brand	Casio
Model Name	Casio SA-51

Number of Keys	32 mini keys
Maximum Polyphony	32 notes
Number of Tones	100 built-in tones
Rhythms / Patterns	50
Built-in Songs	10
Internal Speakers	8 cm × 2
Amplifier Output	0.5 W + 0.5 W
Power Supply	6 × AA batteries or AD-E95100L AC adapter (9.5 V)
Power Consumption	3.2 W
Dimensions (W × D × H)	446 × 208 × 51 mm (17.56"D x 2"W x 8.19"H)
Weight	1.0 kg (2.2 Pounds)
Connectivity	PHONES / OUTPUT (stereo mini jack, 3.5mm)



Image: Visual representation of the Casio Casiotone SA-51's dimensions and weight.

WARRANTY INFORMATION

The Casio Casiotone SA-51 32-Key Mini Keyboard comes with a **1-year limited warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty documentation included with your product or visit the official Casio website.

SUPPORT

For additional support, product registration, or to view frequently asked questions, please visit the official Casio website or contact their customer service department. You can also visit the [Casio Store on Amazon](#) for more product information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question