

[Manuals.plus](#) /

› [CUBOT](#) /

› CUBOT Pocket 4.0 inch Mobile Phone User Manual

## CUBOT Pocket

# CUBOT Pocket 4.0 inch Mobile Phone User Manual

Model: Pocket | Brand: CUBOT

## 1. INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your CUBOT Pocket 4.0 inch Mobile Phone. The CUBOT Pocket is designed for portability and ease of use, featuring a compact 4.0-inch display and a lightweight design.



Figure 1: The CUBOT Pocket mobile phone, showcasing its compact size when held in a hand.

# Smartphone - 4.0 Inch Small Smartphone

Under Control by Yourself

**119 mm**  
Height

**58 mm**  
Width

**12.5 mm**  
Thickness

**128 g**  
Weight



CUBOT 2022  
New Model

Figure 2: Visual representation of the CUBOT Pocket's dimensions (119mm height, 58mm width, 12.5mm thickness) alongside a credit card for size comparison.

## 2. WHAT'S IN THE BOX

---

Verify that all items are present in the product packaging:

- CUBOT Pocket Mobile Phone
- USB Cable
- User Manual (this document)

## 3. SETUP

---


### 3.1 SIM Card and TF Card Installation

The CUBOT Pocket supports dual Nano SIM cards or one Nano SIM card and one TF (microSD) card for expanded storage up to 128GB. Ensure the device is powered off before inserting or removing cards.

1. Locate the SIM card tray on the side of the device.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place your Nano SIM card(s) and/or TF card into the designated slots on the tray. Refer to the diagram for correct orientation.
4. Gently push the tray back into the device until it is flush.

# Global 4G Android 11 Mini Smartphones

Support Dual Nano SIM Card or  
1 x Sim Card and  
1 x TF card

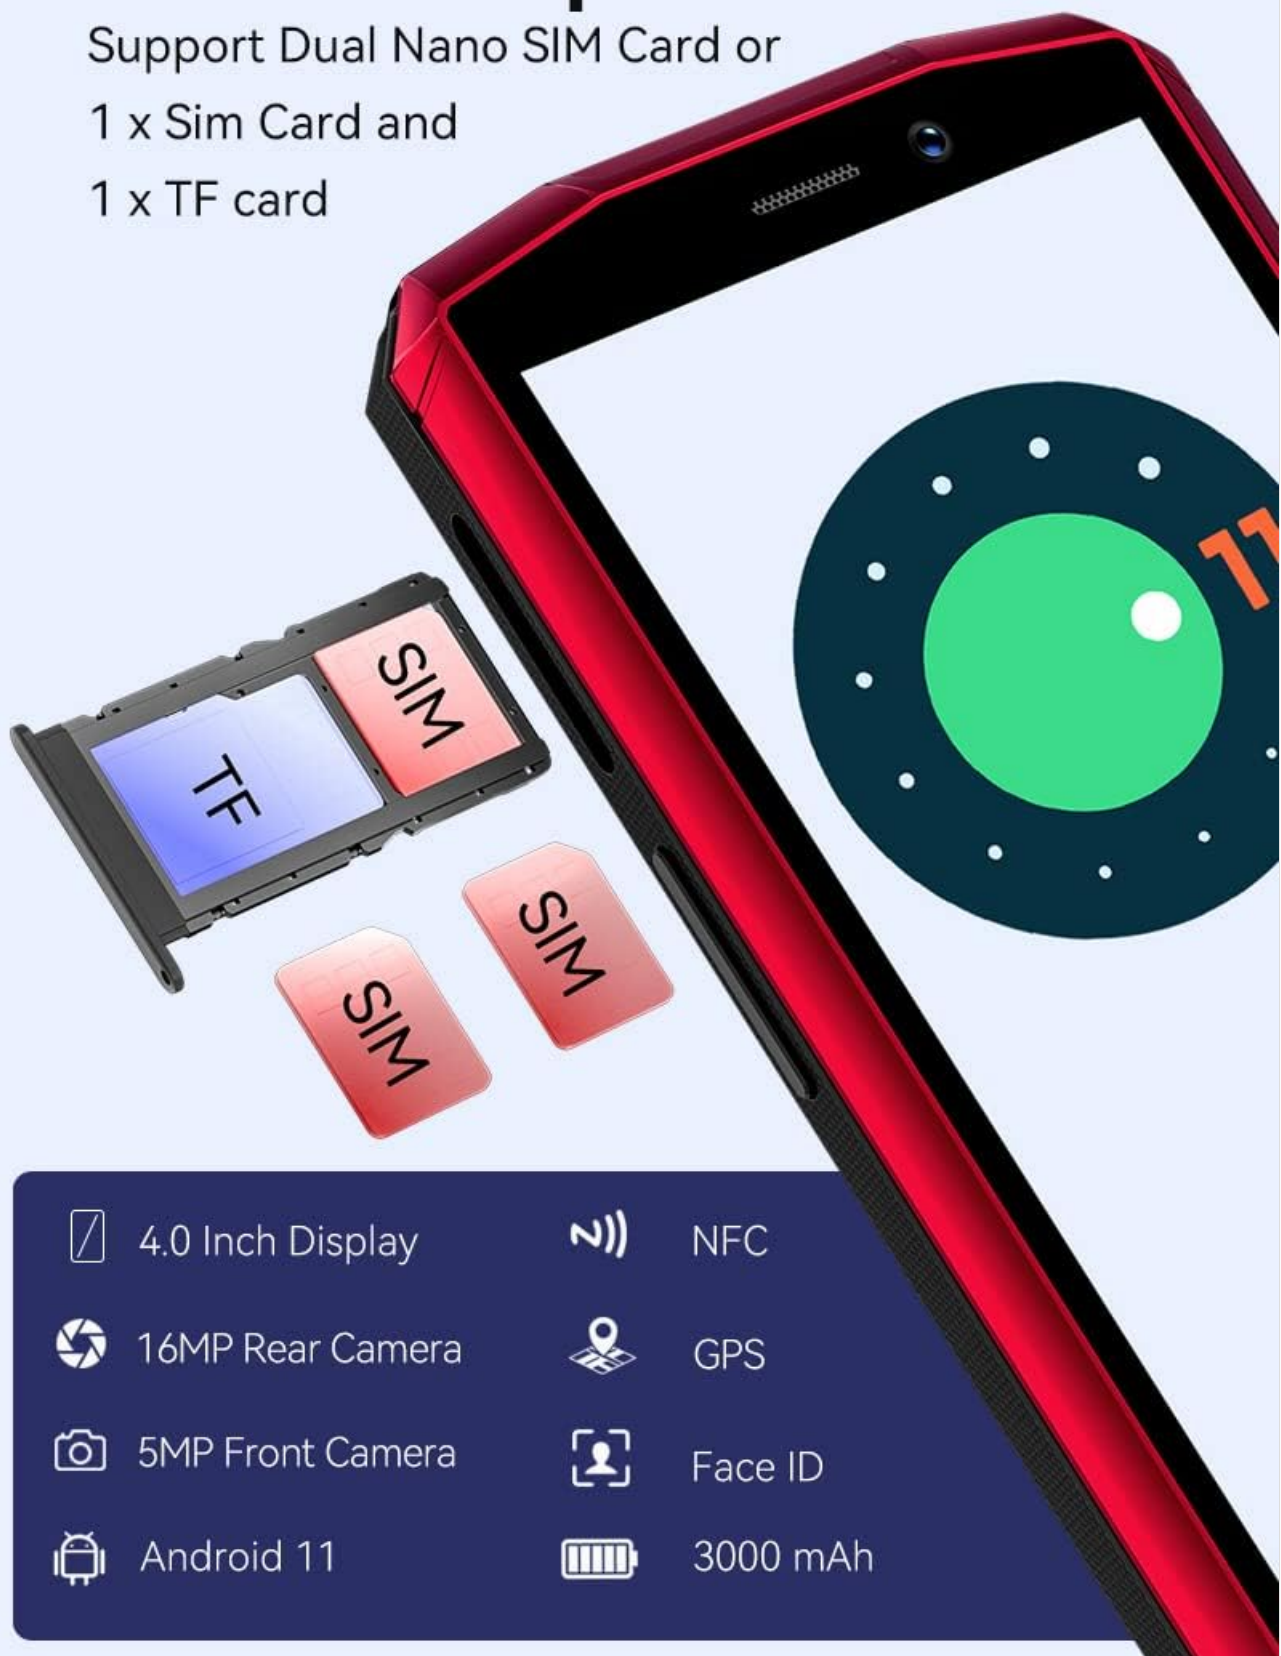

4.0 Inch Display



NFC



16MP Rear Camera



GPS



5MP Front Camera



Face ID



Android 11



3000 mAh

Figure 3: Illustration of inserting SIM cards and a TF card into the CUBOT Pocket's tray.

## 3.2 Initial Power On

Press and hold the Power button located on the side of the phone until the CUBOT logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

### 3.3 Network Configuration

The CUBOT Pocket supports 4G cellular networks and is unlocked for use with various mobile phone operators. After inserting your SIM card and powering on, the phone should automatically detect your network. If not, navigate to **Settings > Network & internet > Mobile network** to configure APN settings manually if required by your carrier.

## 4. OPERATING YOUR DEVICE

### 4.1 Basic Navigation (Android 11)

The CUBOT Pocket runs on Android 11, offering a streamlined user experience. Navigate using gestures or the traditional three-button navigation bar. Swipe down from the top of the screen to access notifications and quick settings.

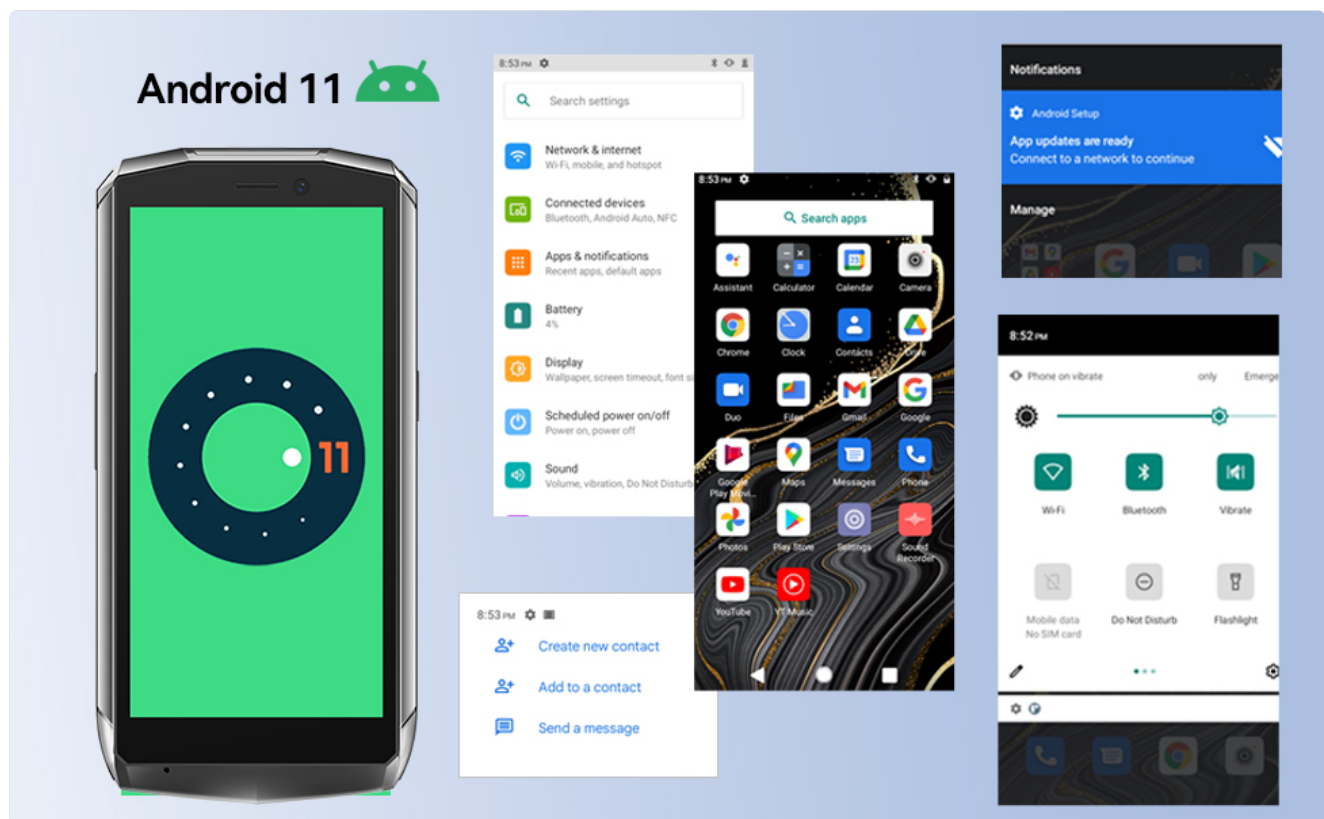


Figure 4: Various screenshots demonstrating the Android 11 operating system interface on the CUBOT Pocket, including settings, app drawer, and notification panel.

### 4.2 Camera Functions

Capture photos and videos using the 16MP rear camera and 5MP front camera. Open the Camera application from your home screen or app drawer. Tap to focus, and press the shutter button to take a picture. Switch between front and rear cameras using the icon on the screen.

*operate with one hand  
could take it anywhere*



Figure 5: A user demonstrating the use of the CUBOT Pocket for taking a selfie, highlighting its compact design for one-handed operation.

### 4.3 NFC Functionality

The CUBOT Pocket supports Near Field Communication (NFC) for convenient mobile payments and data exchange. To use NFC for payments, ensure NFC is enabled in **Settings > Connected devices > Connection preferences > NFC** and set up your preferred payment app (e.g., Google Pay).

Easy to make payments

# NFC – Support Google Pay

Need not bring cash when you go out, just bring your CUBOT Pocket mobile phone. Lighten the load on your backpack.

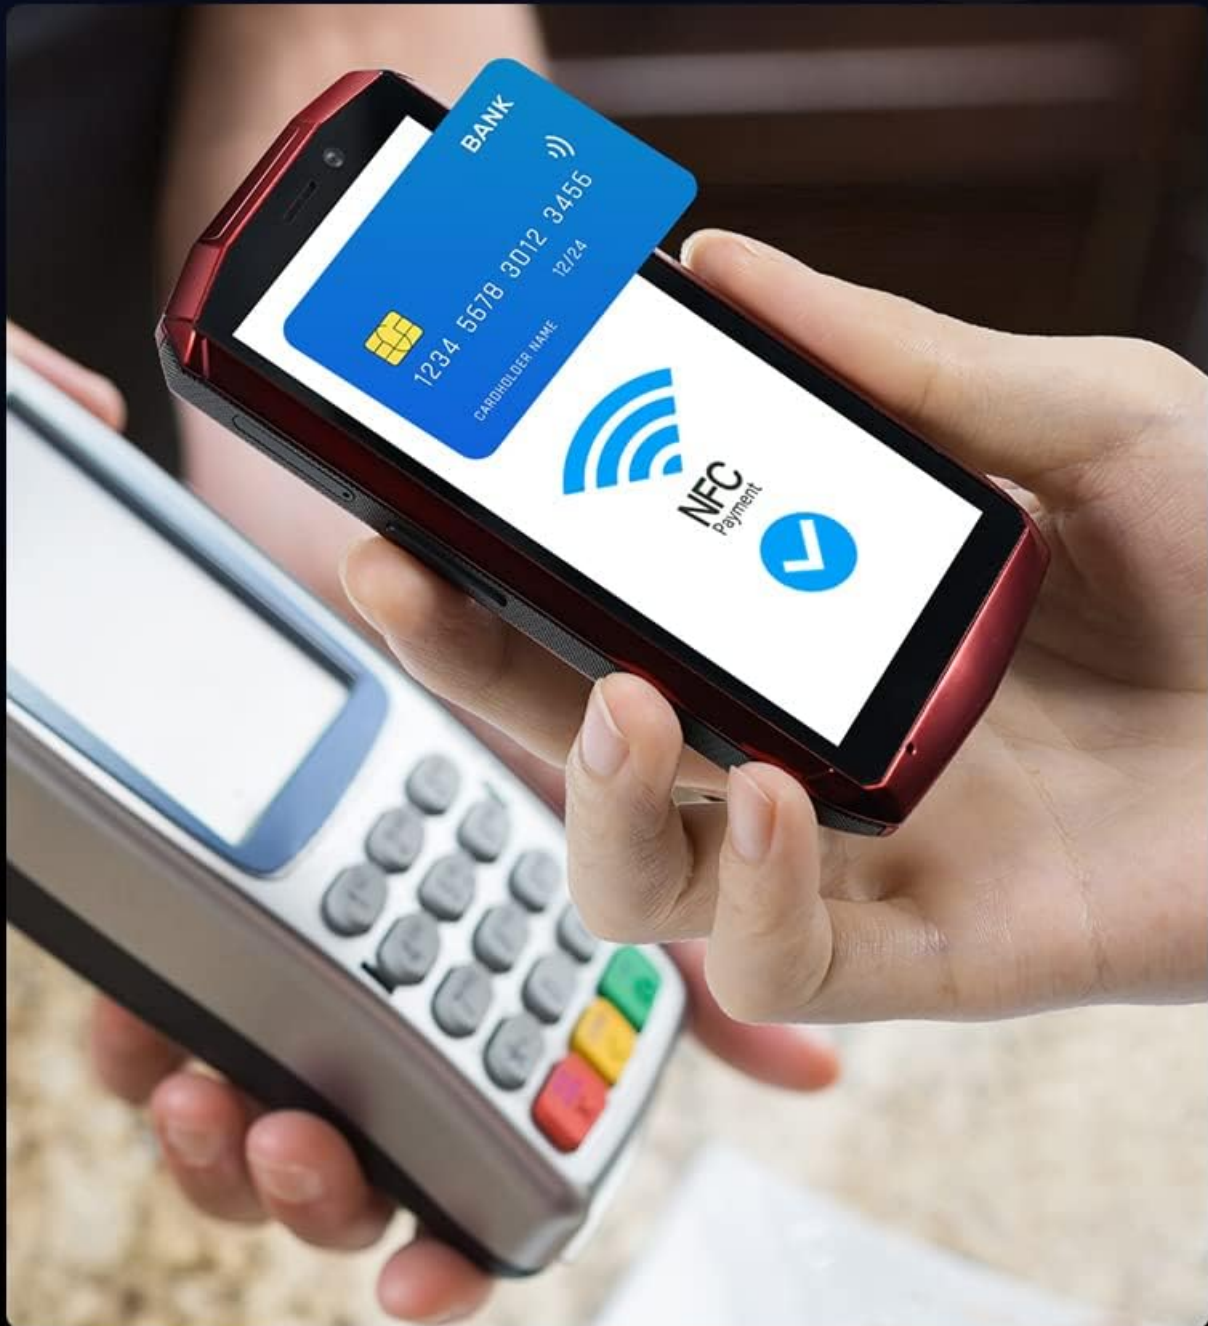


Figure 6: The CUBOT Pocket being used to make a contactless payment via NFC at a point-of-sale terminal.

## 4.4 Face ID

Unlock your device quickly and securely using Face ID. To set up Face ID, go to **Settings > Security > Face unlock** and follow the on-screen instructions to register your face.

## 4.5 GPS Navigation

The device includes GPS functionality for navigation and location-based services. Use pre-installed map applications or download your preferred navigation app from the Google Play Store.

## 4.6 Storage Management

The CUBOT Pocket comes with 4GB RAM and 64GB internal storage. You can expand the storage up to 128GB using a TF card (sold separately). Regularly manage your storage by deleting unnecessary files and uninstalling unused applications to maintain optimal performance.

# 4GB + 64GB Support TF card up to 128GB extended

Small Handy with Large Memory, runs smoothly,  
refuses to freeze!



Figure 7: The CUBOT Pocket's display showing a variety of applications, illustrating its capability to run common software.

## 5. MAINTENANCE

## 5.1 Battery Charging and Care

The device is equipped with a 3000mAh Lithium Ion battery. Use only the provided USB cable and a compatible charger. Avoid exposing the phone to extreme temperatures, as this can affect battery life and performance. Do not attempt to replace the battery yourself.

## 5.2 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for available updates.

## 5.3 Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials, which can damage the device's finish. Do not immerse the phone in water.

# 6. TROUBLESHOOTING

If you encounter issues with your CUBOT Pocket, refer to the following common solutions:

- **Device Not Powering On:** Ensure the battery is charged. Connect the phone to a charger for at least 15 minutes, then try powering it on again.
- **Network Connectivity Issues:** Verify your SIM card is correctly inserted. Check signal strength. Restart the device. Confirm APN settings with your mobile carrier if necessary.
- **Applications Freezing or Crashing:** Close and reopen the application. Clear the app's cache (**Settings > Apps & notifications > See all apps > [App Name] > Storage & cache > Clear cache**). If the issue persists, uninstall and reinstall the app.
- **Battery Draining Quickly:** Reduce screen brightness. Close unused apps running in the background. Disable Wi-Fi, Bluetooth, or GPS when not in use. Check battery usage in **Settings > Battery** to identify power-consuming apps.
- **Touchscreen Unresponsive:** Restart the device. If the issue persists, perform a factory reset (backup data first).

# 7. SPECIFICATIONS

Key technical specifications for the CUBOT Pocket mobile phone:

| Feature                 | Specification                              |
|-------------------------|--------------------------------------------|
| Model Name              | Pocket                                     |
| Operating System        | Android 11.0                               |
| Screen Size             | 4 Inches                                   |
| Resolution              | 2700 x 1520                                |
| RAM                     | 4 GB                                       |
| Memory Storage Capacity | 64 GB (Expandable up to 128GB via TF card) |
| Rear Camera             | 16 MP                                      |

| Feature                   | Specification             |
|---------------------------|---------------------------|
| Front Camera              | 5 MP                      |
| Battery Capacity          | 3000 mAh                  |
| Connectivity Technologies | 4G, NFC, GPS              |
| Wireless Carrier          | Unlocked for All Carriers |
| Item Weight               | 128 Grams (4.5 ounces)    |
| Dimensions                | 119mm x 58mm x 12.5mm     |
| Audio Jack                | 3.5 mm                    |

## 8. WARRANTY AND SUPPORT

Your CUBOT Pocket mobile phone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, product inquiries, or warranty claims, please visit the official CUBOT website or contact their customer service.

You can find more information and support resources at the [CUBOT Store on Amazon](#).

© 2024 CUBOT. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**