

[manuals.plus](#) /

› [SoBuy](#) /

› [SoBuy FKW99-N Industrial Vintage Style Kitchen Trolley Cart Instruction Manual](#)

SoBuy FKW99-N

SoBuy FKW99-N Industrial Vintage Style Kitchen Trolley Cart User Manual

1. INTRODUCTION

Thank you for choosing the SoBuy FKW99-N Industrial Vintage Style Kitchen Trolley Cart. This manual provides essential information for the safe assembly, operation, and maintenance of your new kitchen trolley. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image 1.1: Front view of the assembled SoBuy FKW99-N Kitchen Trolley Cart, showcasing its industrial vintage design with a wooden top, drawer, and multiple shelves.

2. SAFETY INFORMATION

- Always assemble the product on a clean, flat, and stable surface to prevent damage or injury.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the shelves or drawer. Refer to the 'Specifications' section for maximum load capacity.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Use the trolley only for its intended purpose as a kitchen or serving cart.
- Engage the wheel brakes when the trolley is stationary to prevent accidental movement.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged,

please contact customer support.

- Top Panel (1)
- Drawer Components (Front, Back, Sides, Bottom, Glides)
- Shelf Panels (3)
- Side Shelf Panels (3)
- Metal Frame Sections (Vertical supports, horizontal bars)
- Mesh Panels for side shelves (3)
- Casters/Wheels (4, 2 with brakes)
- Assembly Hardware (Screws, Allen key, etc.)
- Instruction Manual (This document)

4. ASSEMBLY INSTRUCTIONS (SETUP)

Assembly requires self-assembly. It is recommended to have two people for easier and safer assembly. Approximate assembly time is 1.5-2 hours.

Step 1: Attach Casters to Base Frame

Carefully attach the four casters to the bottom metal frame. Ensure the two casters with brakes are positioned on the same side for easy access. Tighten securely with the provided wrench or tool.



Image 4.1: Detail of a caster wheel, showing the locking mechanism. Ensure these are securely attached to the base.

Step 2: Assemble the Main Frame

Connect the vertical metal support bars to the base frame. Then, attach the horizontal support bars to form the main structure of the trolley. Do not fully tighten all screws until the entire frame is aligned.

Step 3: Install Shelves

Slide the three main shelf panels into their designated slots within the metal frame. Ensure they are level and secure. Attach the mesh panels and side shelf panels to the right side of the frame, creating the smaller storage compartments.



Image 4.2: View of the main shelves and the integrated mesh side shelves, designed for various kitchen items.

Step 4: Assemble and Install the Drawer

Assemble the drawer components according to the detailed diagrams provided in the package. Attach the drawer glides to the drawer and the corresponding glides to the trolley frame. Carefully slide the assembled drawer into its position at the top of the trolley.



Image 4.3: The top drawer, suitable for storing cutlery or small utensils.

Step 5: Attach the Top Panel

Place the top wooden panel onto the assembled frame. Secure it using the remaining screws, ensuring it is flush and stable.

Step 6: Final Tightening

Once all components are in place and aligned, fully tighten all screws and fasteners. Do not overtighten. Check the stability of the trolley before use.

5. OPERATING INSTRUCTIONS

Moving the Trolley

To move the trolley, ensure the wheel brakes are disengaged. Gently push or pull the trolley to its desired location. Avoid sudden movements or pushing over uneven surfaces to prevent items from falling.

Using the Wheel Brakes

When the trolley is in its desired position, engage the brakes on the two designated wheels by pressing down on the lever. This will lock the wheels and prevent the trolley from moving unintentionally.

Utilizing Storage

The trolley features a top surface, a drawer, three main shelves, and three side shelves. Organize items according to their size and weight, placing heavier items on lower shelves for stability.



Image 5.1: The convenient side shelves are ideal for storing bottles, glasses, or other frequently used items.

6. MAINTENANCE

Cleaning

Wipe surfaces with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, followed by drying with a clean cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.

Regular Checks

Periodically inspect all screws and connections to ensure they remain tight. Re-tighten if necessary. Check the casters for smooth operation and clean any debris that may accumulate around them.

7. TROUBLESHOOTING

Trolley is Unstable

- Ensure all screws are fully tightened.
- Verify that the trolley is on a level surface.
- Check if the weight distribution on the shelves is even.

Drawer Does Not Slide Smoothly

- Check if the drawer glides are properly aligned and free of obstructions.
- Ensure the drawer is not overloaded.
- Lubricate glides with a silicone-based spray if necessary.

Wheels Not Rolling Freely

- Ensure the wheel brakes are disengaged.
- Check for any hair, dust, or debris caught in the wheels and remove them.

8. SPECIFICATIONS

Brand	SoBuy
Model	FKW99-N
Dimensions (W x D x H)	50 x 37 x 87 cm
Item Weight	14.5 kg
Load Capacity	45 kg
Material	Alloy Steel, Engineered Wood
Color	Black frame, Vintage Wood effect



Image 8.1: Dimensional drawing of the SoBuy FKW99-N Kitchen Trolley, indicating height (87cm), depth (37cm), and width (50cm).

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

