

[Manuals.plus](#) /

› [Easyfone](#) /

› Easyfone T300 4G Unlocked Flip Mobile Phone User Manual

Easyfone T300

Easyfone T300 4G Unlocked Flip Mobile Phone User Manual

Model: T300 | Brand: Easyfone

1. INTRODUCTION

This manual provides comprehensive instructions for the Easyfone T300 4G Unlocked Flip Mobile Phone. It covers setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. The Easyfone T300 is designed for ease of use, featuring large buttons, clear sound, and essential functions like an SOS button and photo speed dial, making it ideal for seniors.

2. PACKAGE CONTENTS

Upon unboxing your Easyfone T300, please verify that all the following items are included:

- 1x Easyfone T300 Senior Flip Phone
- 1x 1500 mAh Battery
- 1x Charger (Power Adapter)
- 1x Charging Dock (Cradle Charger)
- 1x USB Cable
- 1x Lanyard
- 1x User Manual (Quick Start Guide)



Image: All components included in the Easyfone T300 package, laid out for clear identification.

3. SETUP GUIDE

3.1. Battery and SIM Card Installation

1. **Open the Phone:** Gently open the flip phone to access the back cover.
2. **Remove Back Cover:** Locate the small notch or indentation on the back cover and carefully pry it open.
3. **Insert SIM Card:** Locate the SIM card slot(s). Insert your 4G compatible SIM card into the designated slot. Ensure the gold contacts on the SIM card face downwards and the notched corner aligns with the slot.
4. **Insert MicroSD Card (Optional):** If you wish to expand storage for photos or other media, insert a MicroSD card into its dedicated slot.
5. **Install Battery:** Place the 1500mAh Lithium-Ion battery into the battery compartment, ensuring the contacts align correctly with the phone's terminals.

6. **Replace Back Cover:** Carefully align the back cover and press it firmly until it clicks into place.



Image: The back of the Easyfone T300 phone, showing the battery compartment and slots for SIM and MicroSD cards.

3.2. Initial Charging

Before first use, fully charge the phone. The Easyfone T300 comes with a convenient charging dock.

- 1. **Connect Charger:** Plug the USB cable into the charger (power adapter) and then into the charging dock. Plug the charger into a wall outlet.
- 2. **Place Phone in Dock:** Place the Easyfone T300 into the charging dock. Ensure the phone is seated correctly and the charging indicator on the phone's external screen illuminates.
- 3. **Charging Time:** A full charge typically takes approximately 3.5 hours.



Image: The Easyfone T300 phone standing upright in its dedicated charging dock, indicating it is charging.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- **Power On:** Press and hold the red "End Call/Power" button (ⓧ) until the screen lights up.
- **Power Off:** Press and hold the red "End Call/Power" button (ⓧ) until the power off options appear, then select "Power Off".

4.2. Making and Receiving Calls

- **Making a Call:**

- a. **Dialing:** Open the flip, use the large numeric keypad to dial the number, then press the green "Call" button (✓).
- b. **From Contacts:** Navigate to "Contacts" using the navigation buttons, select a contact, and press the green "Call" button (✓).
- c. **Photo Speed Dial:** Press the dedicated Photo Speed Dial button (often marked with a picture icon). Use the navigation buttons to scroll through your photo contacts, then press the green "Call" button (✓) to initiate the call.

- **Receiving a Call:** Simply open the flip to answer an incoming call. To end a call, close the flip or press the red "End Call" button (✗).



Image: The Easyfone T300 in its open position, highlighting the large, easy-to-read keypad and clear internal display.

4.3. Photo Speed Dial Setup and Use

The Easyfone T300 allows you to assign photos to up to 8 speed dial contacts for easy recognition and calling.

1. Save Contact with Photo:

- Go to **Menu > Contacts > Add contact > Phone**.
- Select **Add Photo** to choose an existing photo or take a new one.
- Enter the **Name** and **Mobile** number.
- Select **Save**.

2. Assign to Speed Dial:

- From the **Contacts** list, select the desired contact.
- Press **Option > Add to Speed Dial**.
- Choose an available speed dial number (1-8) and confirm with **OK**.

3. Using Photo Speed Dial:

- From the main screen, press the dedicated Photo Speed Dial shortcut button (often located below the navigation keys).
- Use the **Up** and **Down** navigation buttons to scroll through your photo contacts.
- Once the desired contact is displayed, press the green  button to call them directly.

Your browser does not support the video tag.

Video: A demonstration of how to set up and use the Photo Speed Dial and SOS functions on the Easyfone T300. This video guides you through saving contacts with photos and assigning them to speed dial numbers, as well as configuring and activating the SOS emergency feature.

4.4. SOS Emergency Button

The SOS button provides a quick way to contact pre-set emergency numbers and send an alert message.

1. SOS Number Setup:

- Go to **Menu > SOS settings**.
- Select **SOS numbers**. You can save up to 5 emergency contact numbers.
- Press **Option > Add from contacts** or **Manual edit** to add numbers.
- Ensure **SOS active** is set to **On** in the SOS settings.

2. Activating SOS:

- From the main screen, press and hold the dedicated **SOS button** (located on the back of the phone) for 3 seconds.
- The phone will automatically call the saved emergency contacts in a loop until one of the calls is answered.
- Simultaneously, an SOS message (e.g., "I need help, Please contact me immediately!") will be sent to each emergency contact.



Image: The Easyfone T300's rear SOS button, illustrating its function in alerting pre-set emergency contacts shown on a map.

4.5. Other Features

- **Flashlight:** Activate the built-in flashlight using the dedicated side button.
- **FM Radio:** Access the FM radio via a dedicated shortcut button.
- **Camera:** The phone includes a 0.3 MP camera for basic photo capture.
- **Alarm Clock:** Set multiple alarms for reminders.
- **Bluetooth:** Connect to Bluetooth devices like headsets.
- **Calendar & Calculator:** Basic utility functions are available.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid liquid cleaners.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Charge the phone regularly, but do not leave it continuously charging for extended periods after it's full.
- **Storage:** Store the phone in a cool, dry place when not in use.
- **Software Updates:** Periodically check for any available software updates to ensure optimal performance and security.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on.	Low battery; Battery not installed correctly.	Charge the battery; Reinstall the battery, ensuring proper contact.
Cannot make or receive calls.	No SIM card; SIM card not properly inserted; No network signal; Account issues with carrier.	Insert SIM card; Reinsert SIM card; Move to an area with better signal; Contact your mobile carrier.

Problem	Possible Cause	Solution
Poor call quality/sound.	Weak signal; Speaker/microphone obstruction; Volume too low.	Move to an area with better signal; Clean speaker/microphone; Adjust call volume.
SOS button not working.	SOS function not activated; No emergency contacts set.	Ensure SOS active is ON in settings; Add emergency contacts in SOS settings.
Phone freezes or is unresponsive.	Temporary software glitch.	Remove and reinsert the battery to perform a hard reset.

7. SPECIFICATIONS

- **Model:** T300
- **Brand:** Easyfone
- **Cellular Technology:** 4G
- **Operating System:** Easyfone OS
- **Display:** 2.4-inch HD Main Display + 1.44-inch External Colorful HD Screen
- **Resolution:** 1280 x 720 (Main Display)
- **Battery:** 1500mAh Lithium-Ion (Included)
- **Charging Time:** Approximately 3.5 Hours
- **Camera:** 0.3 MP Optical Sensor Resolution
- **Memory Storage Capacity:** 16 GB (Internal, expandable with MicroSD)
- **Special Features:** Hearing aid compatible (HAC), Photo Speed Dial, Easy-to-Use Charging Station, SOS Emergency Button, Big Volume & Big Button & Big Font, Flashlight, FM Radio, Bluetooth.
- **Form Factor:** Foldable Screen (Flip Phone)
- **Human Interface Input:** Buttons
- **Dimensions:** 13.4 x 12 x 7.6 cm (Parcel Dimensions)
- **Weight:** 113.4 g (Item Weight)

8. WARRANTY INFORMATION

The Easyfone T300 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Easyfone T300, please contact Easyfone customer service through their official website or the contact information provided in your product packaging. You may also visit the [Easyfone Store on Amazon](#) for additional resources.

