



Manuals.plus /

- › **Beko** /
- › BEKO Freezer Drawer Front - Model 4640620100 Instruction Manual

## Beko 4640620100

# Beko Freezer Drawer Front - Model 4640620100 Instruction Manual

Essential guide for installation, care, and compatibility.

## INTRODUCTION

---

This manual provides comprehensive instructions for the Beko Freezer Drawer Front, model 4640620100. It is designed to assist you with verifying compatibility, proper installation, and maintaining the drawer front to ensure its longevity and optimal performance within your Beko freezer.

## PRODUCT OVERVIEW

---

The Beko Freezer Drawer Front is a genuine replacement part designed for specific Beko freezer models. It is constructed from durable, transparent material, allowing visibility of contents while maintaining the freezer's thermal efficiency.

## Dimensions

- **Height:** 17 cm
- **Width:** 40 cm
- **Depth:** Approximately 3.5 cm



*Image showing the transparent freezer drawer front with embossed icons for meat, ice cream, and fish, indicating storage zones. This is the Beko Freezer Drawer Front, Model 4640620100.*

## COMPATIBILITY VERIFICATION

---

Before attempting installation, it is crucial to verify that this drawer front is compatible with your specific Beko appliance model. Incorrect parts can lead to improper fit and potential damage.

- 1. Locate Your Appliance's Rating Plate:** This plate typically contains the exact model number and serial number of your freezer. It is often found inside the freezer compartment, on the side wall, or behind the bottom drawer.
- 2. Note Down the Model Number:** Carefully write down the full model number from the rating plate.
- 3. Compare with Compatible Models:** This drawer front is compatible with the following Beko models:
  - RCSE300K20S - 7294848794
  - RCSA300K20W - 7519920001
  - CRCSA291K20S - 7520720009
  - RCSA270K20W - 7519820001
  - DRCSE287K30XPN - 7294847692
  - DRCSE287K20XP - 7294847691
  - RCSA240M30W - 7519620009
  - RCSA270K30SN - 7519820037
  - CSA240M21W - 7519620003

- RCSA240M20W - 7519620004
- RCSE300K30SN - 7294848795
- RCSA300K30WN - 7520720020
- DRC262K20XB - 7519820030
- RCHE360K20S - 7294844494
- RCSA270K30WN - 7519820032

4. **Contact Customer Support if Unsure:** If your model number is not listed, or if you are uncertain about compatibility, please contact Beko customer support or the seller with your appliance's model number and a photo of its rating plate for assistance.

## INSTALLATION GUIDE

---

Replacing a freezer drawer front is generally a straightforward process. Always ensure the freezer is unplugged before performing any maintenance or part replacement.

1. **Safety First:** Disconnect the freezer from the power supply to prevent electrical hazards.
2. **Remove Existing Drawer Front (if applicable):** If you are replacing a damaged drawer front, carefully unclip or slide out the old one. Note how it was attached.
3. **Align the New Drawer Front:** Position the new Beko Freezer Drawer Front (Model 4640620100) into the designated slots or clips on the freezer drawer frame.
4. **Secure the Drawer Front:** Gently push or clip the drawer front into place until it is securely fastened. Ensure it sits flush and operates smoothly.
5. **Test Operation:** Once installed, gently pull and push the drawer to ensure it slides in and out without obstruction.
6. **Reconnect Power:** Plug the freezer back into the power supply.

*Note: Specific installation steps may vary slightly depending on your freezer model. Refer to your appliance's main user manual for detailed instructions if needed.*

## CARE AND MAINTENANCE

---

To ensure the longevity and appearance of your freezer drawer front, follow these simple care guidelines:

- **Regular Cleaning:** Clean the drawer front periodically with a soft cloth dampened with warm water and a mild detergent.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the plastic surface.
- **Gentle Handling:** Avoid excessive force when opening or closing the drawer to prevent stress on the clips or hinges.
- **Spill Management:** Wipe up any spills immediately to prevent stains or residue buildup.

## TROUBLESHOOTING

---

If you encounter issues with your new freezer drawer front, consider the following:

Problem	Possible Cause	Solution
Drawer front does not fit.	Incorrect model compatibility.	Re-verify your freezer's model number against the compatible list in this manual. If it does not match, contact the seller or Beko customer support for assistance.
Drawer front is loose or wobbly.	Improper installation.	Ensure all clips or attachment points are fully engaged. Gently press firmly around the edges until it clicks into place.
Drawer does not slide smoothly.	Obstruction or misalignment.	Check for any items blocking the drawer's path. Ensure the drawer itself is correctly seated on its runners.

## SPECIFICATIONS

---

- **Product Type:** Freezer Drawer Front
- **Brand:** Beko
- **Model Number:** 4640620100
- **Dimensions:** 17 cm (Height) x 40 cm (Width) x 3.5 cm (Depth)
- **Material:** Transparent Plastic
- **Part Number:** 4640620100

## CUSTOMER SUPPORT

---

For technical questions, compatibility concerns, or further assistance, please contact the seller or Beko customer service. It is highly recommended to have your appliance's model number and a photo of its rating plate ready when contacting support to ensure accurate and efficient service.

You may be advised to open a technical support ticket and provide a photo of your appliance's rating plate to validate correspondence with your appliance.