

ciciglow A18

ciciglow Mini Body Camera A18 - HD Action Camera User Manual

Model: A18

1. INTRODUCTION

Thank you for choosing the ciciglow Mini Body Camera A18. This compact and versatile HD action camera is designed for various recording needs, from personal security to capturing moments during activities. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. PRODUCT FEATURES

- **Portable and Lightweight Design:** Ergonomic and easy to carry, suitable for various environments.
- **Automatic Recording with Motion Detection:** The camera can automatically start recording videos when motion is detected.
- **Low Power Protection:** Automatically saves files and shuts down safely when battery is low.
- **Webcam Functionality:** Connects to a computer via USB for use as a webcam for internet chats and video calls.
- **Versatile Applications:** Ideal for security checks, learning records, security patrols, interview investigations, riding records, and game recordings.
- **High Definition Video:** Records in 1920 x 1080p resolution at 30 frames per second.
- **High Resolution Photos:** Captures photos at 4032 x 3024 resolution.
- **Expandable Storage:** Supports small memory cards up to 32GB (not included).

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x ciciglow Mini Body Camera A18
- 1 x Data Cable (USB)
- 1 x User Manual

4. PRODUCT OVERVIEW



Front view of the camera, showing the lens and indicator light.



Top-down view of the camera, highlighting its compact form factor.



Side view of the camera, showing control buttons and the integrated clip for easy attachment.

5. SETUP

5.1 Charging the Camera

1. Connect the camera to a USB power source (e.g., computer USB port, USB wall adapter) using the provided data cable.
2. The indicator light will show the charging status. Refer to the indicator light guide for specific details (usually red for charging, off when fully charged).
3. Ensure the camera is fully charged before first use for optimal battery life.

5.2 Inserting a Memory Card

The camera requires a small memory card (up to 32GB, not included) for storing recordings.

1. Locate the memory card slot on the camera.
2. Gently insert the memory card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card in until it springs out.

5.3 Powering On/Off

- **Power On:** Press and hold the power button until the indicator light illuminates.
- **Power Off:** Press and hold the power button until the indicator light turns off.

6. OPERATING INSTRUCTIONS

6.1 Taking Photos

1. Ensure the camera is powered on and in standby mode (blue light steady).
2. Press the photo button once. The blue light will flash briefly, indicating a photo has been taken and saved automatically.

6.2 Recording Videos

1. Ensure the camera is powered on and in standby mode (blue light steady).
2. Press the video button once. The blue light will flash slowly, indicating that video recording has started.
3. The camera records video in 5-minute segments and automatically saves them. It supports continuous recording with cycle overwrite.
4. To stop recording, press the video button once. The blue light will become steady, and the video will be saved automatically, returning to standby mode.

6.3 Motion Detection Recording

The camera can automatically record when motion is detected.

1. Refer to the specific instructions in the full manual for activating motion detection mode.
2. Once activated, the camera will automatically start recording video when it detects movement.



Security check, study record, security patrol
interview survey, riding record, game record, etc.

The ciciglow A18 Mini Body Camera is suitable for various applications, including security checks and recording interviews.

6.4 Using as a Webcam

The camera can be connected to a computer and used as a webcam.

1. Connect the camera to your computer using the provided USB data cable.
2. Your computer should recognize the device as a webcam. Select it as your video input device in your video conferencing software (e.g., for internet chat or family video calls).



USB connection to the computer, can be used as a webcam Internet chat, family video

Connect the camera to your computer via USB to use it as a webcam for online communication.

7. MAINTENANCE

7.1 Battery Care

- Charge the camera regularly, even if not in use, to maintain battery health.
- Avoid exposing the camera to extreme temperatures, which can degrade battery performance.
- When the system detects low power, it will automatically save the current file and shut down safely to prevent data loss.

7.2 Storage Management

- Regularly transfer recorded files from the memory card to a computer or other storage device to free up space.
- Format the memory card periodically to ensure optimal performance and prevent data corruption.

7.3 Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

8. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot record:** Check if a memory card is inserted and if it has sufficient free space. Format the card if necessary.
- **Poor video/photo quality:** Ensure the lens is clean. Check lighting conditions.
- **Computer not recognizing camera:** Try a different USB port or cable. Ensure the camera is powered on when connected.
- **Short battery life:** Ensure the camera is fully charged. Battery life can vary based on usage and environmental conditions.

9. SPECIFICATIONS

Feature	Specification
Model	A18
Video Format	AVI
Video Decoding	M-JPEG
Video Resolution	1920 x 1080p
Video Frame Rate	30 fps
Image Ratio	16:9
Photo Resolution	4032 x 3024
Image Format	JPG
Battery Type	Built-in 1000mAh Li-ion Battery
Storage Support	Small memory card up to 32GB (not included)
Connectivity Technology	USB
Special Feature	Motion Detection
Compatible Devices	Computers with USB ports

10. WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. Please refer to the product packaging or contact your retailer for details regarding warranty coverage and customer support.

For technical assistance or inquiries, please visit the official ciciglow website or contact their customer service department.