

Wagner 2419329

Wagner PaintStick EZ Roller 2419329 Instruction Manual

Model: 2419329

INTRODUCTION TO THE WAGNER PAINTSTICK EZ ROLLER

The Wagner PaintStick EZ Roller is designed to simplify interior painting tasks, offering a more efficient and less messy alternative to traditional rollers and paint trays. This innovative tool holds paint directly within its handle, providing continuous paint flow to the roller cover. It is suitable for painting walls and ceilings with various coatings, including latex and oil-based paints.

Key features include:

- **Inner-Fed Paint Roller:** Holds up to 22 oz. of paint directly in the handle, eliminating the need for messy roller trays.
- **Extended Reach:** The long handle allows easy access to tall walls and 8 ft. ceilings without requiring ladders or step stools.
- **Efficient Coverage:** Capable of painting a 7' x 10' area in a single fill, significantly speeding up painting projects.
- **Versatile Use:** Compatible with both latex and oil-based paints, including paint-and-primer in one.
- **Easy Cleanup:** Designed for straightforward cleaning by pushing remaining paint back into the can and flushing with water.

PRODUCT COMPONENTS

The Wagner PaintStick EZ Roller comes with the following components:

- PaintStick EZ Roller unit with handle and clear paint tube
- 9" x 3/8" Roller Cover (perforated for smooth surfaces)
- Fill Tube
- Instruction Manual (this document)

U.S. Based Customer Service

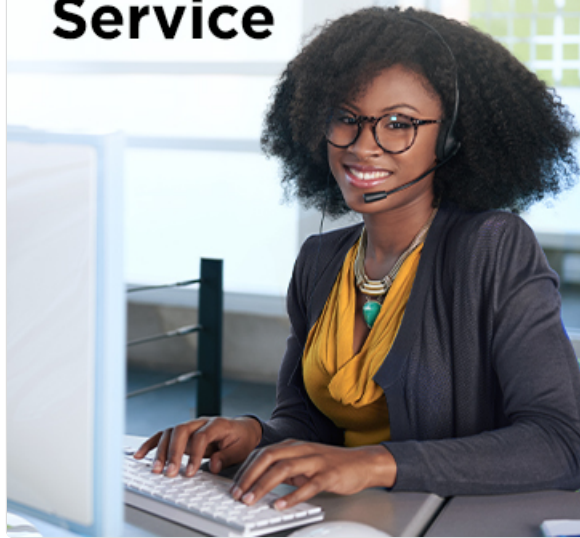


Image: Diagram illustrating the various components of the PaintStick EZ Roller, including the 3/8" Nap 9" Perforated Roller Cover, Lock-n-Go Release, Fill Valve, Ratchet Trigger, 22 fluid oz. paint capacity, and Pull Tab and Storage Hook.

IMPORTANT SAFETY INFORMATION

- Avoid contact with eyes.
- Ensure proper ventilation when painting.
- Wear protective gear such as gloves and masks.
- Keep out of reach of children.

SETUP INSTRUCTIONS

1. **Attach Roller Cover:** Securely attach the 9" x 3/8" roller cover to the roller frame. Ensure it clicks into place.
2. **Prepare Paint Can:** Open your paint can. If using a 5-gallon bucket, transfer paint to a 1-gallon can for easier filling, as the fill tube is sized for 1-gallon cans.
3. **Attach Fill Tube:** Attach the provided fill tube to the side of your paint can.
4. **Connect EZ Roller:** Press the EZ Roller's fill valve onto the fill tube.
5. **Load Paint:** Pull back on the plunger at the end of the EZ Roller handle to draw paint into the clear tube. Fill to the desired level, up to 22 oz.

NO TRAY NEEDED

Fills directly
from can



Image: The PaintStick EZ Roller's fill valve is connected to a paint can, demonstrating how paint is drawn directly into the roller's handle, eliminating the need for a separate paint tray.

Your browser does not support the video tag.

Video: Official Wagner demonstration of the PaintStick EZ Roller, showing how to fill the roller with paint and its ease of use for painting walls and ceilings.

OPERATING INSTRUCTIONS

1. **Dispense Paint:** Once the roller is loaded with paint, gently squeeze the trigger on the handle. This will directly feed paint to the roller cover.
2. **Apply to Surface:** Begin rolling on your wall or ceiling. The PaintStick EZ Roller provides continuous paint flow, allowing for smooth and even coverage.

3. **Maintain Flow:** Continue to squeeze the trigger as needed to maintain a consistent paint supply to the roller cover. Avoid over-squeezing to prevent drips or excessive paint application.
4. **Extended Reach:** Utilize the long handle for high areas. The design reduces the need for ladders or step stools for standard 8 ft. ceilings.



Image: A person painting a wall with the Wagner PaintStick EZ Roller, highlighting how the paint is held within the handle for direct application.



Image: A person extending the Wagner PaintStick EZ Roller to paint a ceiling, demonstrating its long reach capability.

MAINTENANCE AND CLEANING

Proper cleaning after each use is crucial for the longevity and optimal performance of your PaintStick EZ Roller.

1. **Return Excess Paint:** Push any remaining paint from the handle back into the original paint can.
2. **Flush with Water:** Disconnect the fill tube and roller cover. Flush the EZ Roller tube and roller cover thoroughly with clean water until all paint residue is removed.
3. **Clean Roller Cover:** Wash the roller cover separately with water and appropriate cleaner for the type of paint used.
4. **Lubricate Seals:** Apply petroleum jelly to the rubber parts (plunger seals) to prevent drying and cracking, ensuring smooth operation for future use.

5. **Storage:** Store the clean and dry PaintStick EZ Roller in a suitable location.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Paint not dispensing or uneven flow	Clogged roller cover or internal mechanism; insufficient paint in tube; plunger not fully engaged.	Ensure roller cover is clean and free of dried paint. Check paint level in the tube. Ensure the plunger is pulled back completely to draw paint and pushed forward to dispense. Clean thoroughly if clogs are suspected.
Drips or excessive paint	Over-squeezing the trigger; roller cover oversaturated; paint too thin.	Squeeze the trigger gently and only as needed. Allow the roller cover to distribute paint before dispensing more. Ensure paint consistency is appropriate for rolling.
Difficulty drawing paint into tube	Improper connection to fill tube; air leak in system; plunger seals dry or damaged.	Verify the fill valve is securely attached to the fill tube. Check for any loose connections. Lubricate plunger seals with petroleum jelly.
Plunger mechanism feels stiff or broken	Dried paint in the mechanism; lack of lubrication; physical damage.	Disassemble and thoroughly clean all parts, especially the plunger. Lubricate rubber seals. If physically damaged, replacement parts may be needed.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Wagner
Model Number	2419329
Paint Capacity	22 Fluid Ounces
Roller Cover Size	9" x 3/8" Nap (perforated)
Recommended Uses	Painting interior walls and ceilings
Compatible Coatings	Latex and oil-based paints (including paint-and-primer in one)
Material	Plastic
Item Weight	1.2 Pounds
Product Dimensions	3"W x 34"H
Power Source	Hand Powered

Feature	Detail
UPC	024964298228

WARRANTY AND SUPPORT

Warranty: This product comes with a manufacturer's warranty. Please refer to the packaging or contact Wagner customer service for specific warranty details and duration.

Customer Support: Wagner U.S. is based in Minneapolis, Minnesota. Our team is available to provide assistance and answer any questions you may have regarding your PaintStick EZ Roller. For support, please visit the official Wagner website or contact their customer service directly.



support + videos + tips + project ideas

always there when you need help

FREE
with the purchase
of this product.

Providing you digital
access to support, tools
and resources for your
Wagner products wherever
and whenever you need it.



Image: Wagner support information, indicating digital access to support, tools, and resources for Wagner products.

© 2024 Wagner Spraytech. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question