

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 20-Person Camping Tent Instruction Manual (Model: USA20-277CW0131)

Outsunny USA20-277CW0131

Outsunny 20-Person Camping Tent Instruction Manual

Model: USA20-277CW0131

1. PRODUCT OVERVIEW

The Outsunny 20-Person Camping Tent is designed for large groups, accommodating up to 20 individuals. This outdoor cabin-style tent features two large zippered doors and eight mesh windows, providing excellent ventilation and easy access. Its construction includes a waterproof polyester cover and a sturdy steel alloy frame, ensuring stability and protection in moderate weather conditions. A convenient carry bag is included for portability, making it suitable for family trips, day outings, and beginner backpacking adventures.



Image 1.1: The Outsunny 20-Person Camping Tent in use, demonstrating its spacious interior and design.

2. SAFETY INFORMATION

- This tent is designed for use in **moderate weather conditions**. It is not suitable for harsh weather, including strong winds, heavy rain, or snow.
- If using a small heater inside the tent during cold weather, exercise **extreme caution**. Ensure the heater is placed far away from the tent fabric and any flammable materials to prevent fire hazards. Always ensure adequate ventilation when using any heating device.
- Keep all flame and heat sources away from the tent fabric. The tent material is not fireproof.
- Do not cook inside the tent.
- Ensure the tent is properly secured with all ground stakes and guy ropes to prevent collapse or damage from wind.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present in your package:

- 1 × Screen House Chamber (Tent Body)
- 25 × Ground Stakes
- 5 × Guy Ropes
- 1 × Carry Bag
- 1 × User Manual (This document)



Image 3.1: Included accessories: carry bag, ground stakes, and guy ropes.

4. SETUP INSTRUCTIONS

Assembly of this tent requires careful attention to detail. It is recommended that at least two people assist with the setup process for ease and stability.

4.1. Preparation

1. Choose a flat, clear area for your tent, free from sharp objects, rocks, and debris.
2. Unpack all components from the carry bag and lay them out to ensure nothing is missing.
3. Identify the tent body, poles, ground stakes, and guy ropes.

4.2. Assembly Steps

4. Unfold the tent body and spread it out on your chosen site. Ensure the doors are facing the desired direction.
5. Assemble the steel poles by connecting the sections. The tent uses a robust steel frame with triangular support bars for stability.



Image 4.1: Detail of the powder-coated steel frame and triangular support bars.

6. Insert the assembled poles into the sleeves or attach them to the designated connection points on the tent body. Refer to the connection points shown in the images.



Image 4.2: Pole connection point detail.



Image 4.3: Another view of a pole connection point.

7. Once the frame is erected, secure the tent to the ground using the provided ground stakes. Insert stakes through the tent's base loops and into the ground at an angle.
8. Attach the guy ropes to the designated points on the tent and stake them firmly into the ground, pulling them taut to provide additional stability, especially in windy conditions.
9. Ensure all zippers are functioning correctly and mesh windows are properly secured or opened as desired.

5. OPERATING INSTRUCTIONS

5.1. Ventilation

The tent features eight mesh windows designed to ensure fresh air circulation and keep the interior cool. These windows also provide protection from small animals and insects.

- To maximize airflow, unzip the window covers and roll them up, securing them with the attached toggles.
- For privacy or protection from elements, unroll the window covers and secure them with the zippers.

18FT x 16.7FT FAMILY CAMPING TENT



Large Space:
20 persons



Waterproof:
2000 mm



Anti-aging



Leisure
& Party



Image 5.1: Tent ventilation features, including mesh windows and zippered doors.

5.2. Access

The tent is equipped with two large zippered doors for easy entry and exit. Each door can be rolled up and secured with a buckle for open access.

- To open a door, unzip it completely and roll the fabric upwards, then secure it with the attached buckle.
- To close a door, unbuckle the rolled fabric, unroll it, and zip it down completely.

5.3. Internal Lamp Hook

An internal hook is provided for hanging a camping lamp or other lightweight accessories, offering convenient night lighting.

6. MAINTENANCE

6.1. Cleaning

- To clean the tent, wipe it with a damp cloth. Do not use harsh detergents or abrasive cleaners, as these can damage the waterproof coating.
- For stubborn dirt, use a mild soap solution and rinse thoroughly.
- Ensure the tent is completely dry before packing it away to prevent mold and mildew growth.

6.2. Storage

- Fold the tent neatly and place it back into the provided carry bag.
- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- Periodically inspect the tent for any damage to the fabric, poles, or zippers, and repair as needed.

7. TROUBLESHOOTING

- **Difficulty in Setup:** If you find the tent difficult to set up, ensure all pole sections are fully connected and that you are following the assembly steps correctly. Having an additional person assist can significantly ease the process. Verify that the tent body is oriented correctly before inserting poles.
- **Lack of Stability:** Ensure all 25 ground stakes are firmly inserted into the ground and all 5 guy ropes are attached and taut. In very windy conditions, consider adding extra stakes or ropes if available.
- **Bugs Entering the Tent:** While mesh windows and doors offer protection, some insects may still find their way in, especially in certain environments. Ensure all zippers are fully closed when not in use. Consider using insect repellent around the tent's perimeter.
- **Water Leakage:** Although the tent has a 2000mm waterproof rating, extreme or prolonged heavy rain can sometimes lead to minor leaks. Ensure all seams are properly sealed (if applicable, check manufacturer recommendations for seam sealing). Avoid touching the tent walls during rain, as this can draw water through the fabric.

8. SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	USA20-277CW0131
Occupancy	20 people
Color	Cream White
Material	Steel alloy, Polyester
Expanded Dimensions (L x W x H)	216 in x 200 in x 101 in
Folded Dimensions (L x W x H)	30 in x 13 in x 13 in
Water Resistance Rating	2000 mm
Number of Doors	2
Number of Windows	8
Number of Rooms	1
Number of Poles	4
Number of Stakes	25
Number of Guy Lines	5
Item Weight	17.07 lbs
Floor Area	301 sq ft
Assembly Required	Yes
Recommended Uses	Camping & Picnics
Seasons	Winter (Note: Suitable for moderate weather, not harsh conditions)
Closure Type	Zipper
Product Care Instructions	Wipe clean

GOOD VENTILATION

Mesh netting provide protection from small animals



Image 8.1: Tent dimensions and capacity overview.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Outsunny customer service directly. Refer to the contact details provided with your purchase documentation or visit the official Outsunny website.

© 2026 Outsunny. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question