

[Manuals.plus](#) /

› [TaIYanG](#) /

› TaIYanG WXC13-15W RGB Wireless Charging Pad User Manual

TaIYanG WXC13-15W

TaIYanG WXC13-15W RGB Wireless Charging Pad User Manual

Model: WXC13-15W

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your TaIYanG WXC13-15W RGB Wireless Charging Pad. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid placing metal objects, credit cards, or cases with magnets between the charging pad and your device, as this may interfere with charging or damage the device.
- Use only compatible power adapters (18W or higher recommended) to ensure optimal performance and safety.
- Keep out of reach of children.
- Do not disassemble, repair, or modify the product.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x TaIYanG WXC13-15W RGB Wireless Charging Pad
- 1 x USB-C Cable
- 1 x Instruction Manual



Image: The package contents, including the wireless charging pad, USB-C cable, and instruction manual.

4. SETUP

1. Connect the provided USB-C cable to the charging port on the TaiYanG Wireless Charging Pad.
2. Connect the other end of the USB-C cable to a compatible power adapter (not included). For optimal fast charging, an 18W or higher wall plug is recommended.
3. Plug the power adapter into a wall outlet. The RGB light bar will briefly illuminate to indicate power is connected.
4. Place the charging pad on a flat, stable surface.



Image: A visual representation of connecting the wireless charging pad to a wall adapter for power.

5. OPERATION

5.1 Charging Your Device

1. Ensure your device is Qi-enabled for wireless charging.
2. Place your compatible device (smartphone, earbuds, etc.) directly onto the center of the charging pad.
3. The RGB light bar will illuminate to indicate that charging has begun.
4. For optimal charging, ensure the device is properly aligned with the charging coils inside the pad.

PUT IT DOWN & POWER IT UP



Image: A hand placing a smartphone onto the wireless charging pad, which glows with an RGB light.

5.2 RGB Light Indicators

- **Standby:** The light bar turns off after 5 seconds when no device is charging.
- **Charging:** The light bar illuminates and cycles through colors for 20 seconds, then turns off to avoid disturbing sleep.
- **Foreign Object Detection (FOD):** If a metal object is detected, the red light bar will flash. Remove the object immediately.



Image: A person placing a smartphone on the charging pad, which is illuminated with a green light, indicating charging.

5.3 Compatibility

The TaiYanG WXC13-15W Wireless Charging Pad is compatible with all Qi-enabled phones and devices. This includes, but is not limited to:

- iPhone 13/13 Pro/Max/mini, 12/12 Pro/Max/mini, XR/XS/XS Max/X/8/8 Plus, 11/11 Pro/Max/SE
- Samsung Galaxy S21/S20/S10/S9/S8/S7/S6 series, Note 20/10/9/8/7/6 series
- Google Pixel Phone Series, Nokia Lumia Phone Series, LG Phone Series, Sony Phone Series
- All TWS Qi-Headsets, Galaxy Buds, AirPods Pro/Airpods 3/2

Note:

- Mobile phones and other electronic devices must have wireless charging functionality.
- The iPhone 6 series, iPhone 7 series, and Samsung A series do not support wireless charging.



Image: A chart illustrating the wide compatibility of the wireless charging pad with various smartphone brands and wireless earbuds.

6. MAINTENANCE

- Clean the charging pad with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the device in a cool, dry place when not in use.

- Avoid dropping or subjecting the device to strong impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging	Device not Qi-enabled Improper placement Foreign object detected Incompatible power adapter Device case too thick or contains metal	Verify device supports wireless charging Re-position device on the center of the pad Remove any metal objects, credit cards, or magnetic cases Use an 18W or higher power adapter Remove thick or metallic cases
RGB light flashing red	Foreign object detected	Remove any metal objects from the charging pad.
Slow charging	Low power input Improper device alignment	Use an 18W or higher power adapter Ensure device is centered on the pad

8. SPECIFICATIONS

Feature	Detail
Model Number	WXC13-15W
Item Weight	2.19 ounces
Package Dimensions	4.25 x 4.21 x 1.06 inches
Connector Type	USB Type C and USB Type A
Compatible Devices	All wireless-charging-enabled phones and devices
Included Components	USB C cable
Special Feature	RGB light, Wireless Charging
Color	White
Input Voltage	9 Volts (DC)
Amperage	1 Amps
Total USB Ports	1

9. PRODUCT VIDEO

Your browser does not support the video tag.

Video: This video demonstrates the features of the TaiYanG RGB Wireless Charging Pad, including its compatibility with various devices, safety features, and light indicators for standby and charging status. It also shows how to avoid common charging issues.

10. WARRANTY AND SUPPORT

TalYanG products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official TalYanG website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0B5ZK1GL3>

More documents and user manuals: <https://manuals.plus/>