

KONKA KZ-G518B

KONKA KZ-G518B Handheld Clothes Steamer User Manual

Model: KZ-G518B

1. INTRODUCTION

Thank you for purchasing the KONKA KZ-G518B Handheld Clothes Steamer. This device is designed for efficient wrinkle removal from various fabrics, offering both dry and wet ironing functions. Its compact and lightweight design makes it suitable for both home and travel use. Please read this manual thoroughly before operation to ensure safe and optimal performance.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed:

- Always ensure the voltage matches your power supply before plugging in.
- Do not immerse the steamer in water or other liquids.
- Keep the steamer away from children and pets.
- Do not touch the hot steam plate or steam nozzle during operation.
- Use only distilled or demineralized water to prevent mineral buildup.
- Unplug the steamer when not in use and before cleaning or filling.
- Never pull the power cord to disconnect from the outlet. Grasp the plug.
- Do not operate the steamer with a damaged cord or plug.
- Do not direct steam at people or animals.

3. PRODUCT OVERVIEW

The KONKA KZ-G518B Handheld Clothes Steamer consists of the main unit, a detachable water tank, and a brush attachment. Refer to the diagram below for component identification and dimensions.



Figure 1: Steamer components and dimensions (approx. 130mm width, 150mm height for main unit; 125mm width, 60mm height for water tank).

Components:

- **Main Steamer Unit:** Contains the heating element, steam plate, and control switch.
- **Detachable Water Tank:** 300ml capacity for continuous steaming.
- **Steam Brush Attachment:** Helps remove dust and lint while steaming.

4. SETUP

1. **Attach Water Tank:** Ensure the detachable water tank is securely attached to the main steamer unit.
2. **Fill Water Tank:** Detach the water tank and fill it with up to 300ml of distilled or demineralized water. Do not overfill. Reattach the water tank firmly.
3. **Plug In:** Insert the power plug into a suitable electrical outlet. The steamer has a 1.8-meter rubber mains lead for safety.
4. **Preheat:** The steamer will begin to heat up. The indicator light will turn green in approximately 30 seconds, indicating it is ready for use.



Figure 2: Detachable water tank and steam brush.

5. OPERATING INSTRUCTIONS

Operating Modes:

- **Dry Ironing:** Push the switch button up for dry ironing only. This function helps to dry damp clothes and can be used for light wrinkle removal without steam.
- **Wet Ironing (Steaming):** Push the switch button down to use both dry and wet ironing simultaneously. This mode generates steam for effective wrinkle removal.



Figure 3: Dry and Wet Ironing Switch.

Steaming Process:

1. Hang the garment on a hanger or lay it flat on a heat-resistant surface.
2. Pull the garment tight with one hand to create a flat surface.
3. Gently press the steamer against the garment, moving it in an up and down motion.
4. For stubborn wrinkles, use the steam brush attachment.

**1500W power, 300ml detachable water tank,
continuous ironing up to 18 minutes.**



Figure 4: Steaming a garment vertically.

Versatile Use:

The steamer can be used both vertically for hanging garments and horizontally for items on a flat surface, without any water leakage. It is suitable for various fabrics and items, including:

- Shirts, Suits, Gowns
- Silk, Underwear, Undies
- Curtains, Sofa Covers
- Soft Toys



Figure 5: Applicable fabrics and items.

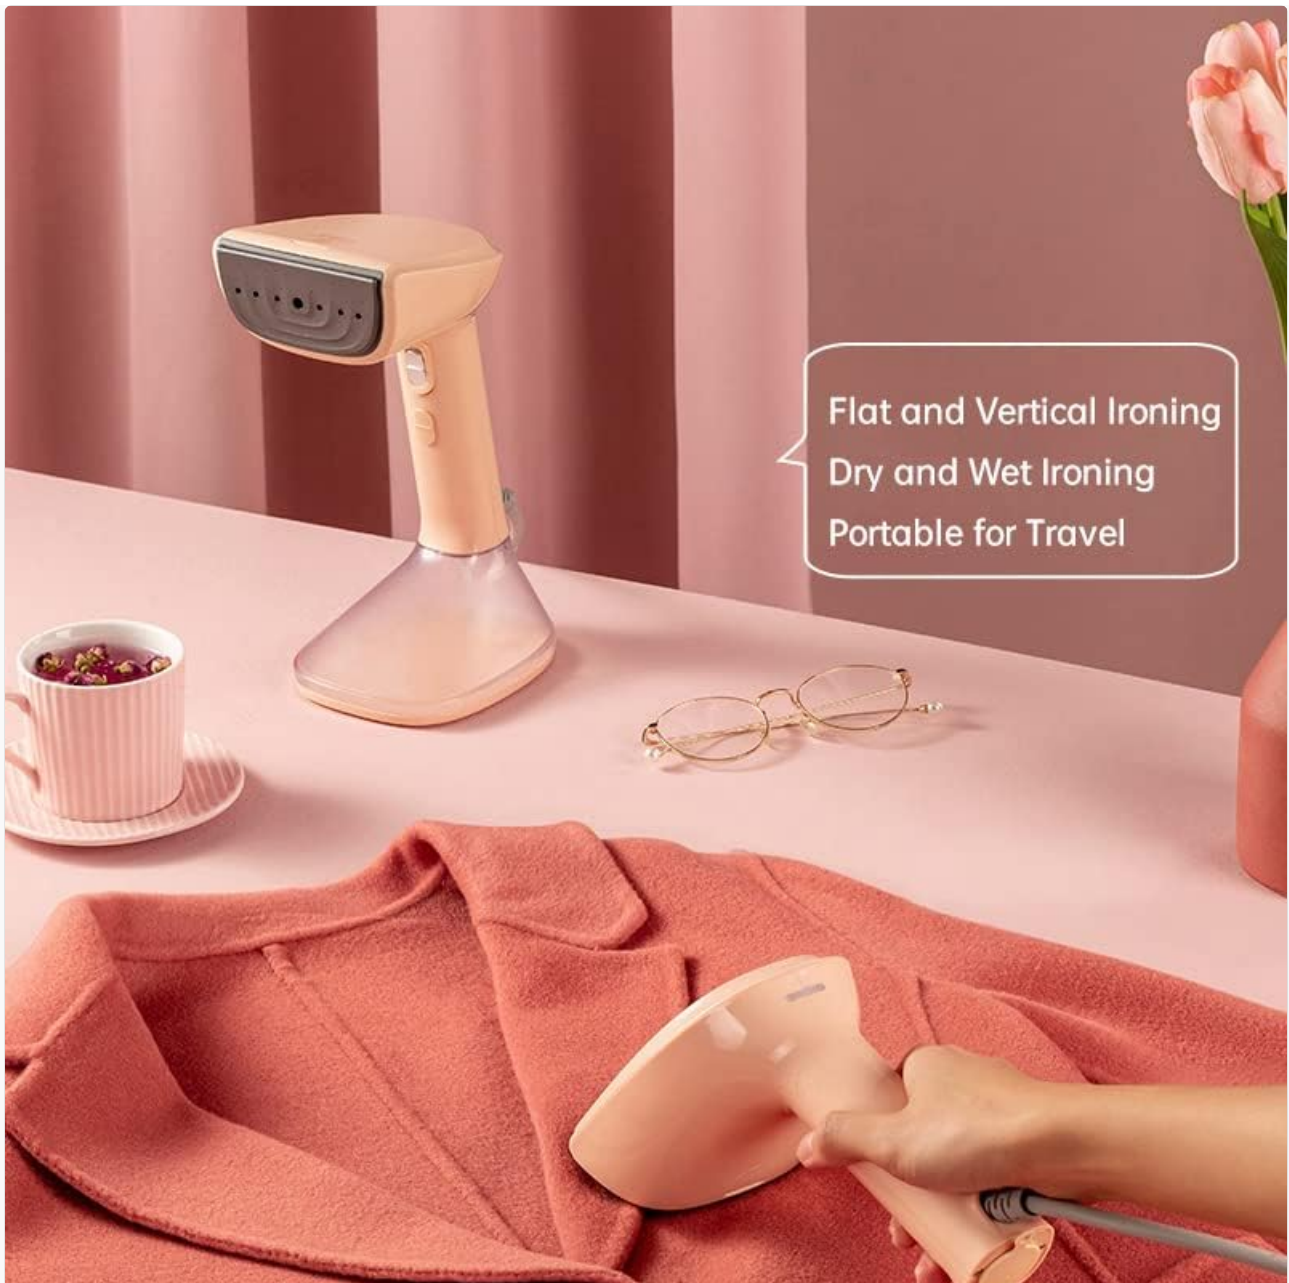


Figure 6: Flat and Vertical Ironing.



Figure 7: Portable design for travel.

6. MAINTENANCE

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Detach the water tank and

empty any remaining water.

- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling:** If you notice reduced steam output or mineral residue, descale the steamer. Fill the water tank with a mixture of 50% white vinegar and 50% water. Run the steamer until half the solution is used, then unplug and let it sit for 30 minutes. Repeat the process with clean water to rinse.
- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank empty; Steamer not heated; Mineral buildup.	Fill water tank; Wait for indicator light to turn green; Perform descaling.
Water leakage	Water tank not securely attached; Overfilled water tank.	Ensure water tank is firmly attached; Do not exceed max fill line.
Steamer not heating	Not plugged in; Power outlet issue.	Check power connection; Try a different outlet.
Ineffective wrinkle removal	Garment not pulled taut; Incorrect steaming technique.	Ensure garment is stretched; Move steamer slowly and evenly.

8. SPECIFICATIONS

- **Brand:** KONKA
- **Model:** KZ-G518B
- **Power:** 1500 Watts
- **Voltage:** 230 Volts
- **Water Tank Capacity:** 300 Milliliters
- **Item Weight:** 0.8 Kilograms
- **Mains Lead Length:** 1.8 Meters
- **Panel Material:** Whole Die-casting Aluminum
- **Heat-up Time:** Approximately 30 seconds
- **Continuous Usage:** Up to 18 minutes (with full water tank)

9. WARRANTY AND SUPPORT

This KONKA KZ-G518B Handheld Clothes Steamer comes with a**1-Year Warranty** from the date of purchase. If you encounter any issues or require support, please contact us via Amazon message. We are committed to responding to all inquiries within 24 hours.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question