

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [iDance](#) /

› [iDance GO PARTY 1 Bluetooth Speaker User Manual](#)

iDance GOPTY1

iDance GO PARTY 1 Bluetooth Speaker User Manual

Model: GOPTY1

INTRODUCTION

Thank you for purchasing the iDance GO PARTY 1 Bluetooth Speaker. This manual provides detailed instructions for the safe and efficient use of your speaker. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to water or moisture. This product is not waterproof.
- Avoid placing the speaker near heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that the following items are included in your package:

- iDance GO PARTY 1 Bluetooth Speaker
- Power Cable (for charging)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your iDance GO PARTY 1 speaker.



Figure 1: Front view of the iDance GO PARTY 1 speaker, showing the main speaker grille, iDance logo, and control panel at the top.



Figure 2: Close-up of the top control panel, featuring buttons for Previous/Volume Down, Play/Pause/Sharing, Next/Volume Up, and Mode/LED On/Off.

Control Panel Functions:

- **/ V- (Previous / Volume Down):** Short press for previous track. Long press to decrease volume.
- **(Play / Pause / Sharing):** Short press to play or pause music. Long press for sharing function (specific functionality may vary).
- **/ V+ (Next / Volume Up):** Short press for next track. Long press to increase volume.
- **MODE / LED ON/OFF:** Short press to cycle through input modes (e.g., Bluetooth, USB, AUX). Long press to turn the LED lights on or off. This button also functions as the main power on/off.

SETUP

1. Charging the Speaker

1. Locate the charging port on the speaker.
2. Connect the provided power cable to the speaker's charging port and a suitable power source.
3. Allow the speaker to charge fully before first use. The charging indicator (if present) will typically change color or turn off when charging is complete.

2. Powering On/Off

- **To Power On:** Long press the **MODE / LED ON/OFF** button until the speaker powers on and the LED lights activate.
- **To Power Off:** Long press the **MODE / LED ON/OFF** button again until the speaker powers off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, short press the **MODE** button until you hear a Bluetooth pairing prompt or see a flashing Bluetooth indicator.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices. You should see "GO PARTY 1" or a similar name in the list.
4. Select "GO PARTY 1" to connect. Once paired, you will hear a confirmation sound, and the Bluetooth indicator will typically become solid.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

2. Music Playback

- **Play/Pause:** Short press the button.
- **Next Track:** Short press the **/ V+** button.
- **Previous Track:** Short press the **/ V-** button.
- **Volume Up:** Long press the **/ V+** button.
- **Volume Down:** Long press the **/ V-** button.

3. LED Light Control

- To turn the LED lights on or off, long press the **MODE / LED ON/OFF** button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in active use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source and charge it fully.
Cannot pair via Bluetooth.	Bluetooth is not enabled on the speaker or device. Speaker is already paired to another device. Device is too far from the speaker.	Ensure Bluetooth is active on both devices. Disconnect from other devices. Move your device closer to the speaker (within 10 meters). Try restarting both devices.
No sound.	Volume is too low. Speaker is paused. Incorrect input mode.	Increase volume on both the speaker and your connected device. Press the Play/Pause button. Press the MODE button to select the correct input.
LED lights are off.	LED function is turned off.	Long press the MODE / LED ON/OFF button to activate the LED lights.

SPECIFICATIONS

Feature	Specification
Model Name	Go Party 1
Item Model Number	GOPTY1
Brand	iDance
Speaker Type	Bluetooth
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Maximum Speaker Output Power	3 Watts
Power Source	Electric Cable
Control Method	Voice (and Physical Buttons)
Compatible Devices	Laptop, Smartphone
Included Components	Speaker
Product Dimensions (D x W x H)	16 x 18 x 16 cm
Item Weight	830 grams
Color	Multicolor

Feature	Specification
Is Waterproof	No
Mounting Type	Tabletop Mount
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact iDance customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, visit the official iDance website or contact their support channels.

© 2023 iDance. All rights reserved.