

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo SYM-1373 Soup Maker Instruction Manual

Daewoo SYM-1373

Daewoo SYM-1373 Soup Maker Instruction Manual

Model: SYM-1373

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Daewoo SYM-1373 Soup Maker. Keep this manual for future reference.

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the main unit (with electrical components) in water or any other liquid.
- Keep hands and utensils out of the jug during operation to prevent injury and damage to the appliance.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Ensure the lid is securely in place before starting any program.
- Use caution when handling hot liquids and steam.
- Keep out of reach of children.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Daewoo SYM-1373 Soup Maker.

DAEWOO



Image 1: Top view of the Daewoo SYM-1373 Soup Maker showing the control panel with LED display and program buttons (Smooth, Chunky, Compote, Juice, Re-heat, Blend, Mode, Start/Stop).



Image 2: Interior view of the stainless steel jug with 'MAX 1000ml' and 'MIN 800ml' markings, and a handle for easy pouring.

- **Main Unit with Control Panel:** Houses the motor, heating element, and LED display with program buttons.
- **Stainless Steel Jug:** The primary container for ingredients, with capacity markings.
- **Lid:** Secures on top of the jug during operation.
- **Power Cord:** For connecting the appliance to an electrical outlet.

3. SETUP

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
2. **Initial Cleaning:** Before first use, clean the jug and lid with warm soapy water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are thoroughly dry before assembly.
3. **Placement:** Place the soup maker on a stable, flat, heat-resistant surface, away from the edge of the countertop and out of reach of children. Ensure there is adequate ventilation around the appliance.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The LED display will illuminate.

4. OPERATING INSTRUCTIONS

The Daewoo SYM-1373 offers 3 main programs and additional functions for versatile use.

1. **Add Ingredients:** Place your desired ingredients into the stainless steel jug. Ensure the liquid level is between the 'MIN 800ml' and 'MAX 1000ml' markings. Do not overfill.
2. **Secure the Lid:** Place the lid firmly onto the jug.
3. **Select Program:** Press the 'MODE' button repeatedly to cycle through the available programs. The selected program will be indicated on the LED display. Available programs include:
 - **Smooth:** For creamy soups and purees.
 - **Chunky:** For soups with larger pieces of ingredients.
 - **Compote:** For fruit compotes.
 - **Juice:** For blending juices.
 - **Re-heat:** To warm up pre-cooked soups.
 - **Blend:** For manual blending without heating.
4. **Start Operation:** Once the desired program is selected, press the 'START/STOP' button. The appliance will begin its cycle, and the LED display will show the remaining time.
5. **Completion:** The soup maker will beep when the program is complete. Carefully remove the lid, using caution as steam will be released.
6. **Serving:** Pour the contents into a serving bowl.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your soup maker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean the Jug:** The stainless steel jug is dishwasher safe. Alternatively, you can clean it by hand with warm soapy water and a non-abrasive sponge. Rinse thoroughly.
3. **Clean the Lid:** Wash the lid with warm soapy water and rinse well.
4. **Clean the Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
5. **Drying:** Ensure all parts are completely dry before storing or next use.

6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

- **Appliance does not turn on:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the lid is correctly placed on the jug.

- **Program does not start:**

- Verify that the liquid level is between the MIN and MAX markings.
- Ensure the lid is properly closed.

- **Food is not blended smoothly:**

- Ensure you have selected the 'Smooth' program.
- For tougher ingredients, you may need to cut them into smaller pieces before adding.
- Use the 'Blend' function for additional blending if needed after a program finishes.

- **Burning smell:**

- Immediately unplug the appliance.
- Check for any food residue stuck to the heating element or blades. Clean thoroughly once cooled.
- If the smell persists after cleaning, discontinue use and contact customer support.

7. SPECIFICATIONS

Model Number	SYM-1373
Brand	Daewoo
Capacity	1 Liter
Programs	3 main programs (Smooth, Chunky, Compote) plus Juice, Re-heat, Blend functions
Control Type	LED Control
Dishwasher Safe	Jug and Lid (main unit is not)
Dimensions (Package)	31 x 21.5 x 21.5 cm
Item Weight	1.2 Kilograms

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Daewoo customer service. Spare parts availability information is not provided at this time.

For further assistance, please visit the official Daewoo website or contact your retailer.

© 2023 Daewoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B61PBCPQ>

More documents and user manuals: **<https://manuals.plus/>**