

WE WEREVVOYAGE

WE WEREVVOYAGE Digital Alarm Clock User Manual

Model: WEREVVOYAGE

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your WE WEREVVOYAGE Digital Alarm Clock. Please read this manual thoroughly before using the device to ensure proper function and longevity.

PRODUCT OVERVIEW

The WE WEREVVOYAGE Digital Alarm Clock is a battery-operated device featuring a backlit LCD display that shows time and indoor temperature. It includes an alarm function with snooze capability, designed for convenience and portability.



Image 1: The WE WEREVVOYAGE Digital Alarm Clock shown in its retail packaging. The clock features a white oval design with a large digital display showing time and temperature. The packaging highlights features like "RÉVEIL DE VOYAGE" (Travel Alarm), "Grand affichage" (Large display), "Température intérieure" (Indoor temperature), "Fonction Snooze" (Snooze function), and "Écran LCD" (LCD screen).

PACKAGE CONTENTS

- WE WEREVVOYAGE Digital Alarm Clock
- User Manual (this document)
- *Note: Batteries are not included and must be purchased separately.*

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Slide or unclip the cover to open it.
3. Insert the required batteries (e.g., 2 x AAA) according to the polarity indicators (+ and -) inside the compartment.
4. Replace the battery compartment cover securely.

2. Initial Power On

Once batteries are installed, the display should illuminate, and the clock will typically default to a standard time (e.g., 12:00 AM).

OPERATING INSTRUCTIONS

1. Setting the Time

- Press the **MODE** button to cycle through display modes until the time setting mode is active (often indicated by flashing digits).
- Use the **UP** and **DOWN** buttons (or similar labeled buttons) to adjust the hours and minutes.
- Press **MODE** again to confirm the setting and move to the next parameter (e.g., 12/24-hour format).
- Press **SET** or wait for a few seconds for the settings to be saved.

2. Setting the Alarm

- Press the **ALARM** button to enter alarm setting mode.
- Use the **UP** and **DOWN** buttons to set the desired alarm time.
- Press **ALARM** again to confirm.
- To activate/deactivate the alarm, locate the **ALARM ON/OFF** switch or button. An alarm icon will typically appear on the display when active.

3. Snooze Function

When the alarm sounds, press the **SNOOZE** button (often a large button on top of the clock) to temporarily silence the alarm. The alarm will sound again after a preset interval (e.g., 5-10 minutes).

4. Temperature Display

The clock automatically displays the indoor temperature. No specific setting is usually required for this feature. Ensure the clock is placed in a location with adequate air circulation for accurate readings.

5. Backlight

The display features a backlight for improved visibility in low-light conditions. This may be activated by pressing a dedicated **LIGHT** button or by pressing the **SNOOZE** button. The backlight typically illuminates for a few seconds before turning off to conserve battery life.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display dims or functions become erratic. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries.	Replace with new batteries.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure alarm is turned ON and the time is set correctly.
Incorrect time display.	Time was not set correctly or batteries were removed.	Reset the time according to the "Setting the Time" section.

Problem	Possible Cause	Solution
Temperature reading seems inaccurate.	Clock is placed near a heat source, vent, or in direct sunlight.	Relocate the clock to an area with stable ambient temperature and good air circulation.

SPECIFICATIONS

- **Model:** WEREVVOYAGE
- **Brand:** WE
- **Display Type:** Digital LCD, Backlit
- **Functions:** Time, Alarm, Snooze, Indoor Temperature
- **Power Source:** Battery Operated (Batteries not included)
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Dimensions:** 15 cm (L) x 3.81 cm (W) x 10 cm (H)
- **Weight:** 180 grams
- **Color:** White
- **Usage:** Indoor

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty duration and terms, please refer to the product packaging or contact WE customer support. Keep your purchase receipt as proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact WE customer service. Contact information can typically be found on the product packaging or the official WE website.
Please note: This manual is for informational purposes only. Product specifications and features may be subject to change without prior notice.

© 2023 WE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question