

Precision Pro American Flag

Precision Pro NX10 Golf Rangefinder User Manual

Model: NX10 (American Flag Edition) | Brand: Precision Pro

INTRODUCTION

The Precision Pro NX10 Golf Rangefinder is designed to provide golfers with accurate distance measurements, enhancing precision and confidence on the course. Featuring advanced laser accuracy, adaptive slope measurement, 6X zoom, flag lock, and pulse vibration, the NX10 helps you master your distance with a range of over 999 yards. This manual provides essential information for setting up, operating, and maintaining your device.

SETUP

1. Battery Installation

Your NX10 Rangefinder comes with a pre-installed lithium battery. To access the battery compartment, slide the panel away from the eyepiece. Ensure the battery is correctly oriented before closing the compartment securely.

2. Personalizing Your Rangefinder

The NX10 offers customizable faceplates and side skins to reflect your personal style. These can be easily interchanged.

66 STYLES TO SWING YOUR WAY



**Interchangeable skins
and face plates keep
your look fresh.**



Image: The Precision Pro NX10 Golf Rangefinder showcasing its customizable skins, allowing users to personalize their device.

Your browser does not support the video tag.

Video: This video demonstrates the process of changing the faceplate on the NX10 rangefinder, highlighting its customizable features.

OPERATING INSTRUCTIONS

1. Powering On and Adjusting Eyepiece

To power on the device, look through the eyepiece and press the power button. An aiming circle will appear. Rotate the dial on the adjustable eyepiece left or right until the display appears sharply focused for your vision.

2. Taking Measurements

Point the aiming circle at your target (e.g., the flagstick) and press and release the power button to shoot your target. The distance will be displayed. The NX10 features Flag Lock technology with Pulse Vibration, providing a short vibration to confirm that the laser has locked onto the flag, not background objects.



Image: The internal display of the Precision Pro NX10 Rangefinder, showing clear distance readings and slope adjustment.

3. Adaptive Slope Technology

The NX10 includes adaptive slope technology that calculates the adjusted distance based on elevation changes. To activate or deactivate the slope feature, slide the slope indicator switch located on the top of the rangefinder. Slope is active when the green indicator is visible.

4. Switching Between Yards and Meters

To switch between yards (Y) and meters (M), ensure the display screen is off. Press and hold the power button for 5 seconds. The unit will toggle between the two measurement units.

Your browser does not support the video tag.

Video: A quick start guide tutorial for the NX10, covering basic operation, including power, measurement, and mode switching.

MAINTENANCE

1. Battery Replacement

When the battery indicator on the display shows low power, it's time to replace the battery. Slide open the battery compartment, remove the old battery, and insert a new CR2 lithium battery, ensuring correct polarity. Close the compartment securely.

2. Cleaning

Use the provided lens cleaning cloth to gently wipe the lenses and exterior of the rangefinder. Avoid using abrasive materials or harsh chemicals that could damage the optics or casing.

3. Water Resistance

The NX10 is water resistant, allowing for use in light rain. However, it is not designed for submersion. Always ensure the battery compartment is properly sealed to maintain water resistance.

TROUBLESHOOTING

If your Precision Pro NX10 is not functioning as expected, consider the following:

- **No Display/Power:** Ensure the battery is fully charged and correctly inserted.
- **Inaccurate Readings:** Make sure the front of the rangefinder is unobstructed. A finger or side of the palm can interfere with the laser. Use both hands to stabilize the device for steady aiming.
- **Difficulty Focusing:** Adjust the eyepiece dial until the display is clear and sharp.
- **Measurement Unit Issue:** If the unit is not displaying yards or meters correctly, refer to the "Switching Between Yards and Meters" section in Operating Instructions.

For persistent issues not resolved by these steps, please contact Precision Pro customer support.

SPECIFICATIONS

Feature	Detail
Brand	Precision Pro
Model Name	American Flag (NX10)
Magnification	6X
Max Range	999+ Yards
Water Resistance Level	Water Resistant
Battery Type	Lithium (CR2)
Item Weight	14 Ounces
Product Dimensions	4.8"L x 1.8"W x 3.2"H
Material	Plastic

WARRANTY & SUPPORT

Warranty Information

The Precision Pro NX10 Golf Rangefinder comes with a **3-Year Warranty**. Please retain your proof of purchase for warranty claims.

Additional Support

For a comprehensive user manual in PDF format, please refer to the official document: [User Manual \(PDF\)](#).

For further assistance or technical support, please visit the official Precision Pro website or contact their customer service department.

Documents - Precision Pro – American Flag

no relevant documents