

## Transformers F6736

# Transformers EarthSpark Deluxe Class Shockwave Action Figure User Manual

Brand: Transformers | Model: F6736

## INTRODUCTION

---

The Transformers EarthSpark Deluxe Class Shockwave Action Figure brings the iconic character from the animated series to life. This figure is designed for fans aged 6 and up, offering both robot and Cybertronian tank modes. It also includes a build-a-figure piece to collect and assemble Dr. Meridian "Mandroid".

## WHAT'S IN THE BOX

---

- Shockwave figure
- Accessory (arm cannon)
- Build-a-figure piece
- Instructions (this manual)

## FIGURE OVERVIEW (ROBOT MODE)

---

Familiarize yourself with the Shockwave figure in its robot mode. Note the articulation points and detachable accessories.



Image: Transformers EarthSpark Deluxe Class Shockwave in robot mode, displayed with its packaging and the included build-a-figure piece.

### Articulation Points:

- Head: Rotates.
- Shoulders: Full 360-degree rotation.
- Elbows: Bendable joints.
- Wrists/Hands: Rotates and pivots.
- Waist: Rotates.
- Hips: Ball joints for movement.
- Knees: Bendable joints.
- Ankles/Feet: Pivots for stability.

### Accessories:

- Arm Cannon: Detachable and can be reattached.
- Build-a-Figure Piece: Collect all Deluxe Class figures to complete Dr. Meridian "Mandroid".

## TRANSFORMATION: ROBOT MODE TO CYBERTRONIAN TANK MODE (20 STEPS)

---

Follow these steps to convert your Shockwave figure from robot mode to its Cybertronian tank mode.

1. Remove the arm cannon accessory.
2. Fold the robot's hands into the forearms.
3. Rotate the waist 180 degrees.
4. Fold the chest panel upwards.
5. Rotate the head 180 degrees and tuck it into the chest cavity.
6. Position the arms to align with the side panels of the tank mode.
7. Extend the legs and fold the feet inwards.
8. Bend the knees to form the tank's rear treads.
9. Connect the arm cannon to the designated port on the tank's top.
10. Adjust the side panels and leg sections to form the complete tank chassis.
11. Ensure all panels are securely tabbed into place.



Image: Transformers EarthSpark Deluxe Class Shockwave in its Cybertronian tank mode, ready for action.

## TRANSFORMATION: CYBERTRONIAN TANK MODE TO ROBOT MODE

---

To convert Shockwave back to robot mode, reverse the steps above.

1. Detach the arm cannon.
2. Separate the tank chassis panels and unfold the leg sections.
3. Straighten the knees and unfold the feet.
4. Unfold the arms from the side panels.
5. Rotate the head forward and fold down the chest panel.
6. Rotate the waist 180 degrees to face forward.
7. Unfold the hands from the forearms.

8. Reattach the arm cannon to the robot's arm.
9. Adjust all joints and panels to achieve the desired robot pose.

## SPECIFICATIONS

---

<b>Product Dimensions</b>	2.5 x 5.5 x 8.88 inches
<b>Item Weight</b>	3.1 ounces
<b>Model Number</b>	F6736
<b>Manufacturer Recommended Age</b>	6 years and up
<b>Manufacturer</b>	Hasbro
<b>Release Date</b>	April 1, 2023

## SAFETY INFORMATION

---

**WARNING: Small parts may be generated. Not for children under 3 years.**

Always supervise young children during play to prevent choking hazards. Keep packaging for future reference.

## WARRANTY AND SUPPORT

---

For warranty information or product support, please visit the official Transformers website or contact Hasbro customer service. Details can often be found on the product packaging or through the brand's official channels.

Visit the official Transformers Store: [Transformers Store](#)