

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Paw Patrol Kids LCD Watch and Flashlight Set Instruction Manual

Accutime PAW40070AZ

Accutime Paw Patrol Kids LCD Watch and Flashlight Set Instruction Manual

Model: PAW40070AZ

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Accutime Paw Patrol Kids LCD Watch and Flashlight Set. This set includes a digital LCD watch featuring Paw Patrol characters and a compact carabiner flashlight. Please read this manual thoroughly to ensure proper use and longevity of your product.



Image 1: The Paw Patrol Kids LCD Watch and accompanying red carabiner flashlight.

PACKAGE CONTENTS

- 1 x Paw Patrol Kids LCD Watch
- 1 x Red Carabiner Flashlight
- Batteries (pre-installed in both devices)



Image 2: The Paw Patrol Kids LCD Watch and Flashlight Set as packaged for retail.

SETUP

Watch Setup: Setting the Time

1. The watch features three buttons on the side. For initial time setting, it may be necessary to access the internal mechanism.
2. Carefully remove the back cover of the watch using a small screwdriver.
3. Gently remove the watch mechanism from its casing.
4. Locate the third button, which may only be accessible once the mechanism is out of the casing.
5. Press the appropriate button (usually the middle or right button) repeatedly to cycle through the time settings (hours, minutes).
6. Once the desired time is set, carefully reinsert the mechanism into the casing and secure the back cover.

The watch is designed with an adjustable strap to fit wrist sizes from 5.5 inches to 8 inches. Adjust the buckle for a comfortable and secure fit.



Image 3: Side view of the watch, illustrating the button placement for operation and time setting.

Flashlight Setup: Initial Use

The carabiner flashlight comes with pre-installed batteries. To activate, twist the head of the flashlight clockwise until the light illuminates. To turn off, twist counter-clockwise until the light extinguishes.

OPERATING INSTRUCTIONS

Using the LCD Watch

- **Display Time:** The digital display shows the current time.
- **Activate Flashing Light:** Press the button located on the side of the watch (typically the top right button) to activate the built-in flashing light feature. Press again to turn off.



Image 4: The Paw Patrol LCD Watch displaying the time, with its full strap design.

Using the Carabiner Flashlight

- **Turn On/Off:** Twist the head of the flashlight clockwise to turn it on, and counter-clockwise to turn it off.
- **Attachment:** Use the integrated carabiner clip to attach the flashlight to backpacks, belt loops, or other items for easy access.

MAINTENANCE

Cleaning

Wipe both the watch and flashlight with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish or electronic components. The watch is not waterproof; avoid submerging it in water.

Battery Replacement

Both devices use small button cell batteries. When the display or light dims, it is time to replace the batteries. This process typically requires a small screwdriver to open the battery compartment. Ensure correct polarity when inserting new batteries. Dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or dead battery.	Replace the watch battery.
Watch light is not flashing.	Low or dead battery; button not pressed correctly.	Replace the watch battery; ensure the light activation button is fully pressed.
Flashlight is not turning on.	Low or dead battery; flashlight head not twisted securely.	Replace the flashlight battery; twist the flashlight head firmly clockwise.
Time is incorrect after setting.	Buttons were not pressed correctly during setting.	Repeat the time setting procedure carefully.

SPECIFICATIONS

- Model Number:** PAW40070AZ
- Brand:** Accutime
- Watch Type:** Digital LCD
- Strap Material:** Adjustable, fits wrists 5.5" to 8"
- Features:** Time display, built-in flashing light (watch), carabiner clip (flashlight)
- Power Source:** Button cell batteries (included)
- Package Dimensions:** 4.49 x 4.33 x 2.4 inches
- Item Weight:** 3.25 ounces
- Manufacturer:** Accutime Watch Corp.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Accutime Watch Corp. directly. Refer to the product packaging or the manufacturer's official website for current contact details. Please retain your proof of purchase for any warranty claims.



Image 5: Back of the product packaging, showing manufacturer information and warnings.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B623VXQM>

More documents and user manuals: **<https://manuals.plus/>**