

[manuals.plus](#) /› [Accutime](#) /› [Accutime Kids SEGA Sonic The Hedgehog Digital LCD Quartz Wrist Watch with Flashlight User Manual \(Model: SNC4248MAZ\)](#)

## Accutime SNC4248MAZ

### Accutime Kids SEGA Sonic The Hedgehog Digital LCD Quartz Wrist Watch with Flashlight User Manual

Model: SNC4248MAZ

#### 1. PRODUCT OVERVIEW

This manual provides instructions for the Accutime Kids SEGA Sonic The Hedgehog Digital LCD Quartz Wrist Watch, model SNC4248MAZ. This watch features a digital LCD display, Quartz movement, and an integrated flashlight. It is designed for children aged 3 years and older.





*Image Description: A full view of the Accutime Kids Sonic The Hedgehog digital watch. The watch features a black strap and an orange bezel around the digital display, which shows Sonic the Hedgehog and the time 12:45. A small orange button on the left side activates the flashlight.*

## 2. WATCH COMPONENTS

---

- **Digital LCD Display:** Shows time in a clear, easy-to-read format.
- **Time Setting Buttons:** Located on the side of the watch case for adjusting time.
- **Flashlight Button:** Activates the integrated flashlight feature.
- **Adjustable Strap:** Durable black plastic strap with an orange buckle for a secure fit.



*Image Description: A side view of the Accutime Kids Sonic The Hedgehog digital watch, highlighting the watch's profile and the black strap with an orange buckle.*

### **3. SETUP**

#### **3.1 Initial Battery Activation**

The watch comes with a pre-installed 9V battery. If the display is not active upon receipt, ensure any battery tab protectors are removed from the battery compartment. This typically involves pulling a small plastic tab extending from the side or back of the watch.

#### **3.2 Setting the Time**

1. Locate the time setting button(s) on the side of the watch. Digital watches typically have one or two buttons for setting.
2. Press the 'Mode' button (often labeled 'M' or a single button press) repeatedly until the hour digits begin to flash.
3. Use the 'Set' button (often labeled 'S' or the second button) to adjust the hour. Pressing it repeatedly will advance the hour.
4. Press the 'Mode' button again to move to the minute digits, which will then flash.
5. Use the 'Set' button to adjust the minutes.

6. Continue pressing the 'Mode' button to cycle through any other available settings (e.g., date, if applicable) and then to exit the setting mode. The display will stop flashing, indicating the time is set.

*Note: Specific button functions and labels may vary slightly. Refer to the watch's physical buttons for exact identification.*

## 4. OPERATING INSTRUCTIONS

### 4.1 Viewing the Time

The current time is continuously displayed on the digital LCD screen. No action is required to view the time once it is set.

### 4.2 Using the Flashlight

To activate the integrated flashlight, press and hold the dedicated flashlight button, typically located on the left side of the watch case. Release the button to turn off the flashlight.



*Image Description: The Accutime Kids Sonic The Hedgehog digital watch displayed in its retail packaging. The packaging highlights features like 'Flash-Light LCD Watch' and clearly indicates the button to 'Press for Flashlight' and 'Press for Flashing Lights'.*

## 5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch with a soft, dry cloth to remove dust and smudges. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the watch's finish or display.
- **Water Resistance:** This watch is **not water resistant**. It is crucial to avoid exposure to water, including showering, swimming, submersion, or heavy rain, as this will cause damage not covered by warranty.
- **Battery Replacement:** When the display dims, becomes erratic, or stops functioning, the 9V battery may need replacement. Battery replacement should be performed by an adult. Use a small screwdriver to open the battery compartment on the back of the watch, replace with a new 9V battery, and securely close the compartment.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity to prolong its lifespan.



*Image Description: The back view of the Accutime Kids Sonic The Hedgehog digital watch as seen through its retail packaging. The back of the watch case displays regulatory information and the model number.*

## 6. TROUBLESHOOTING

### 6.1 Watch Display is Blank or Dim

- Ensure any battery tab protectors have been fully removed.

- The battery may be depleted and require replacement. Refer to section 5. Maintenance and Care for battery replacement instructions.

## 6.2 Incorrect Time Display

- Re-set the time following the instructions in section 3.2 Setting the Time.

## 6.3 Flashlight Not Working

- Ensure the flashlight button is being pressed firmly and held down.
- The battery may be low and require replacement, as the flashlight function consumes more power.

If issues persist after attempting these troubleshooting steps, please contact customer support for further assistance.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	SNC4248MAZ
Watch Movement Type	Quartz
Display Type	Digital LCD
Case Diameter	30 Millimetres
Case Thickness	10 Millimetres
Band Material Type	Plastic
Band Color	Black
Item Weight	105 g (0.11 Kilograms)
Batteries	1 x 9V battery (included)
Manufacturer	Accutime Watch Corp.
Water Resistance	Not water resistant
Minimum Age	3+ years

*Note: Specifications are subject to change without notice.*

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This Accutime watch comes with a **One Year Warranty** from Accutime Watch. This warranty covers manufacturing defects from the date of purchase. Please retain your proof of purchase (receipt or order confirmation) for any warranty claims.

### 8.2 Customer Support

For support, warranty inquiries, or further assistance, please contact Accutime Watch Corp. customer service. Contact details can typically be found on the product packaging or the official Accutime website.

© 2025 Accutime Watch Corp. All rights reserved.